

MAP DISC CANNOT BE INSERTED

WIRING DIAGRAM

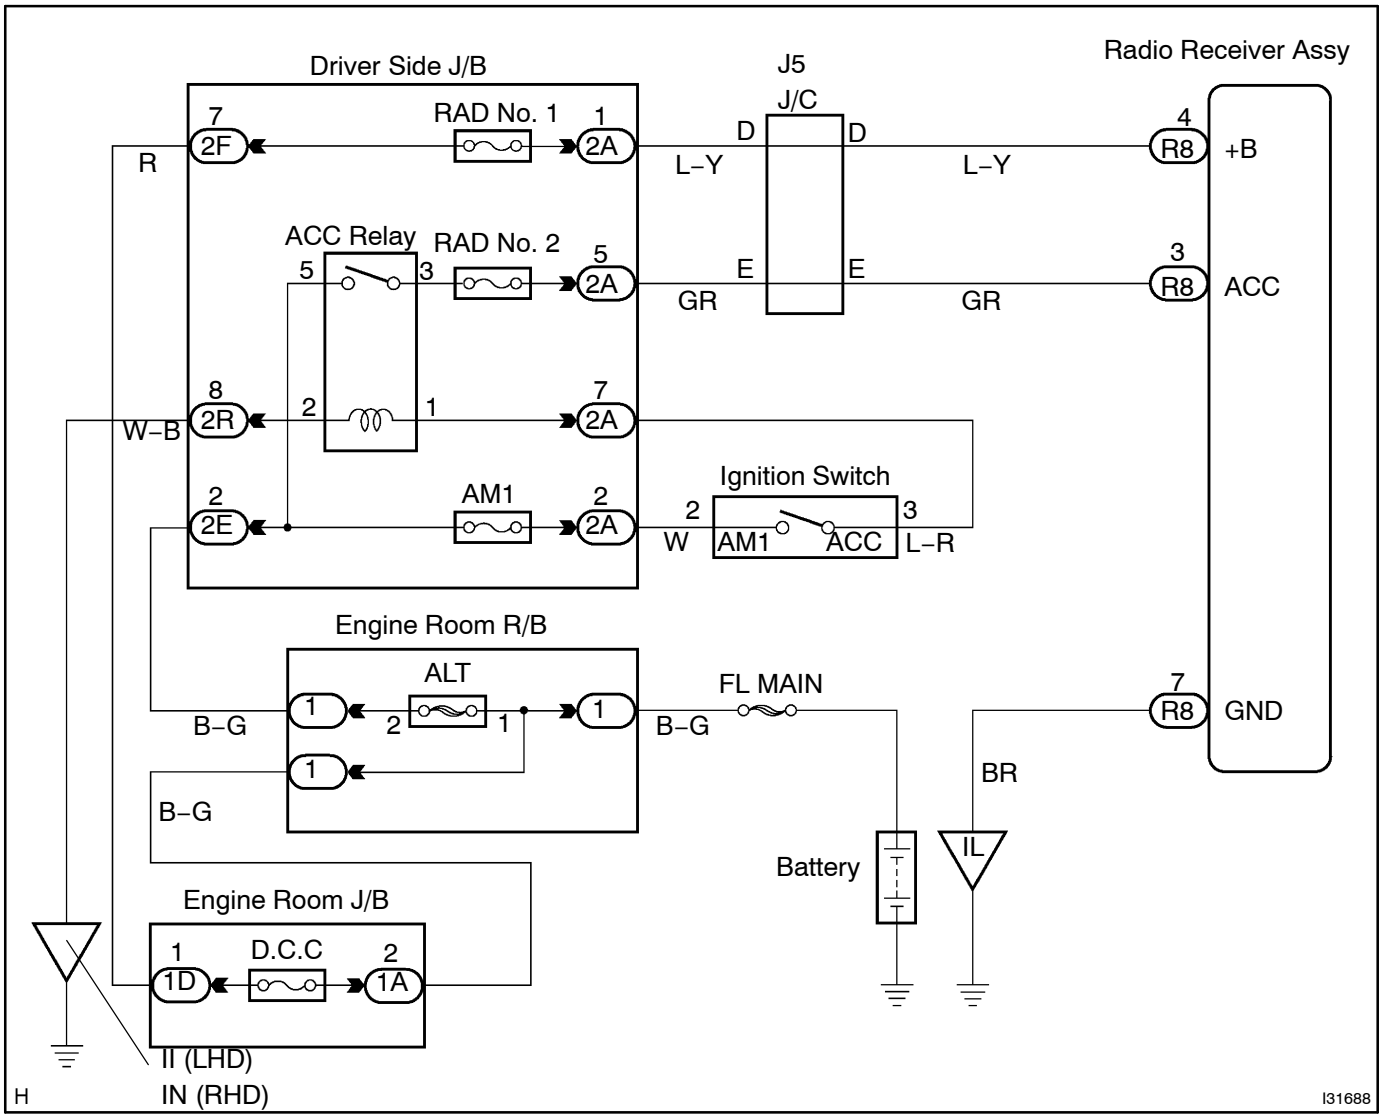

INSPECTION PROCEDURE

1	INSPECT NAVIGATION ECU(+B, ACC, GND)

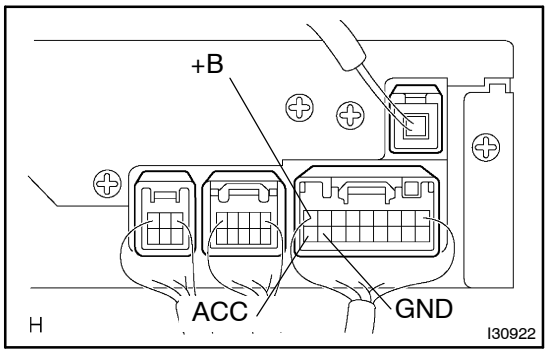

(a) Remove the navigation ECU with connectors with still connected.

(b) Check voltage.

(1) Measure voltage between terminals +B, ACC and GND of navigation ECU at each conditions, as shown in the chart.

Standard:

Terminal	Condition	Voltage (v)
+B ⇔ GND	Constant	10 – 14 V
ACC ⇔ GND	Turn ignition switch ACC	10 – 14 V

(c) Check continuity.

(1) Check that the continuity exists between terminal GND of navigation ECU and body ground.

Standard: Continuity exists.

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

CHECK AND REPLACE NAVIGATION ECU