# KEY REMINDER BUZZER DOES NOT SOUND

## INSPECTION PROCEDURE


| 1 | CHECK BUZZER |
|---|---|

(a) Check that key reminder warning buzzer sound.

NG → CHECK AND REPLACE COMBINATION METER ASSY

OK

| 2 | CHECK COMBINATION METER ASSY |
|---|---|

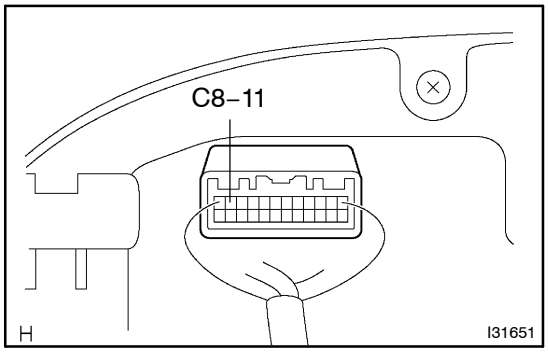


(a) Check voltage.
  (1) Remove the combination meter assy with connectors still connected.
  (2) Measure the voltage between terminal C8–11 of combination meter and body ground.

**Standard voltage:**

| Condition | Voltage (V) |
|---|---|
| Insert the key to key cylinder, ignition switch is at ON position and driver door open | 10 – 14 |
| Insert the key to key cylinder, ignition switch is at OFF position and driver door open | Below 1 |

OK → REPLACE COMBINATION METER ASSY

NG

| 3 | INSPECT FRONT DOOR COURTESY LAMP SWITCH ASSY(See page 65–3) |
|---|---|

NG → REPLACE FRONT DOOR COURTESY LAMP SWITCH ASSY

OK

| 4 | INSPECT UN–LOCK WARNING SWITCH ASSY(See page 73–19) |
|---|---|

NG → REPLACE UN–LOCK WARNING SWITCH ASSY

OK

| | |
|---|---|
| 5 | CHECK HARNESS AND CONNECTOR(BETWEEN BODY ECU AND FRONT DOOR COURTESY LAMP SWITCH) |

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

| | |
|---|---|
| 6 | CHECK HARNESS AND CONNECTOR(BETWEEN BODY ECU AND KEY UNLOCK WARNING SWITCH) |

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE MULTIPLEX NETWORK BODY ECU