


FUEL TANK ASSY (1AZ–FE)

COMPONENTS


110AF–01

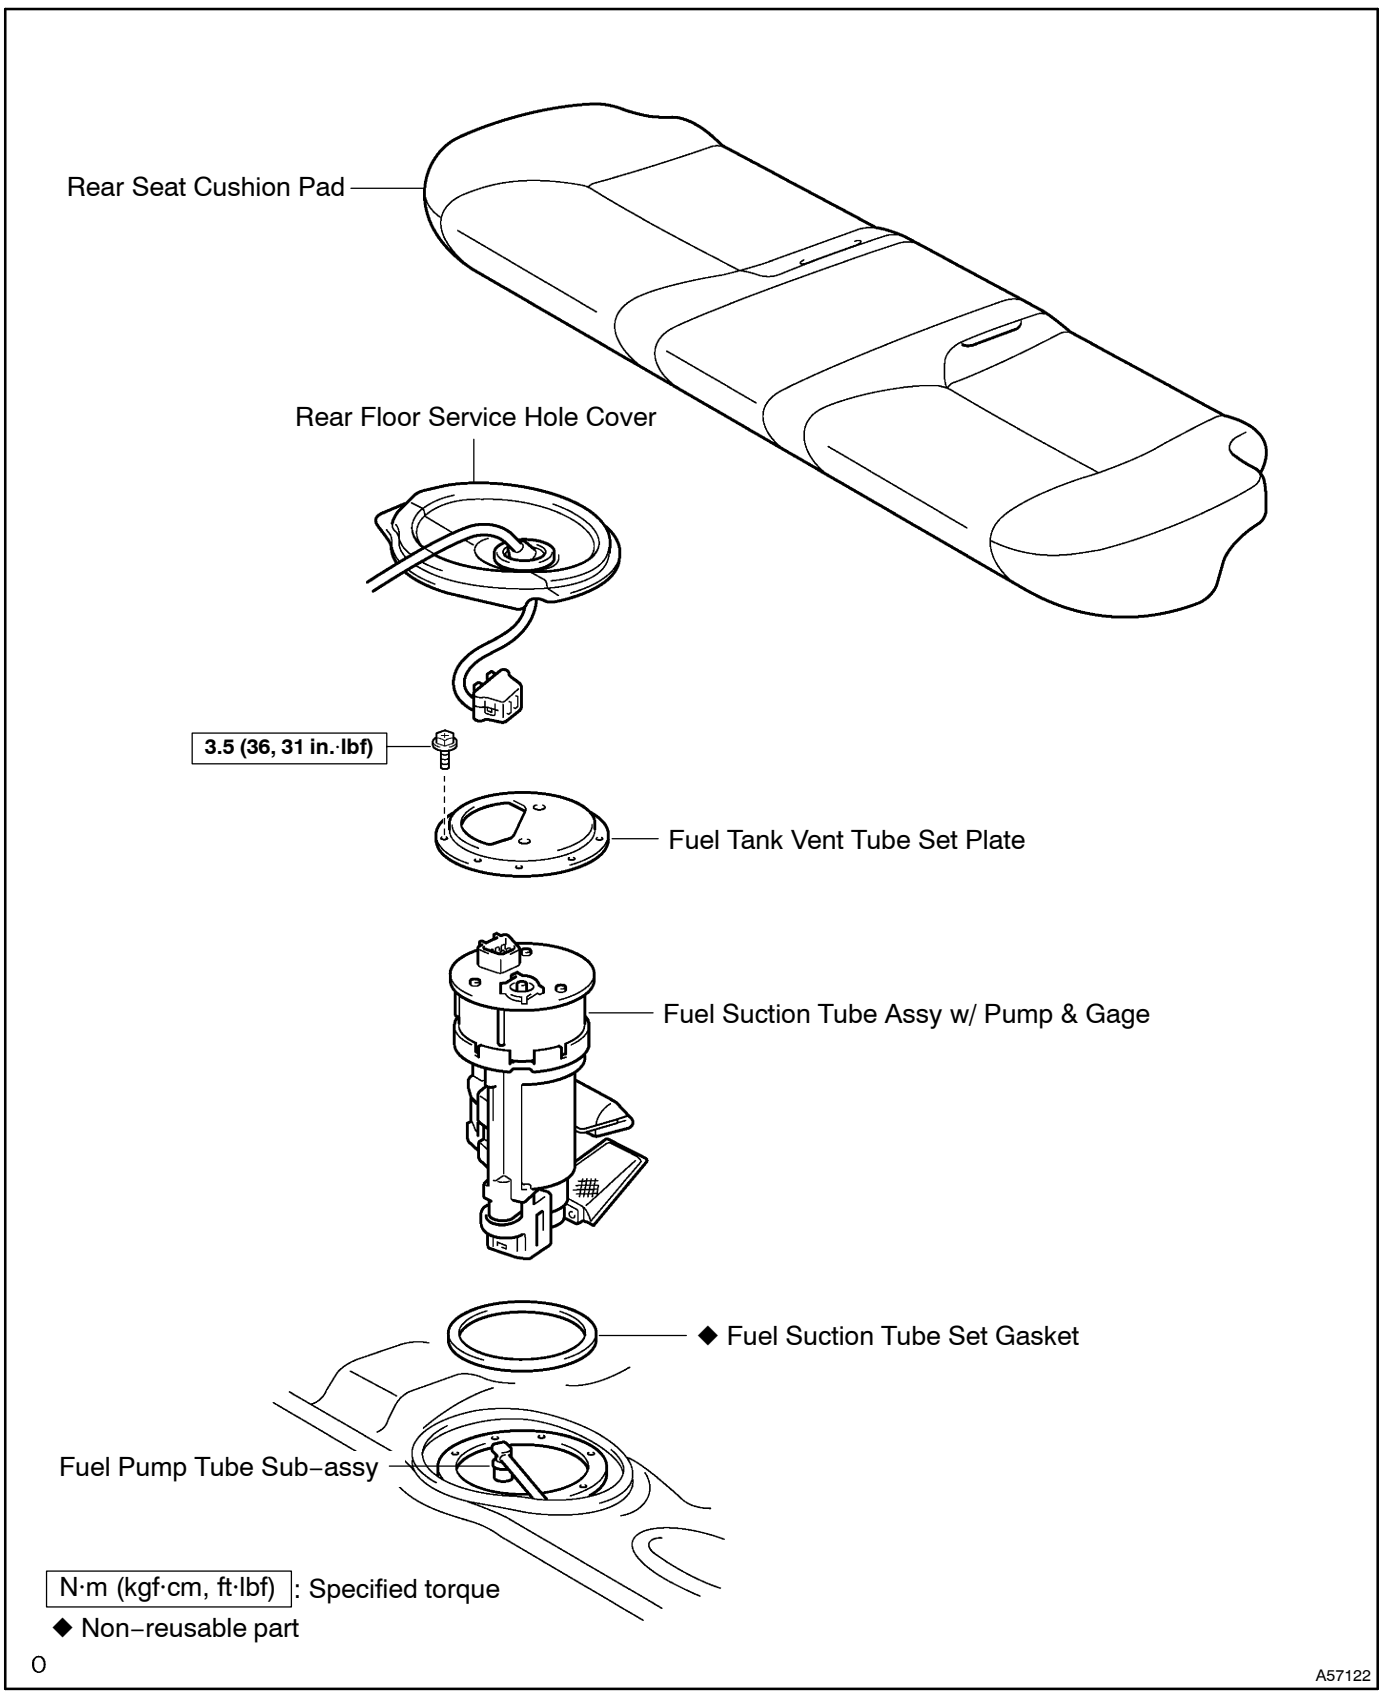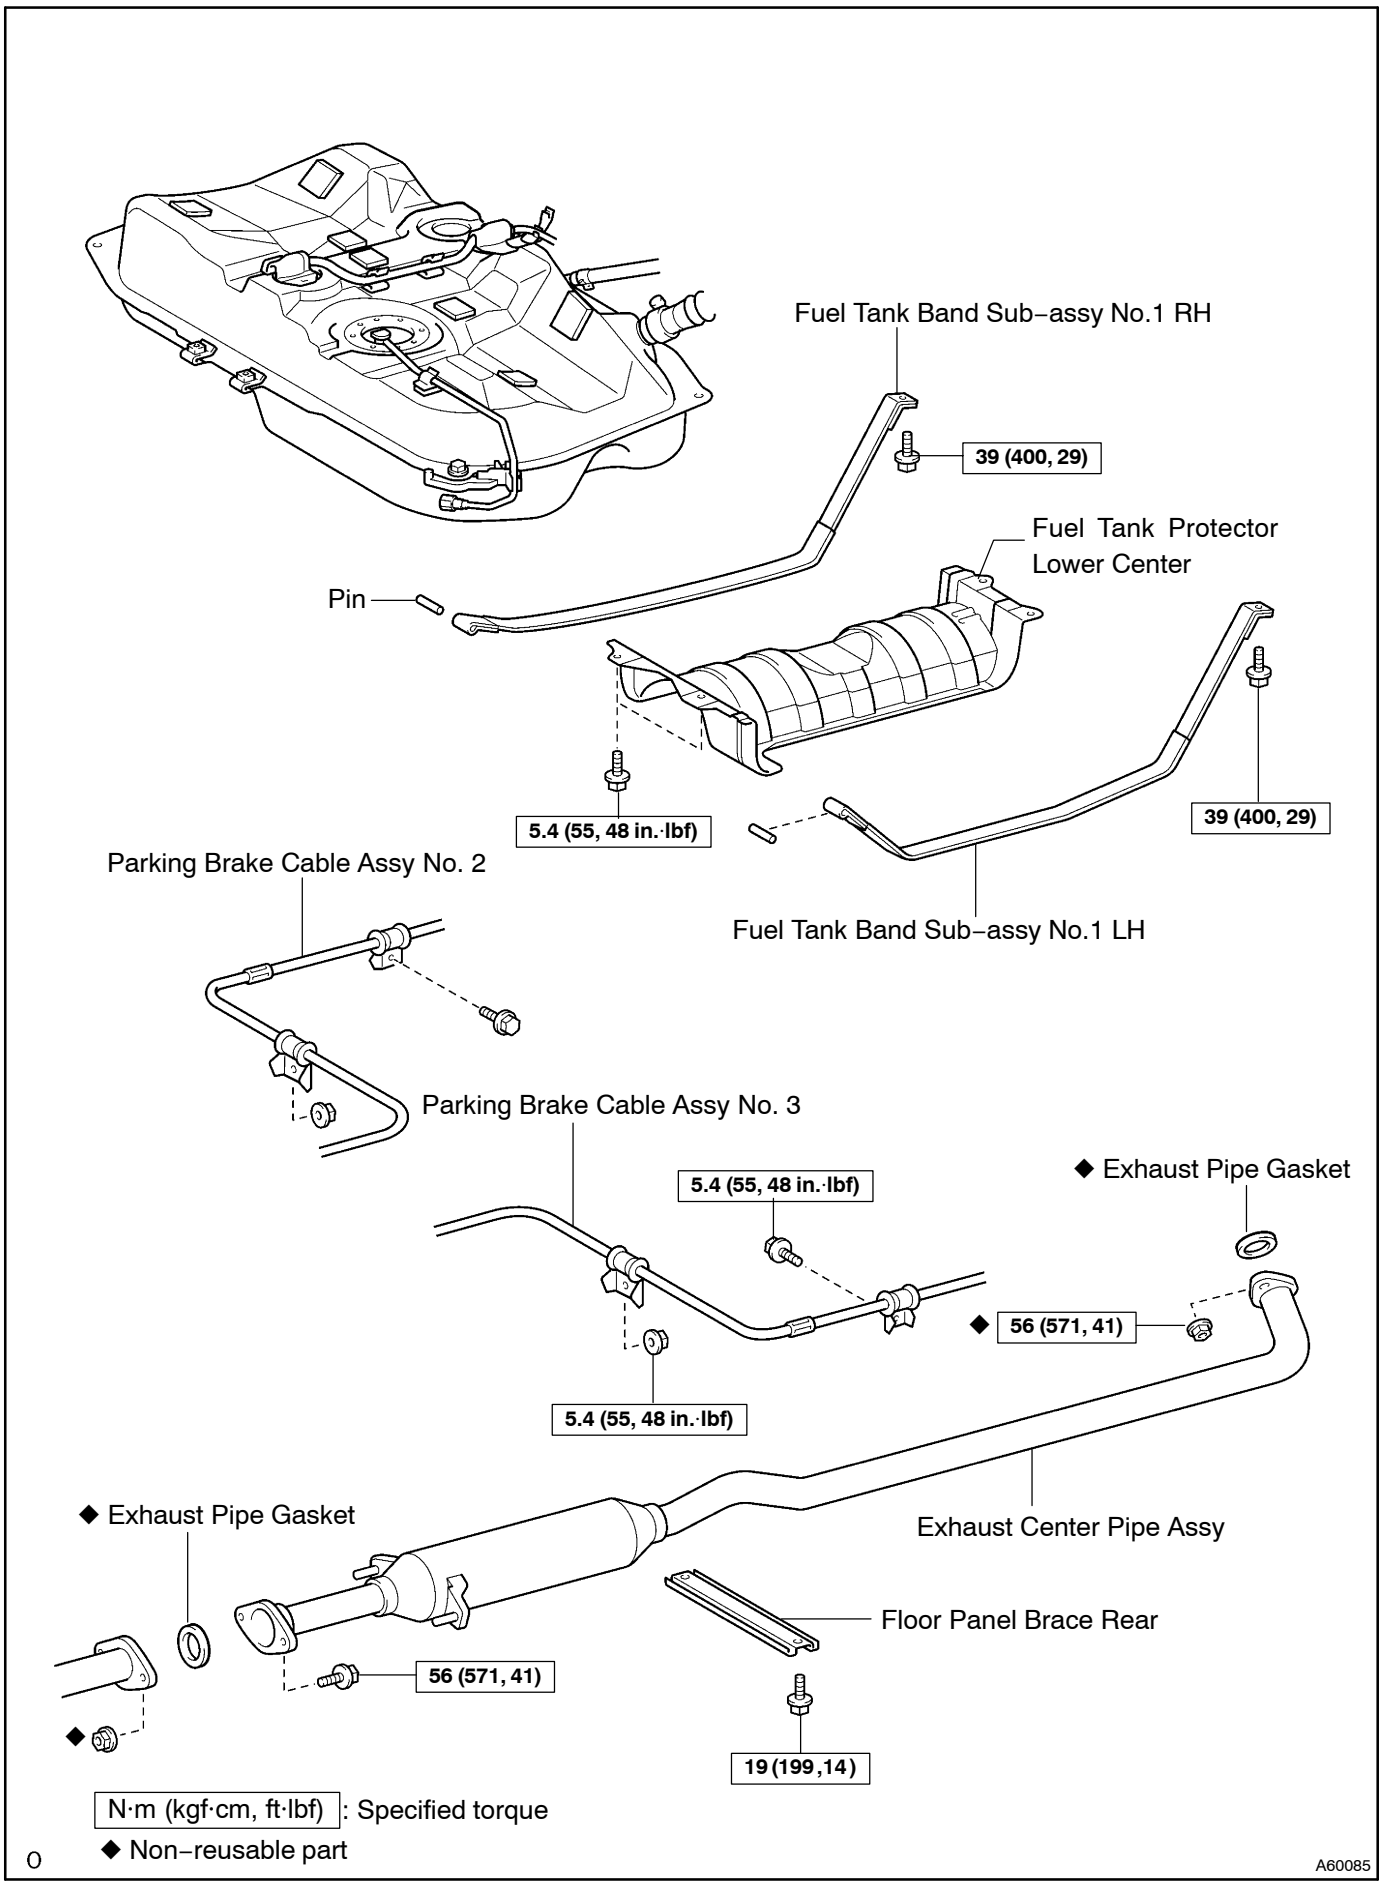


Fuel Tank Band Sub–assy No.1 RH
39 (400, 29)
Fuel Tank Protector Lower Center
Pin
5.4 (55, 48 in.·lbf)
39 (400, 29)
Fuel Tank Band Sub–assy No.1 LH
Parking Brake Cable Assy No. 2
Parking Brake Cable Assy No. 3
5.4 (55, 48 in.·lbf)
◆ Exhaust Pipe Gasket
◆ 56 (571, 41)
5.4 (55, 48 in.·lbf)
◆ Exhaust Pipe Gasket
Exhaust Center Pipe Assy
Floor Panel Brace Rear
56 (571, 41)
◆
19 (199, 14)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A60085

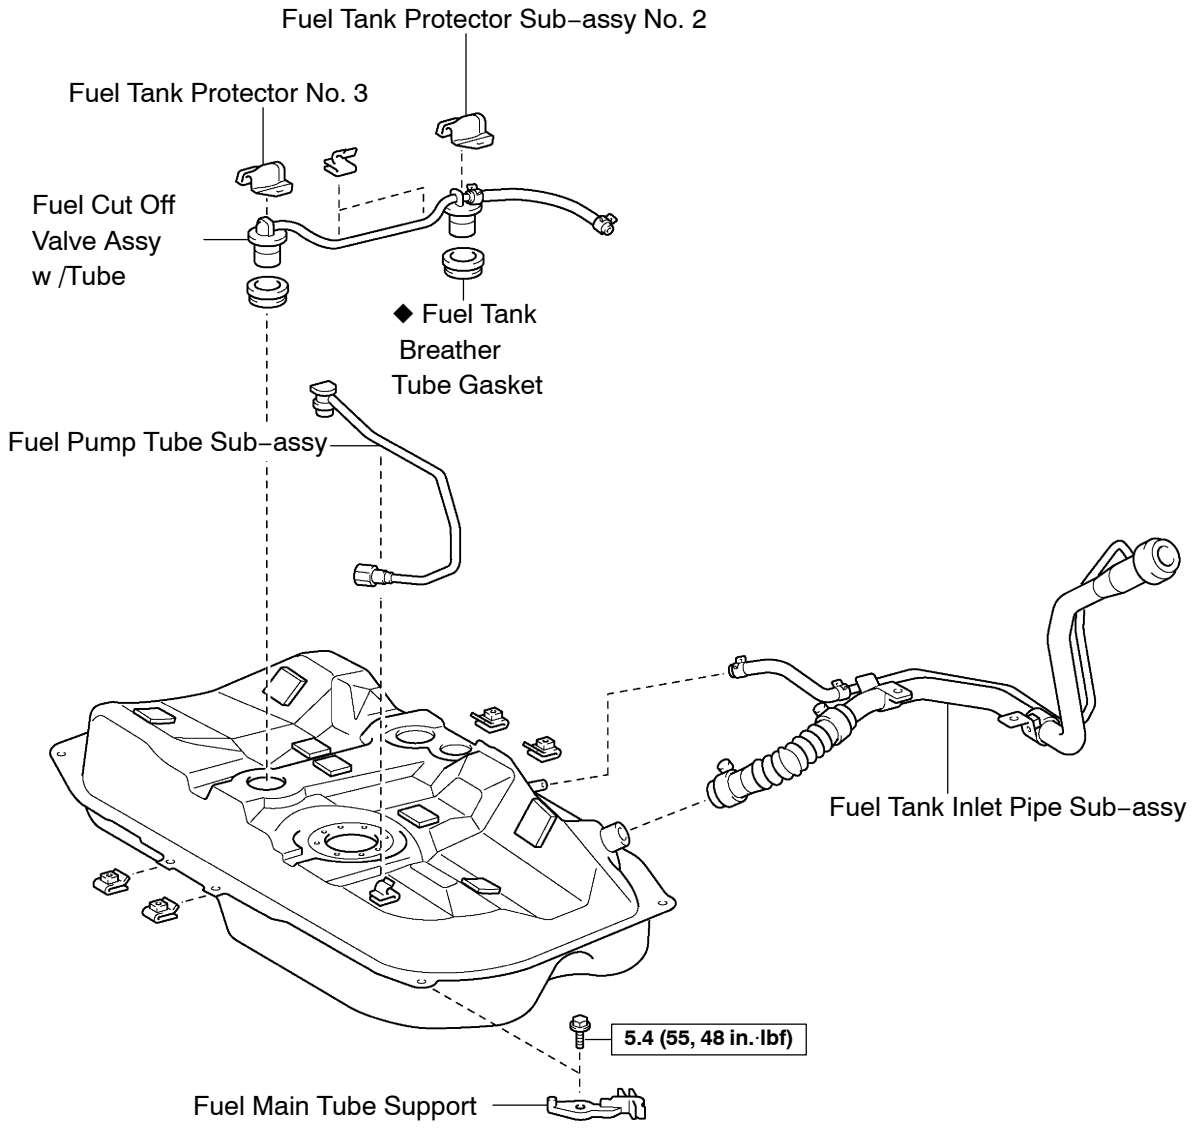

Location of Fuel Tank Cushion

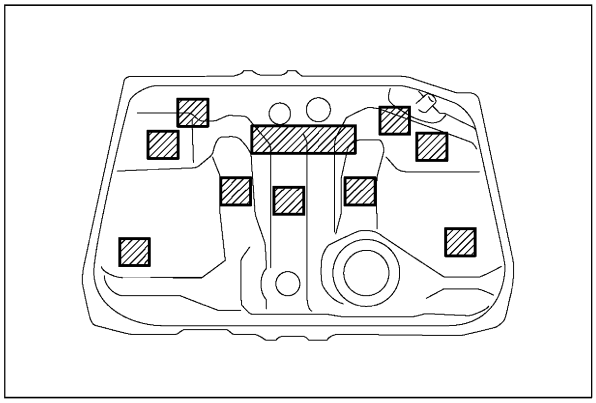

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

A60086