


FUEL TANK ASSY (1MZ–FE)

COMPONENTS


1109X–01

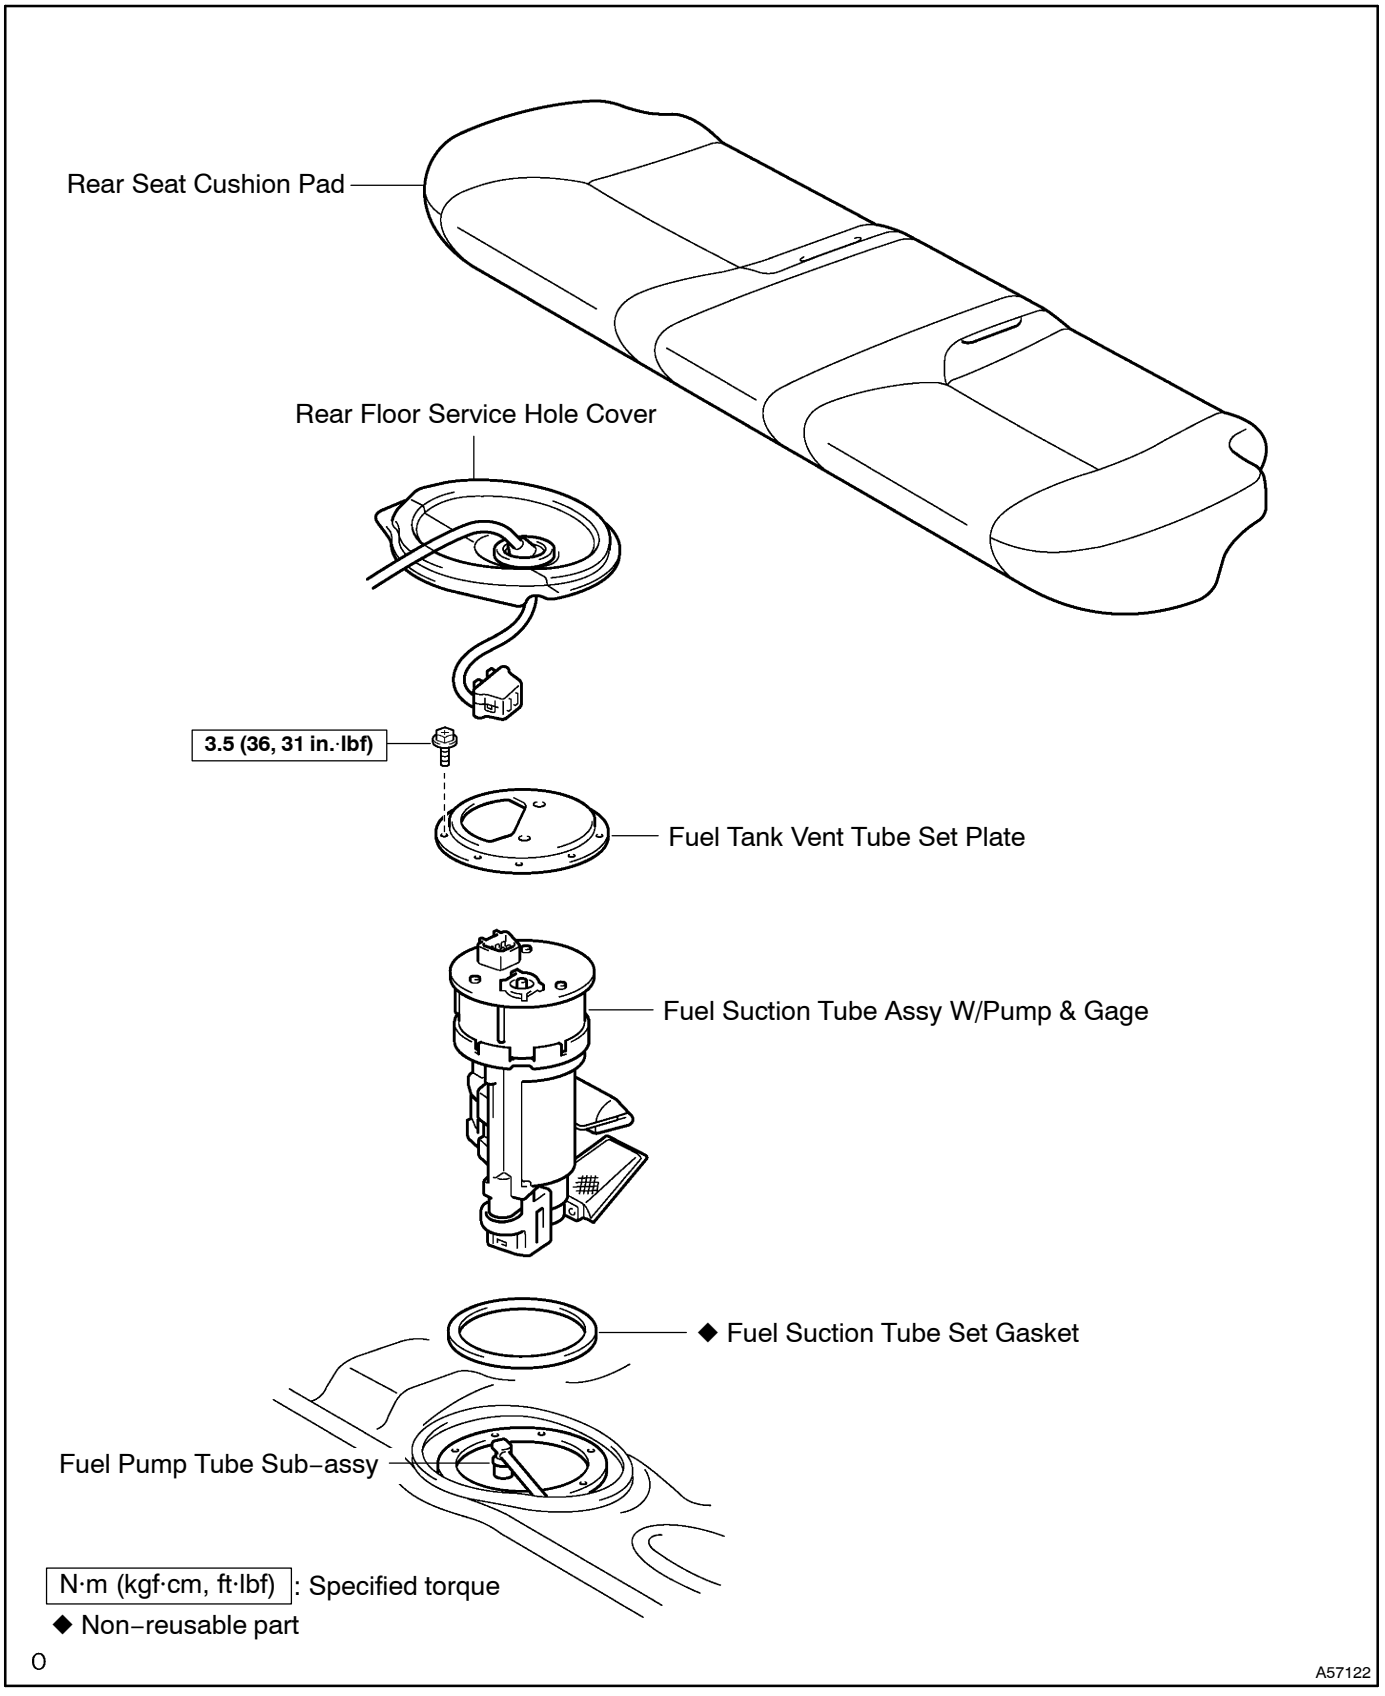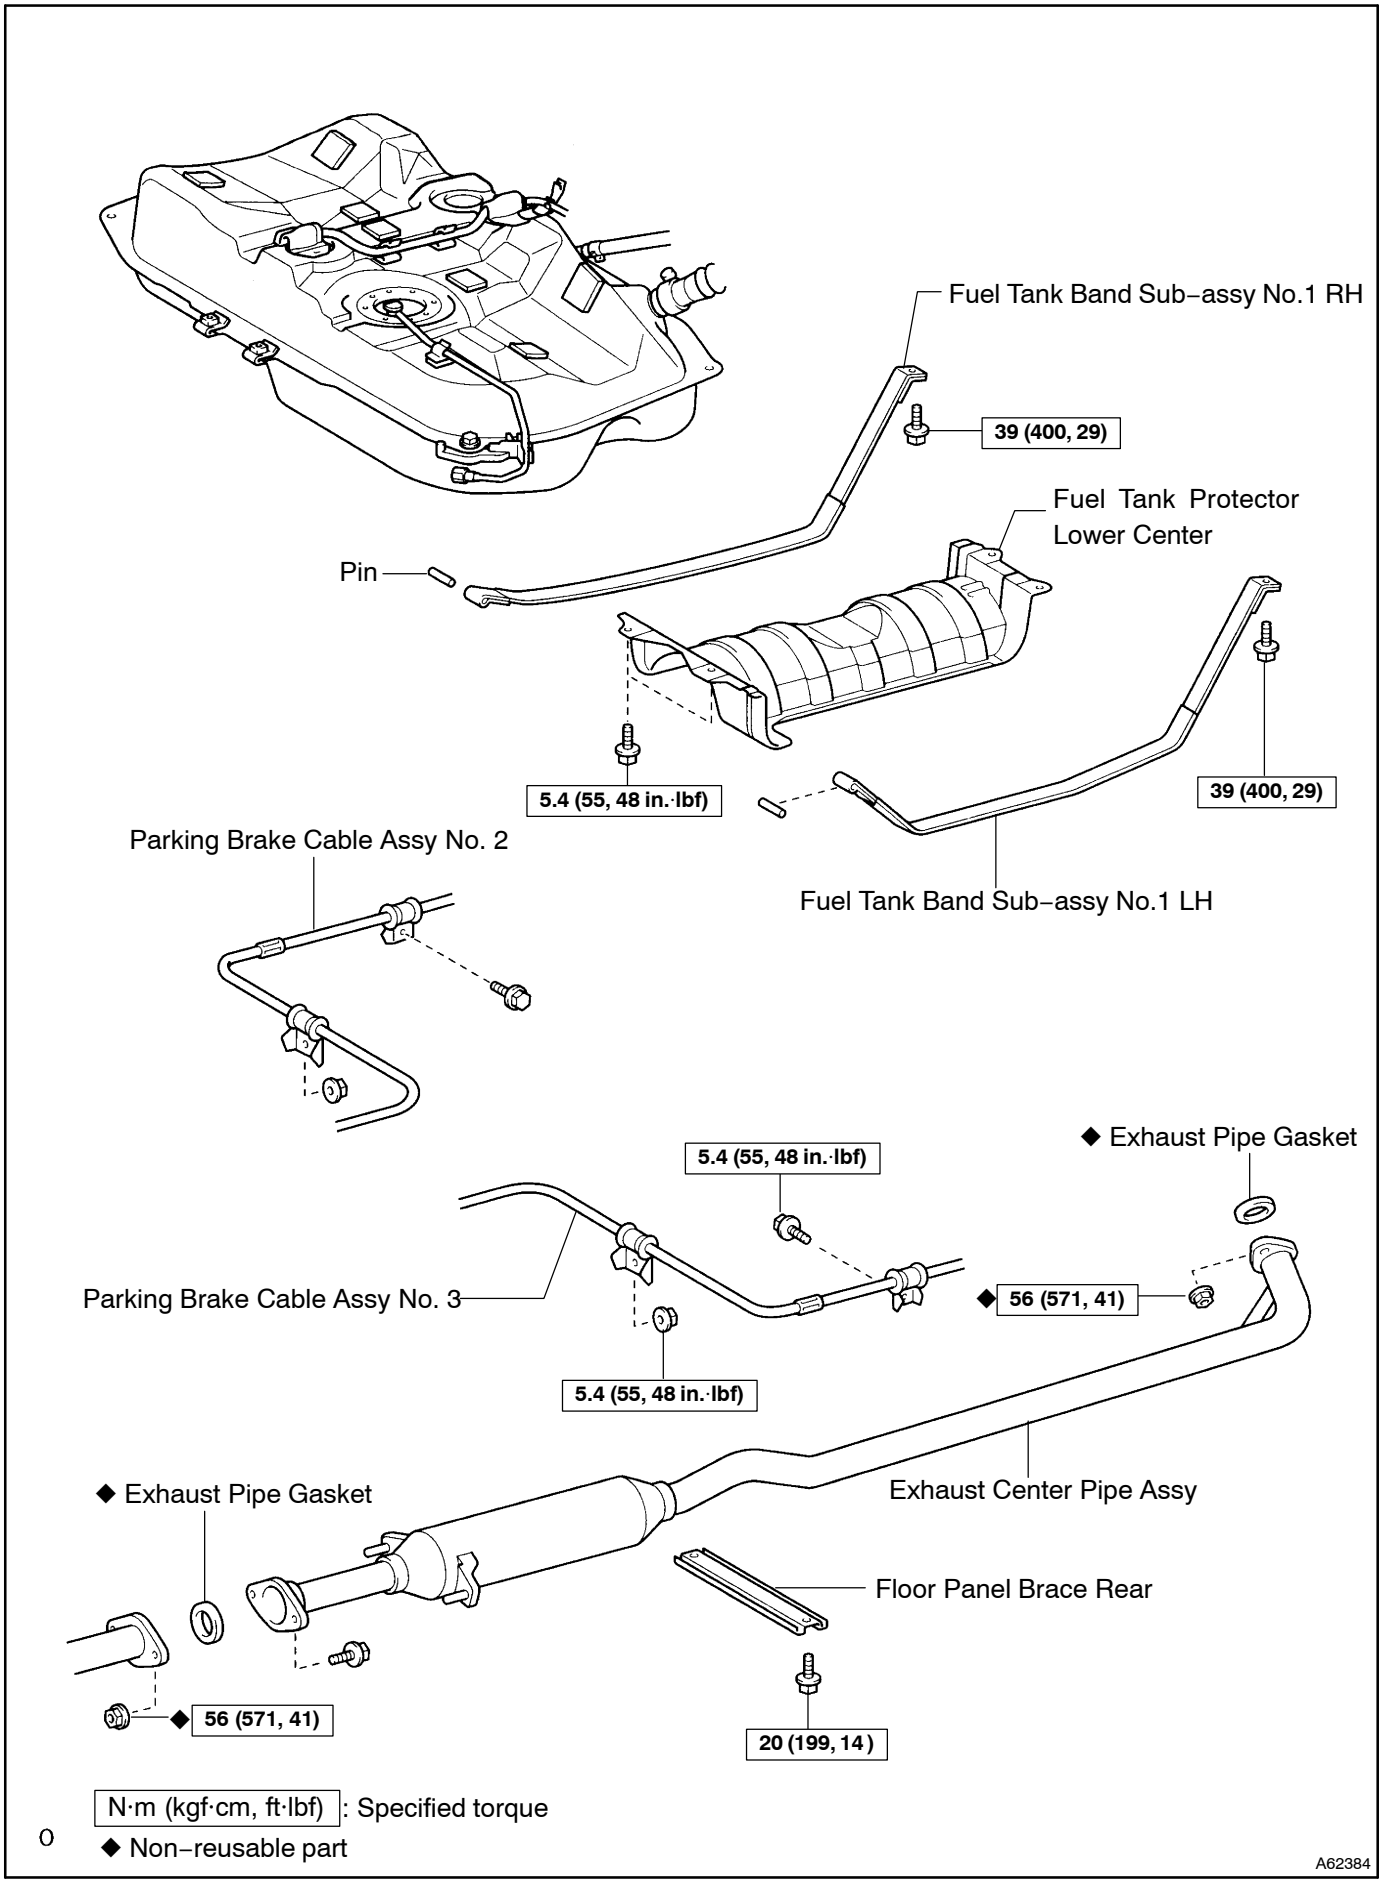


Fuel Tank Band Sub–assy No.1 RH
39 (400, 29)
Fuel Tank Protector Lower Center
Pin
5.4 (55, 48 in.·lbf)
39 (400, 29)
Fuel Tank Band Sub–assy No.1 LH
Parking Brake Cable Assy No. 2
◆ Exhaust Pipe Gasket
5.4 (55, 48 in.·lbf)
Parking Brake Cable Assy No. 3
◆ 56 (571, 41)
5.4 (55, 48 in.·lbf)
◆ Exhaust Pipe Gasket
Exhaust Center Pipe Assy
Floor Panel Brace Rear
◆ 56 (571, 41)
20 (199, 14)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A62384

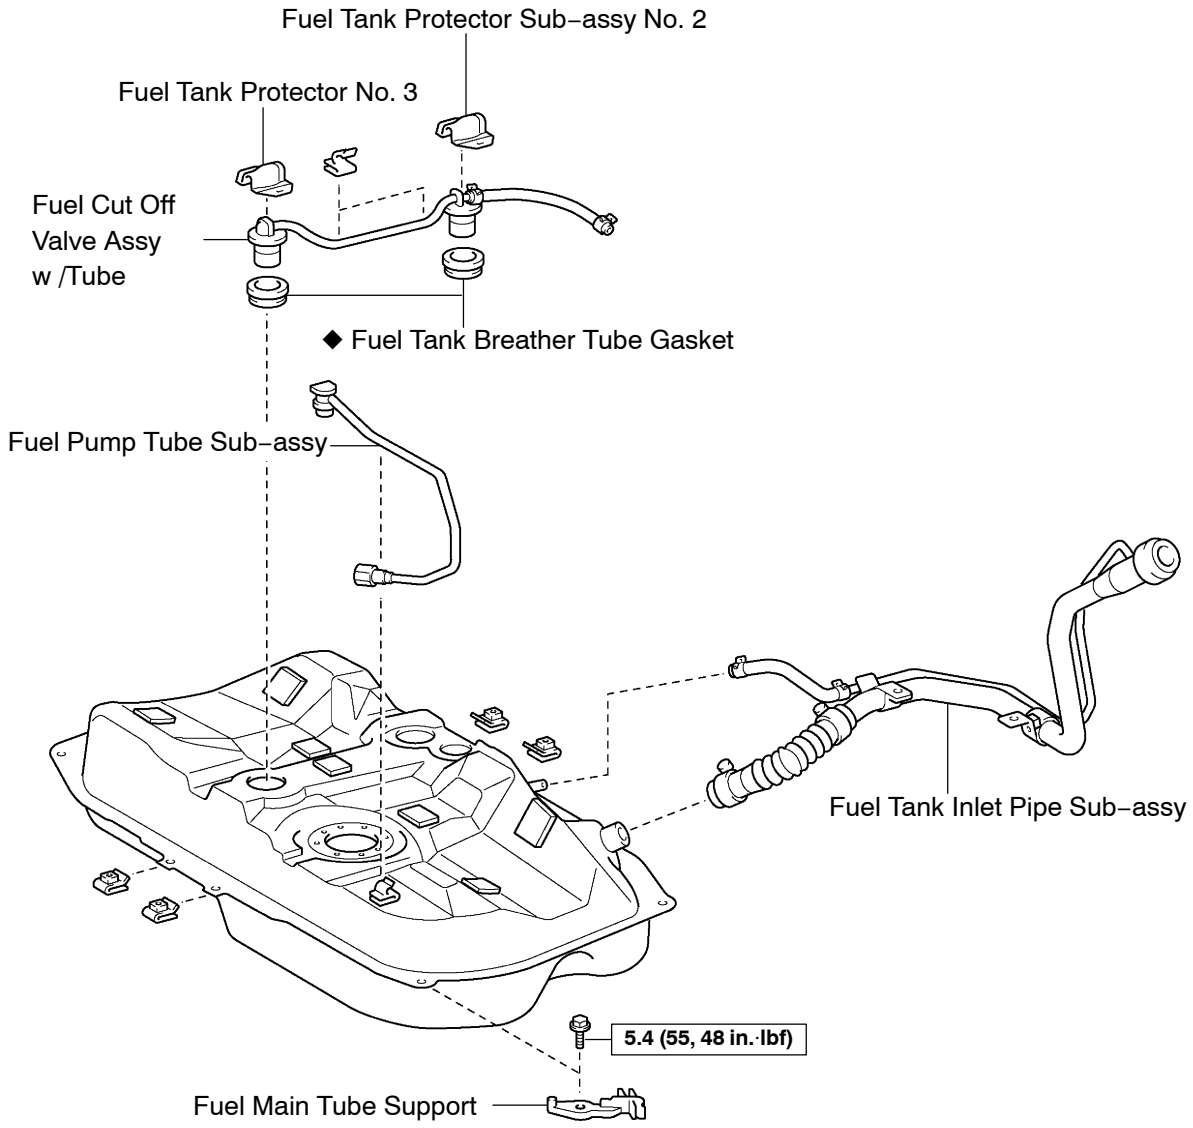

Location of Fuel Tank Cushion

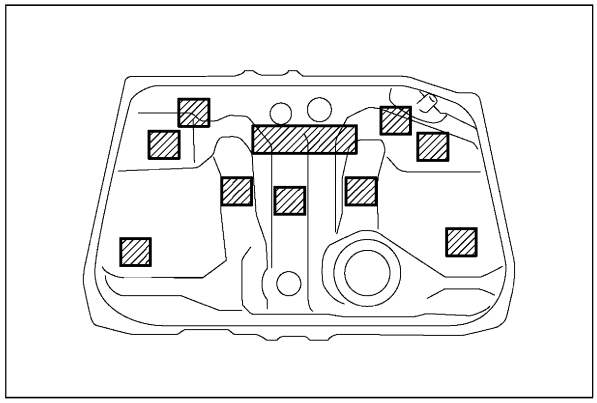

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

A60086