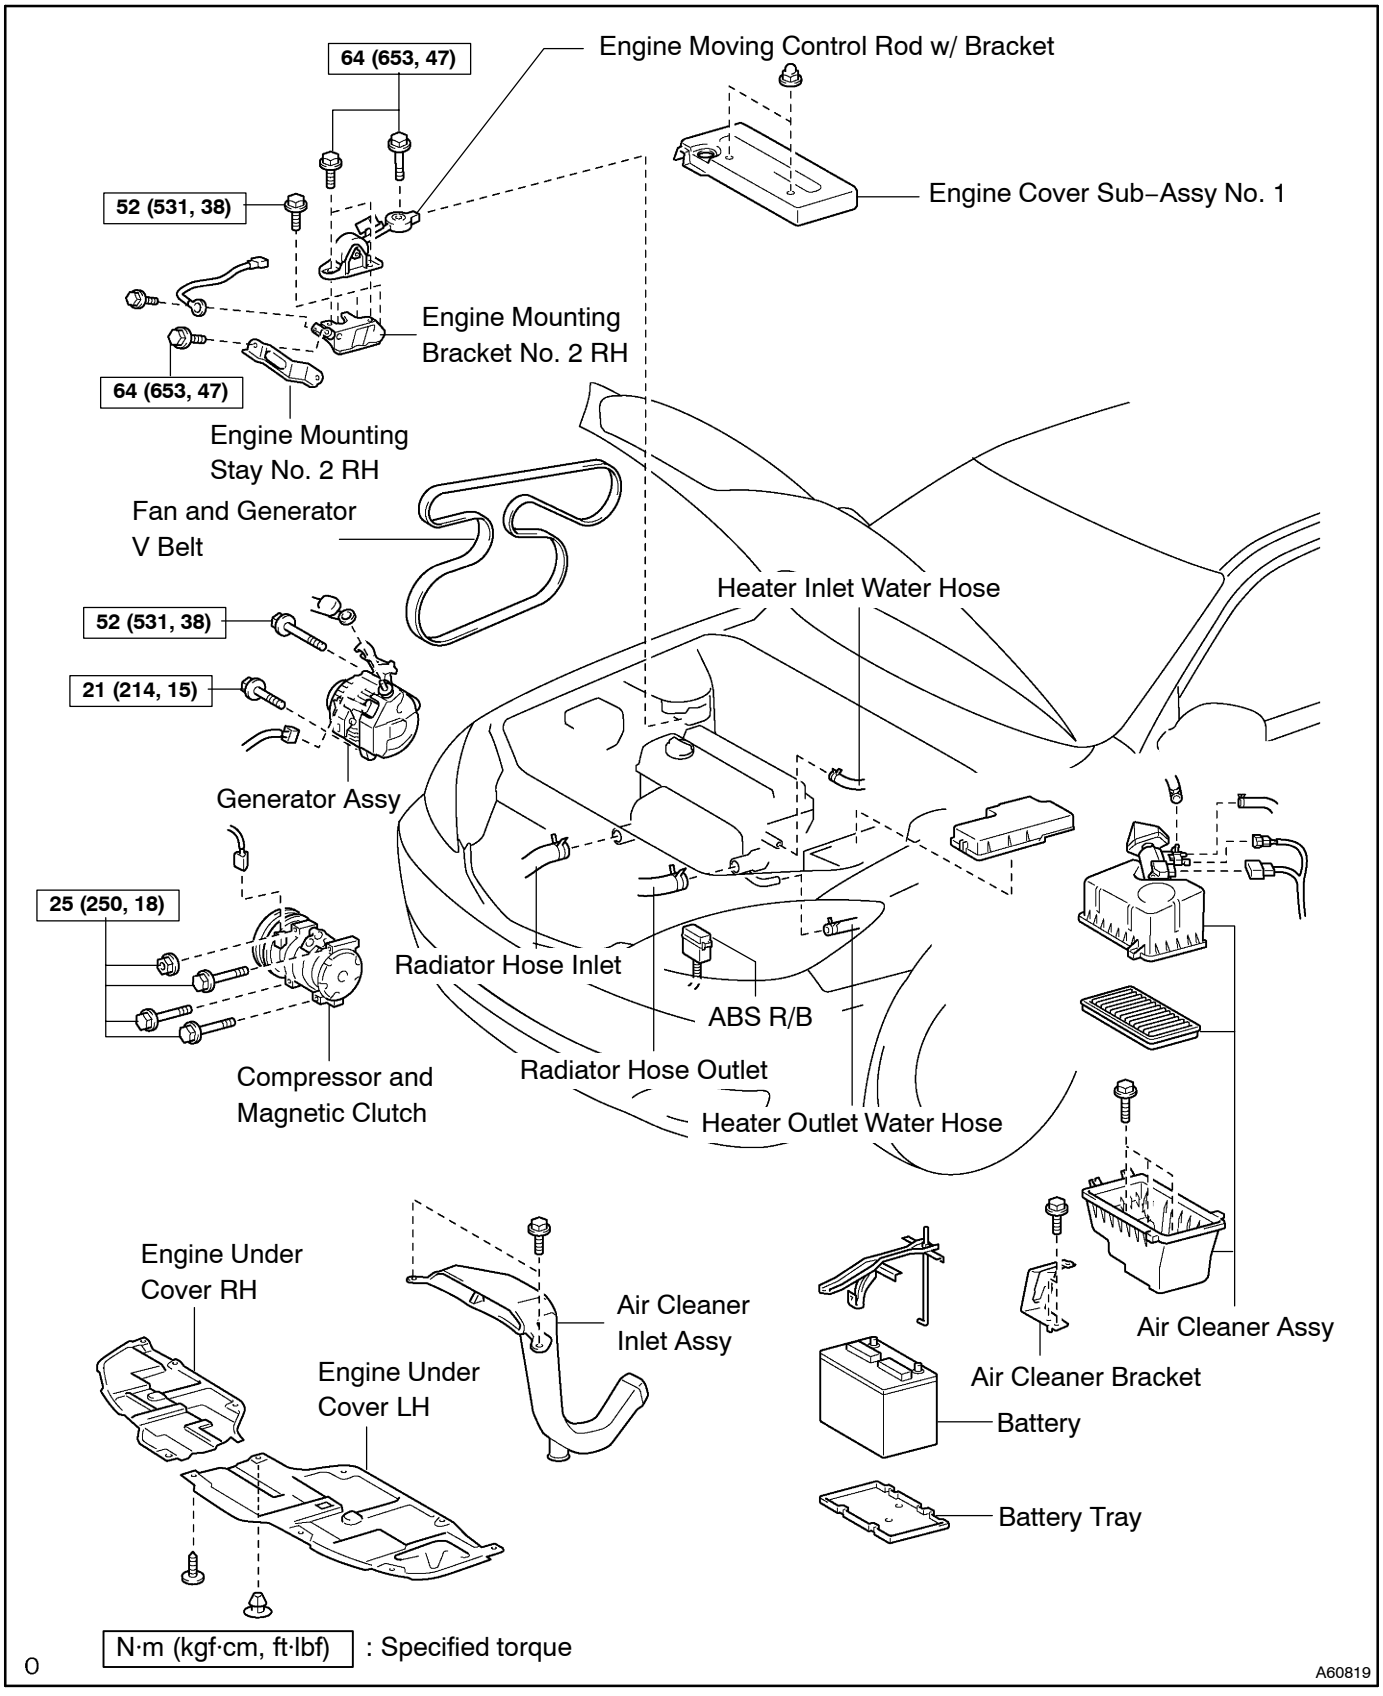
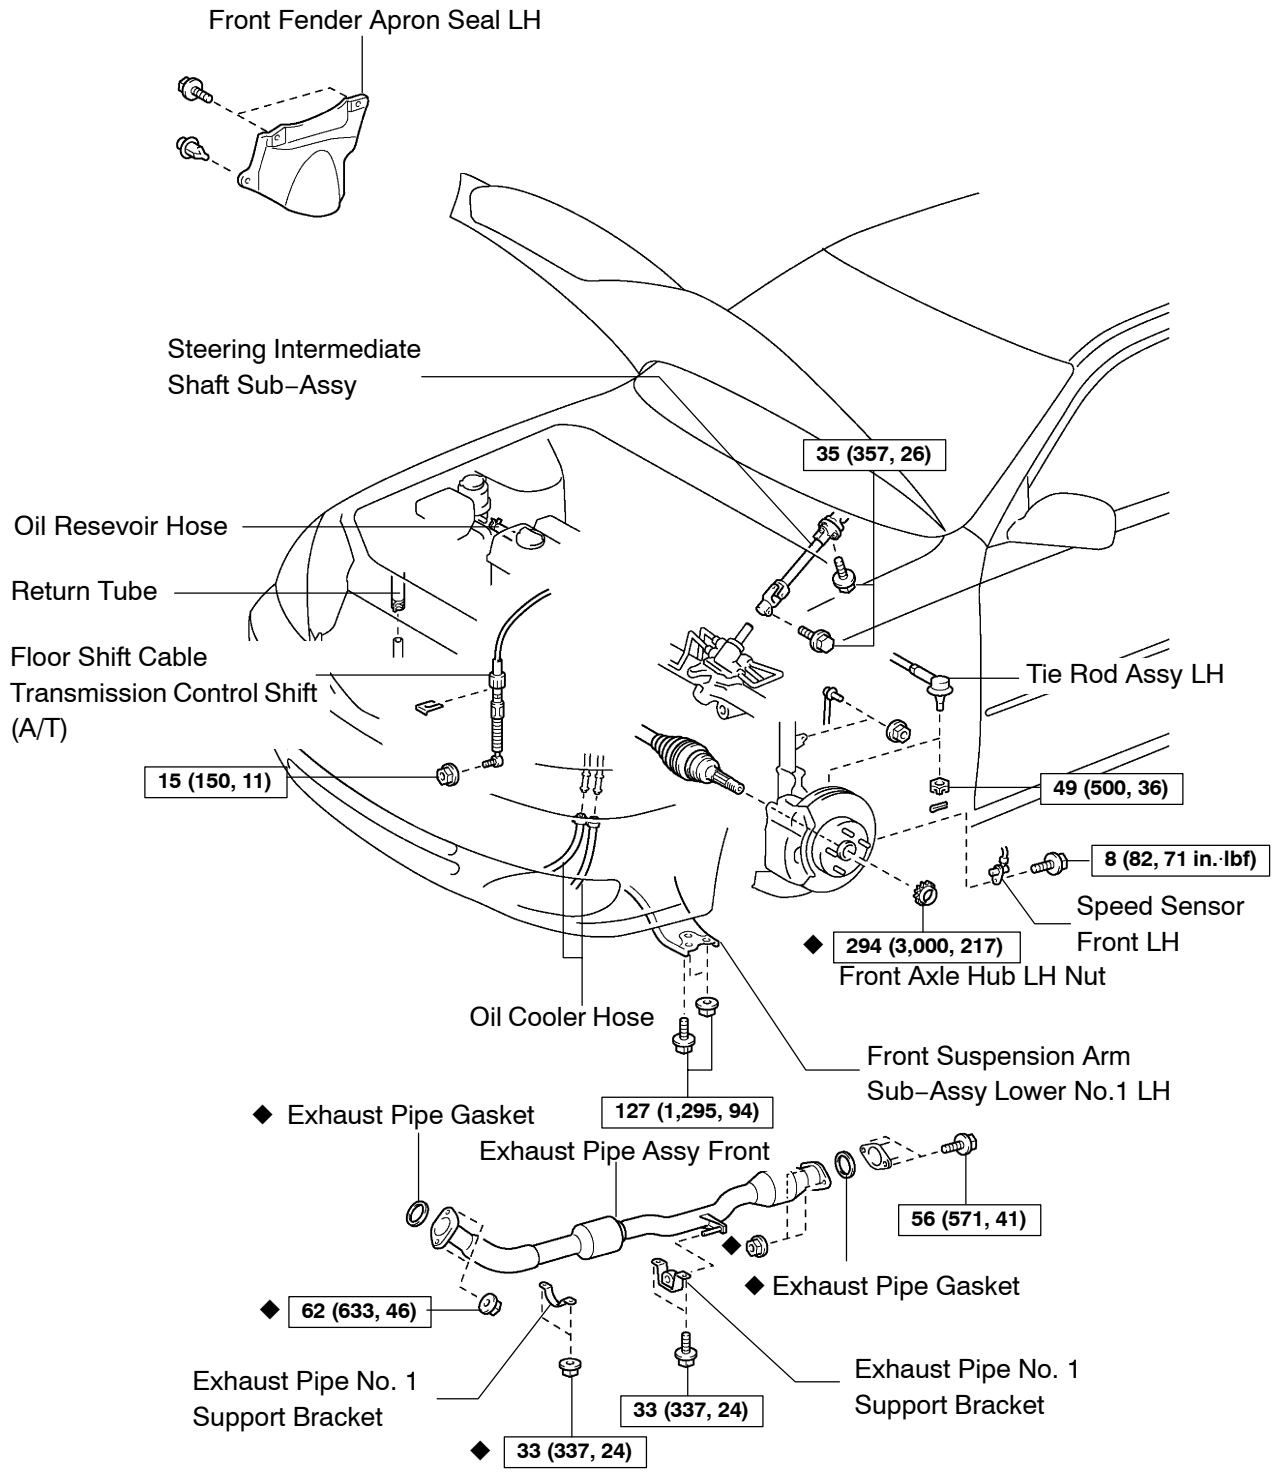
PARTIAL ENGINE ASSY (1AZ–FE)

COMPONENTS

140IR–01

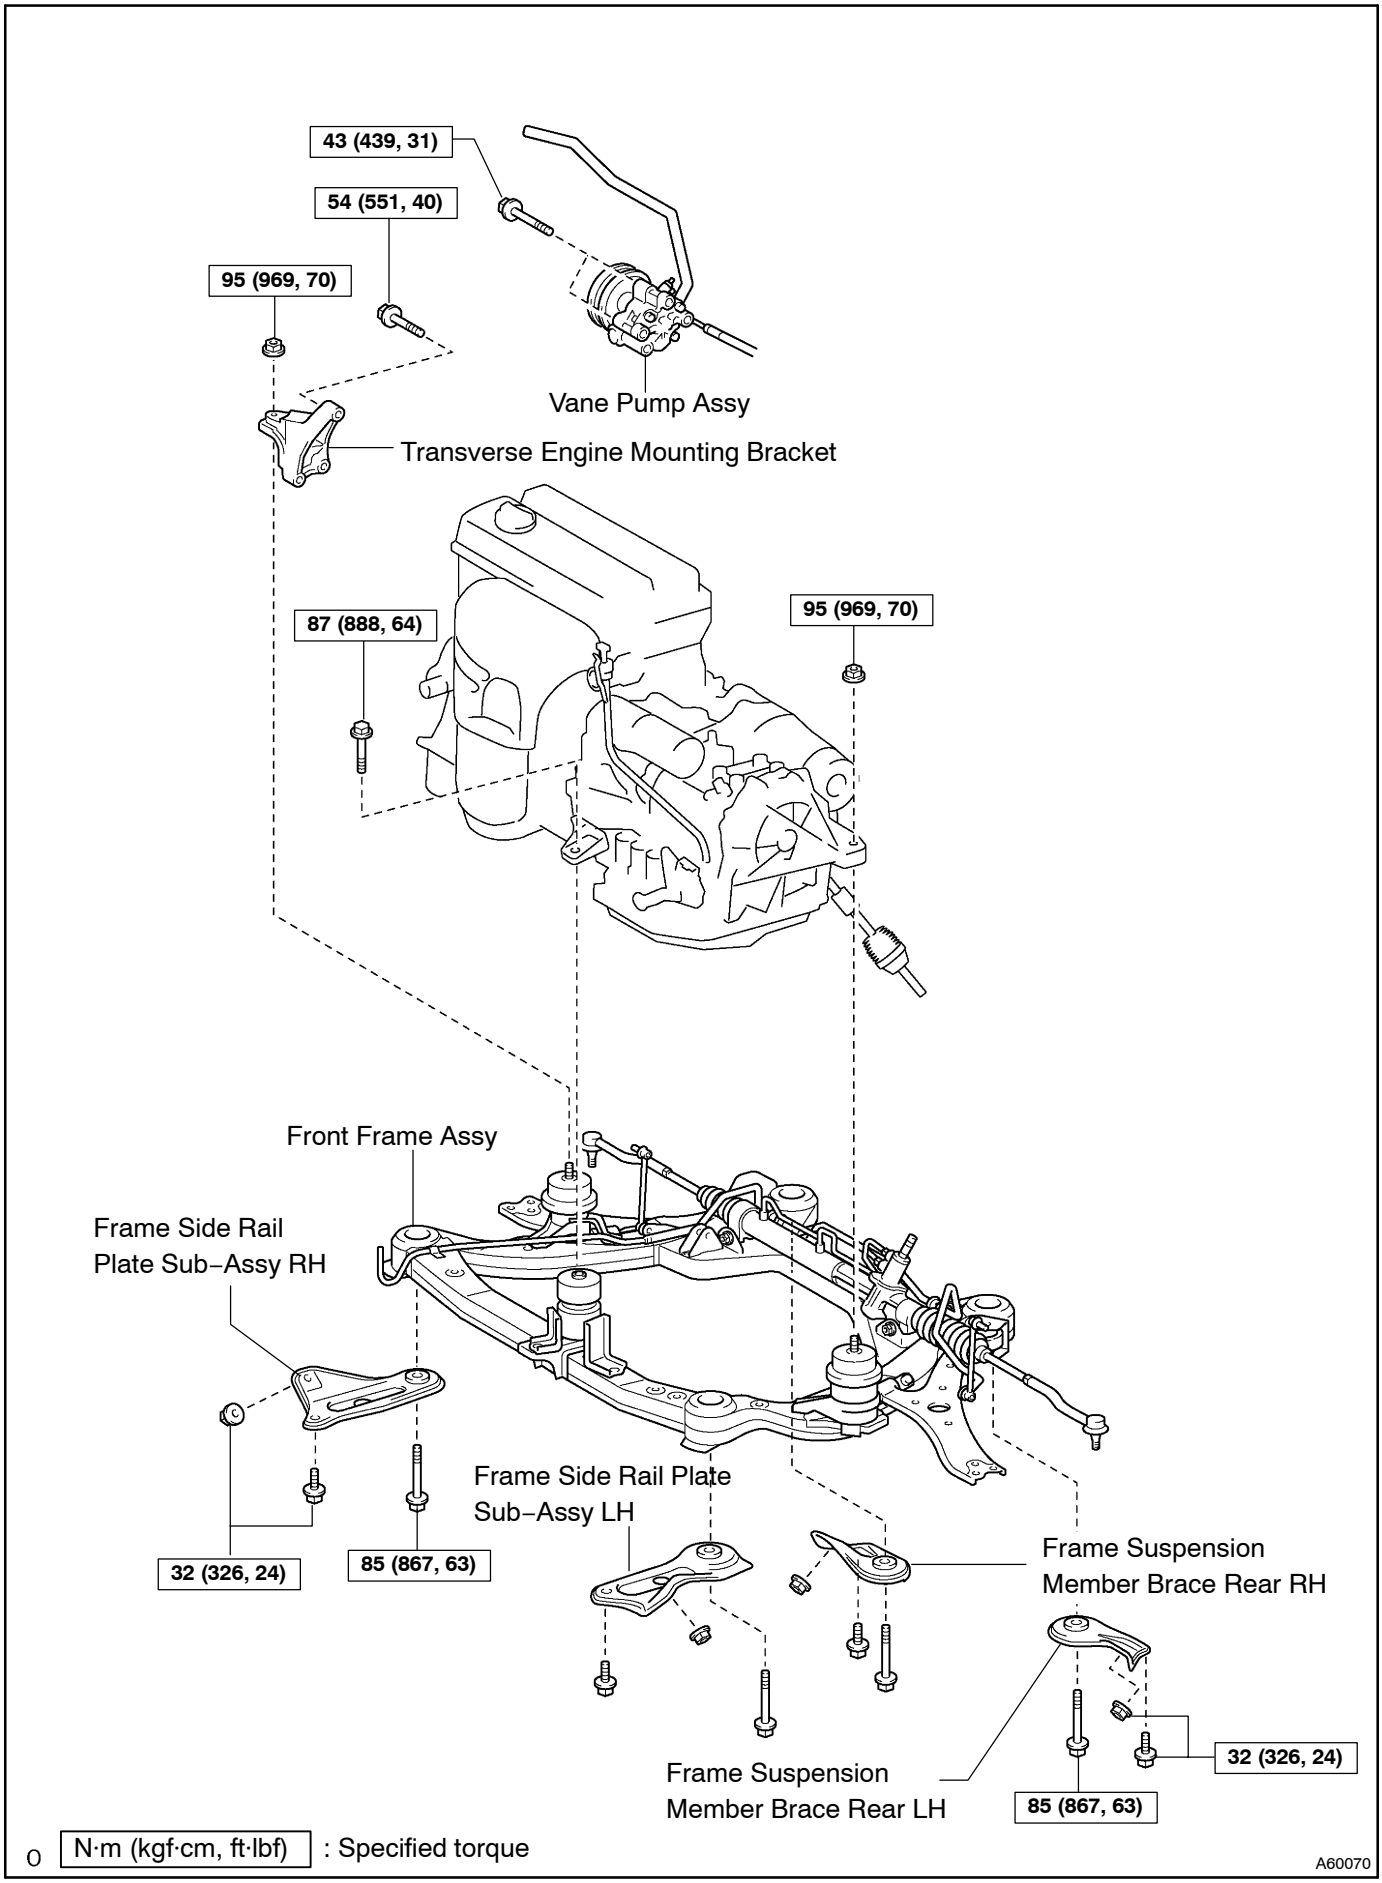


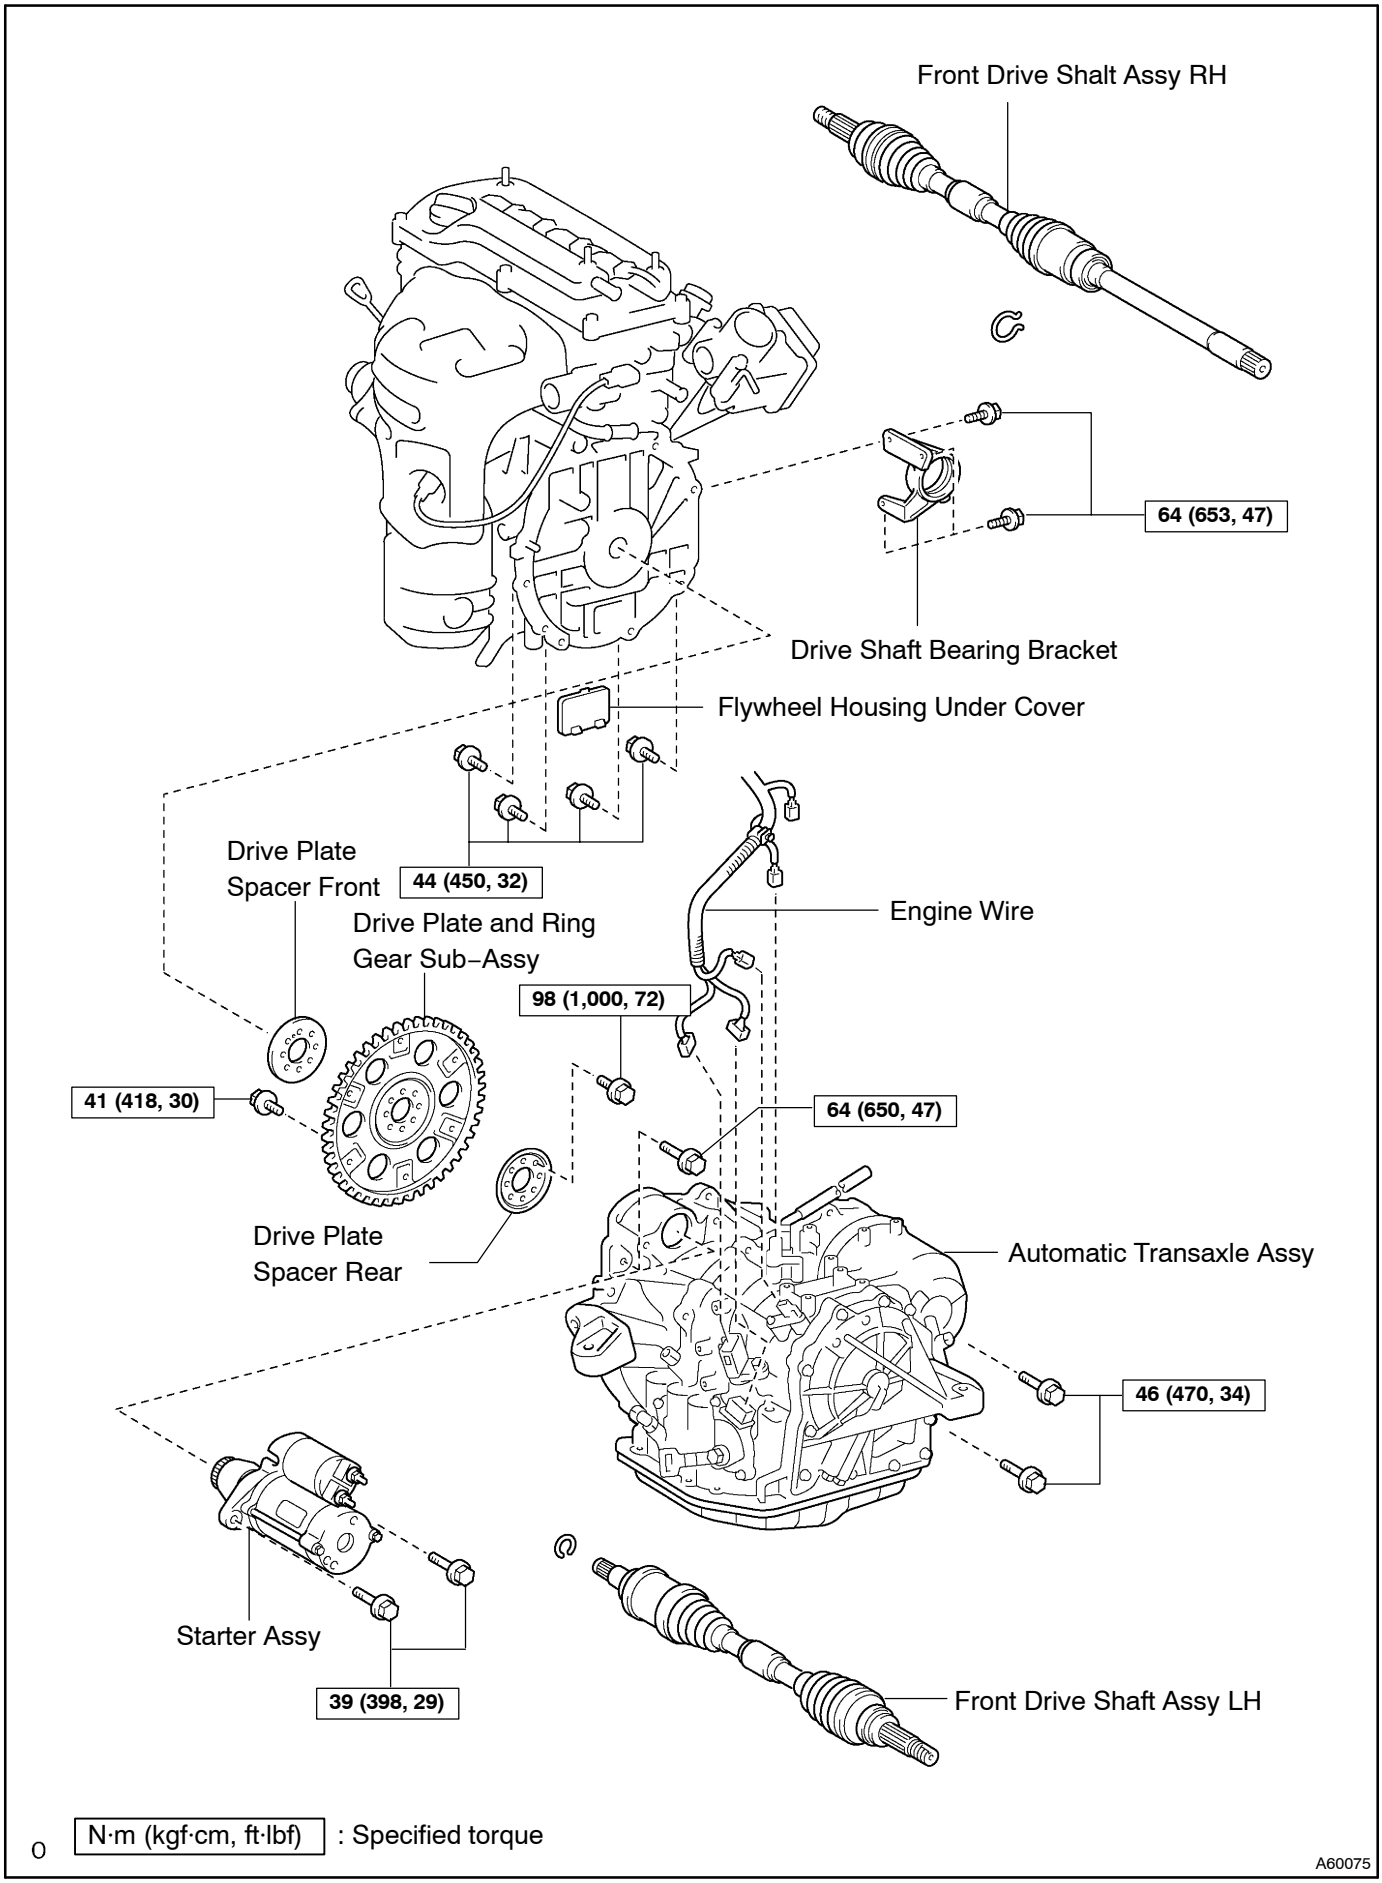


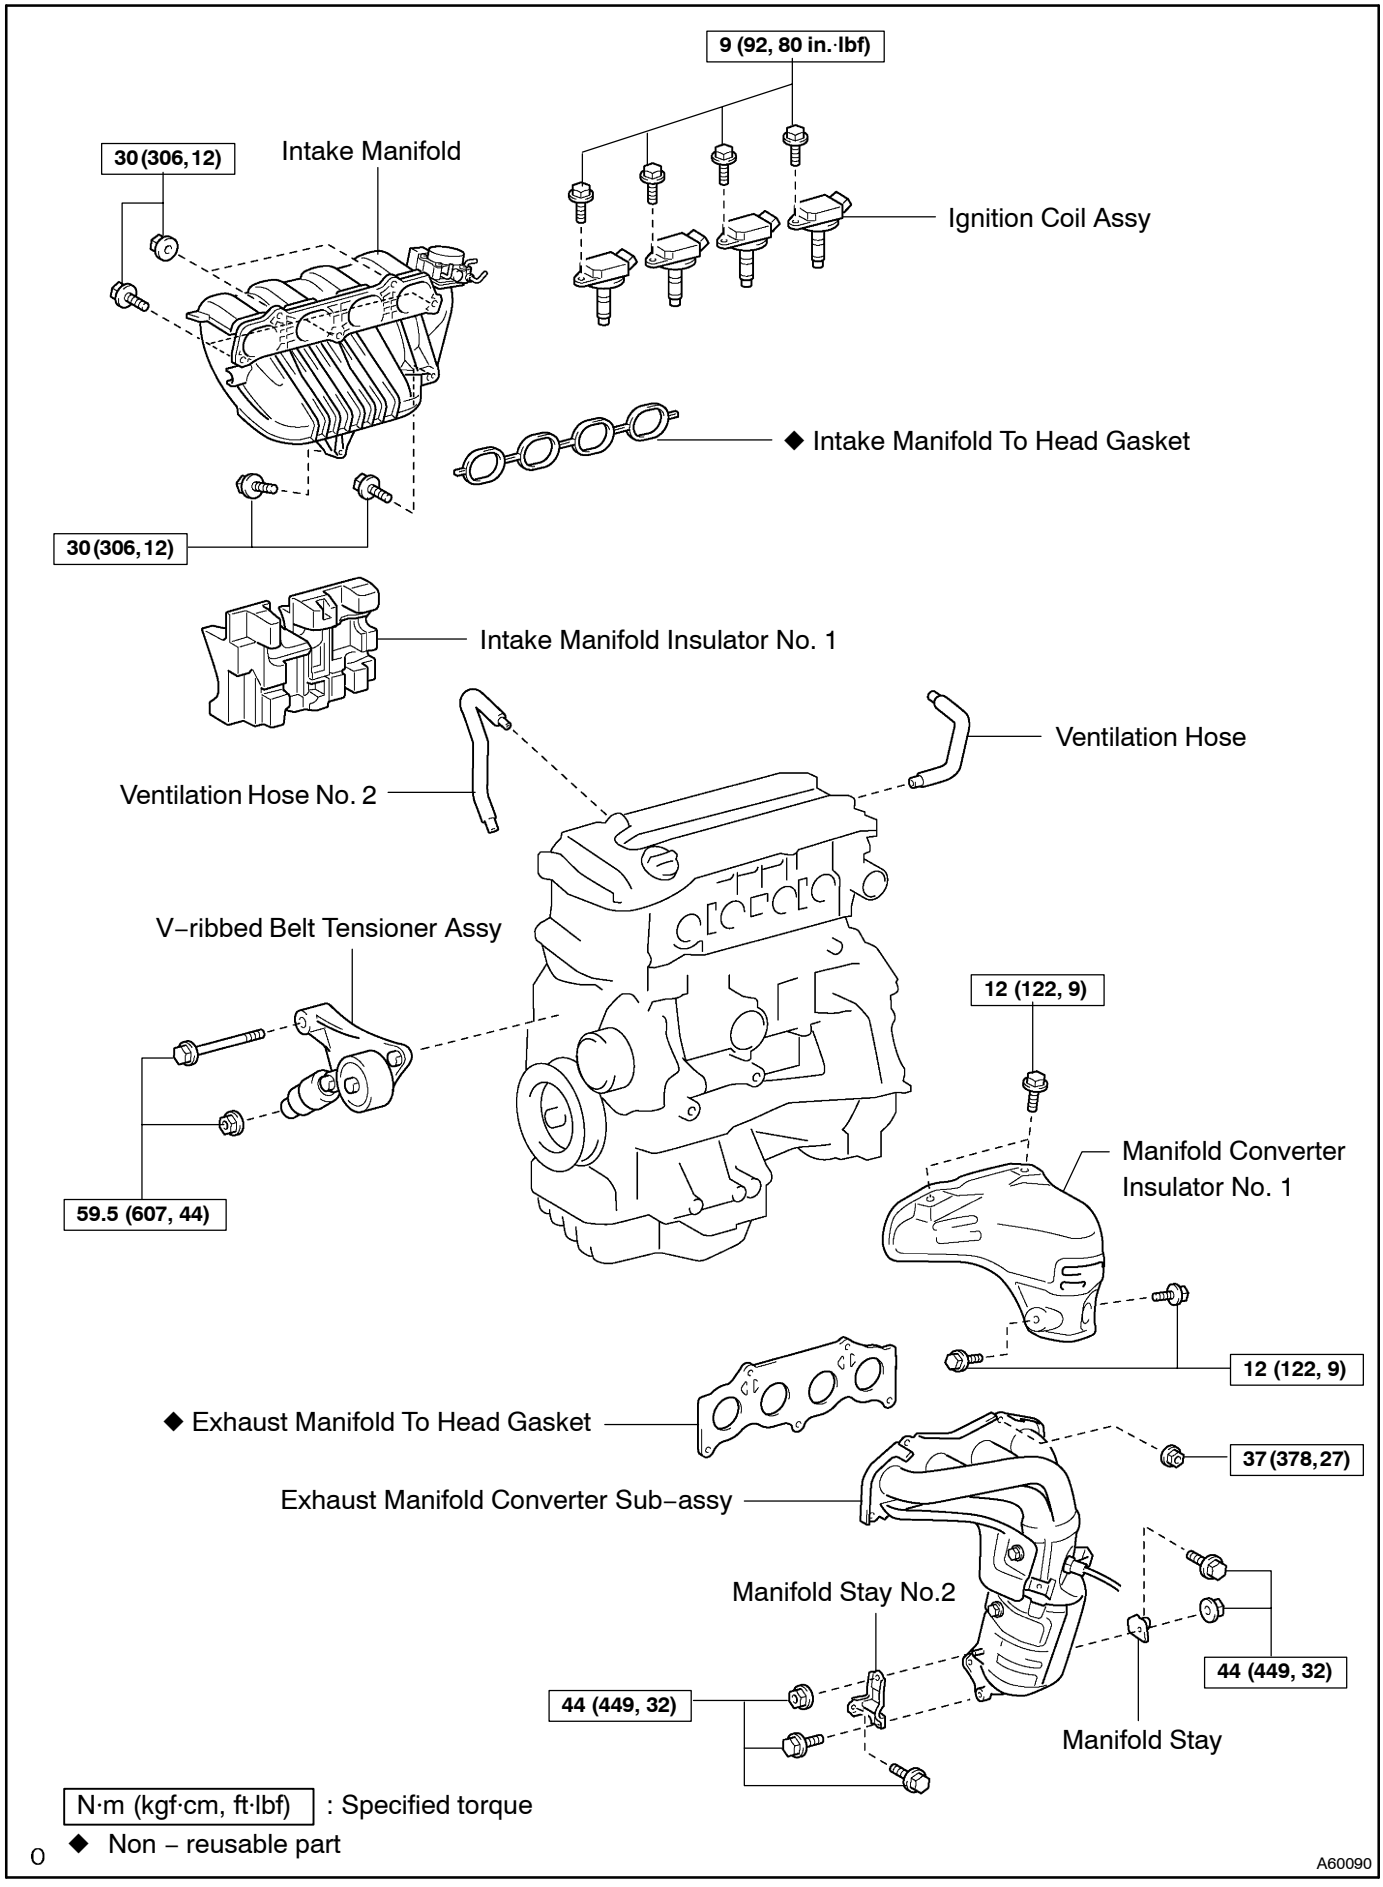
N·m (kgf·cm, ft·lbf) : Specified torque

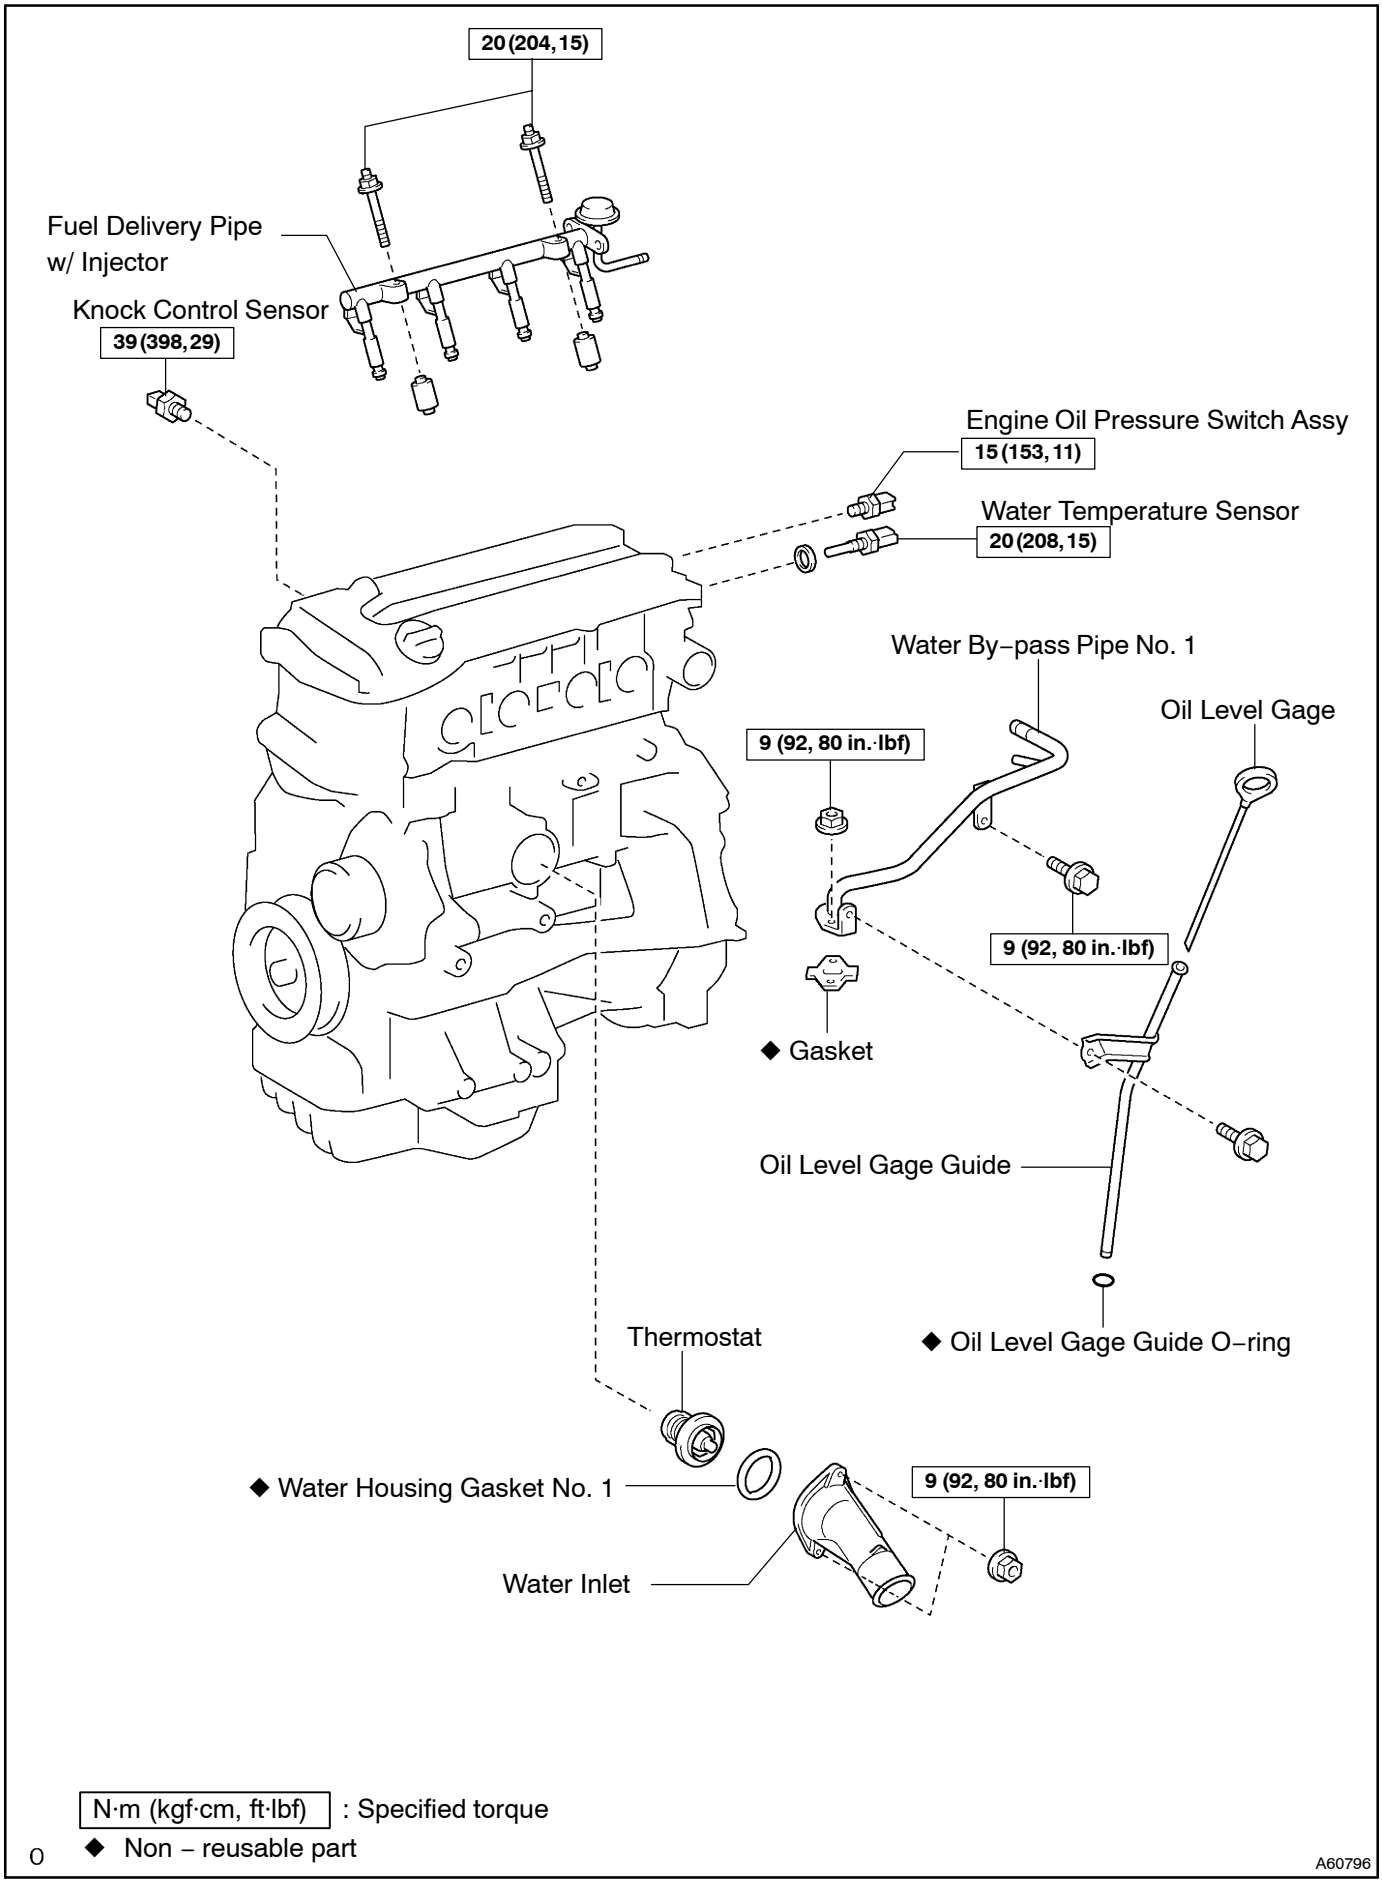
◆ Non – reusable part

A63405


43 (439, 31)
54 (551, 40)
95 (969, 70)
Vane Pump Assy
Transverse Engine Mounting Bracket
87 (888, 64)
95 (969, 70)
Front Frame Assy
Frame Side Rail
Plate Sub–Assy RH
Frame Side Rail Plate
Sub–Assy LH
Frame Suspension
Member Brace Rear RH
32 (326, 24)
85 (867, 63)
Frame Suspension
Member Brace Rear LH
85 (867, 63)
32 (326, 24)
o N·m (kgf·cm, ft·lbf) : Specified torque
A60070


Front Drive Shalt Assy RH
64 (653, 47)
Drive Shaft Bearing Bracket
Flywheel Housing Under Cover
Drive Plate
Spacer Front
44 (450, 32)
Drive Plate and Ring
Gear Sub–Assy
Engine Wire
98 (1,000, 72)
41 (418, 30)
64 (650, 47)
Drive Plate
Spacer Rear
Automatic Transaxle Assy
46 (470, 34)
Starter Assy
39 (398, 29)
Front Drive Shaft Assy LH
N·m (kgf·cm, ft·lbf) : Specified torque
A60075


9 (92, 80 in.·lbf)
30 (306, 12)
Intake Manifold
Ignition Coil Assy
◆ Intake Manifold To Head Gasket
30 (306, 12)
Intake Manifold Insulator No. 1
Ventilation Hose
Ventilation Hose No. 2
V–ribbed Belt Tensioner Assy
12 (122, 9)
Manifold Converter Insulator No. 1
59.5 (607, 44)
12 (122, 9)
◆ Exhaust Manifold To Head Gasket
37 (378, 27)
Exhaust Manifold Converter Sub–assy
Manifold Stay No.2
44 (449, 32)
44 (449, 32)
Manifold Stay
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non – reusable part
A60090


20 (204, 15)
Fuel Delivery Pipe w/ Injector
Knock Control Sensor
39 (398, 29)
Engine Oil Pressure Switch Assy
15 (153, 11)
Water Temperature Sensor
20 (208, 15)
Water By–pass Pipe No. 1
Oil Level Gage
9 (92, 80 in.·lbf)
9 (92, 80 in.·lbf)
◆ Gasket
Oil Level Gage Guide
◆ Oil Level Gage Guide O–ring
Thermostat
◆ Water Housing Gasket No. 1
9 (92, 80 in.·lbf)
Water Inlet
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non – reusable part
A60796