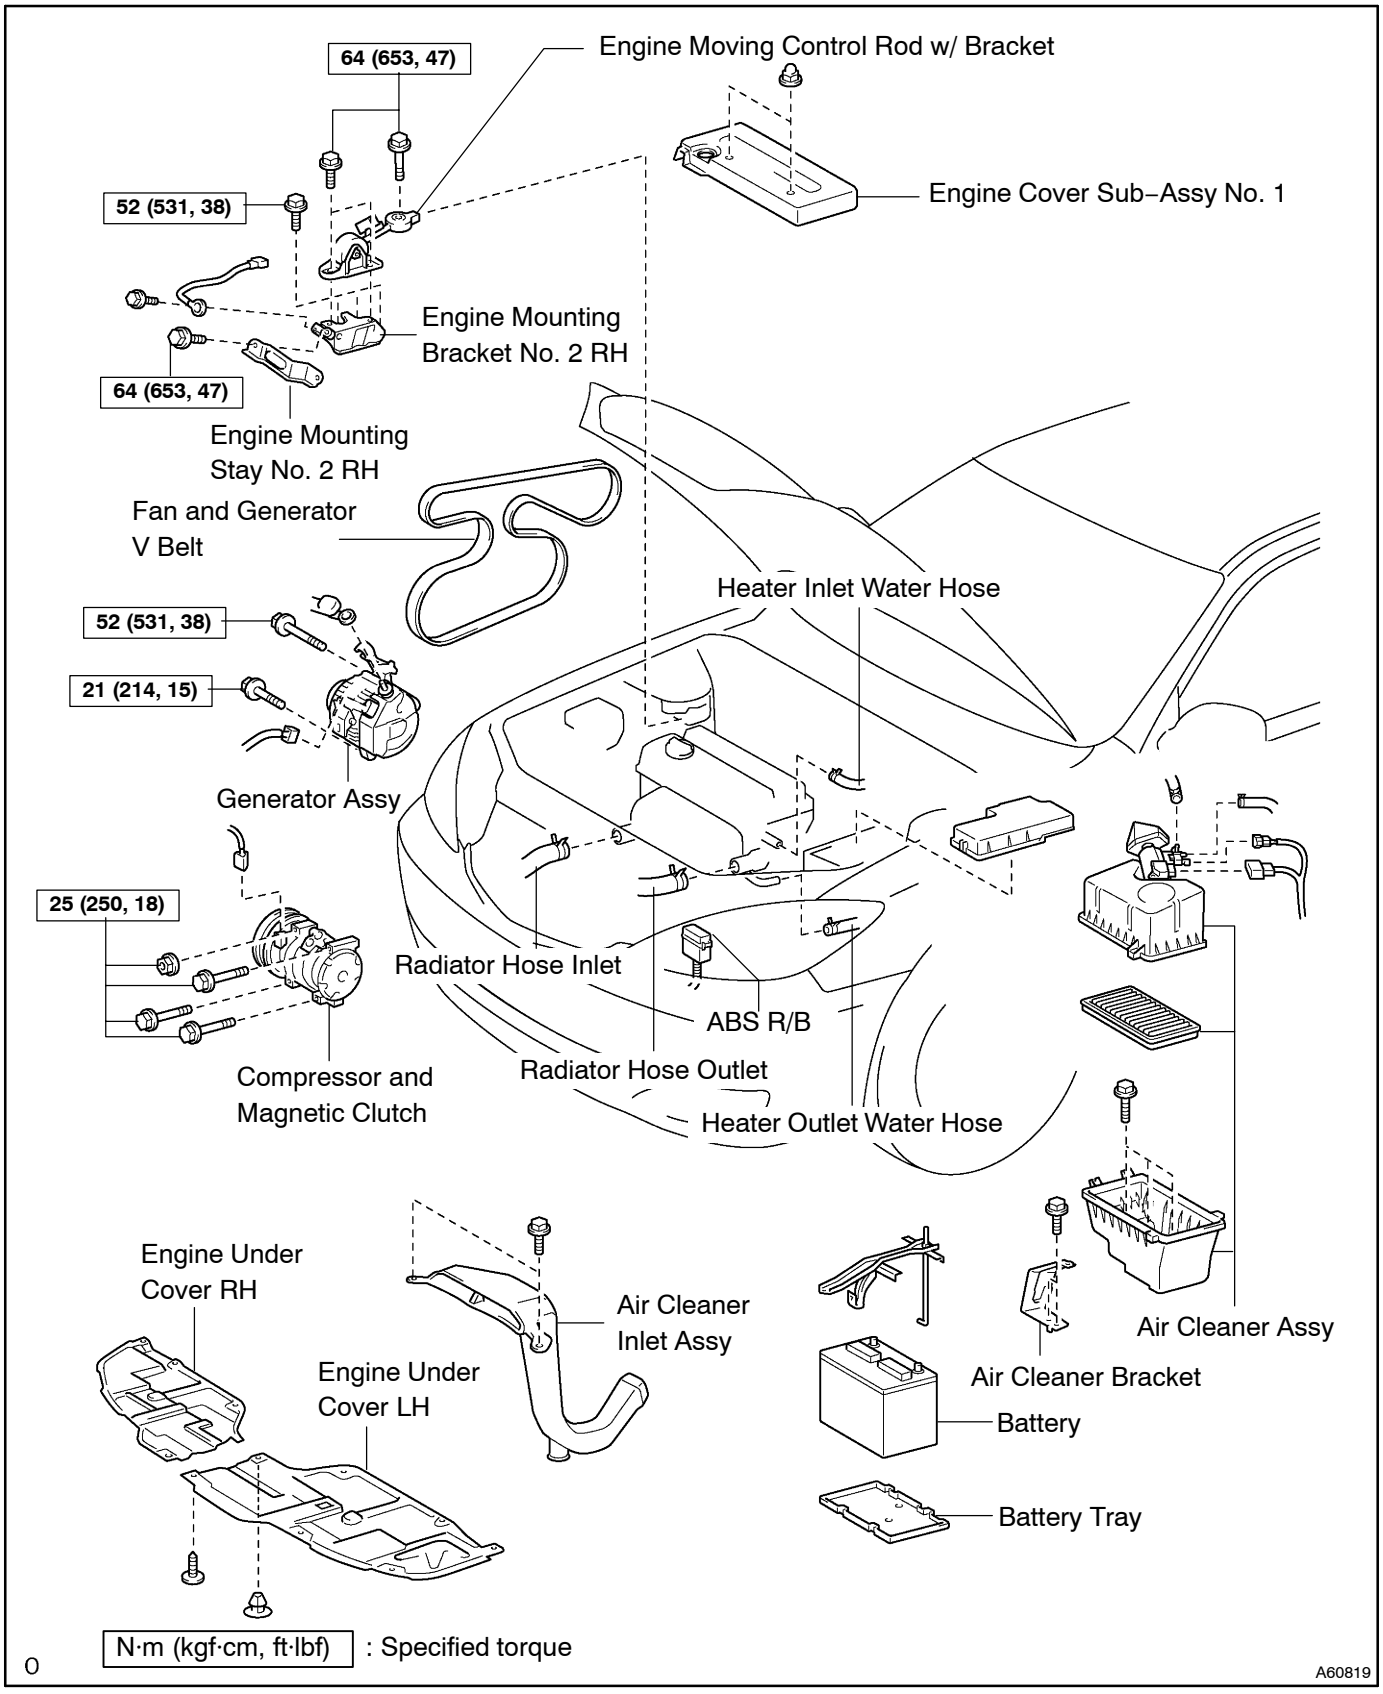
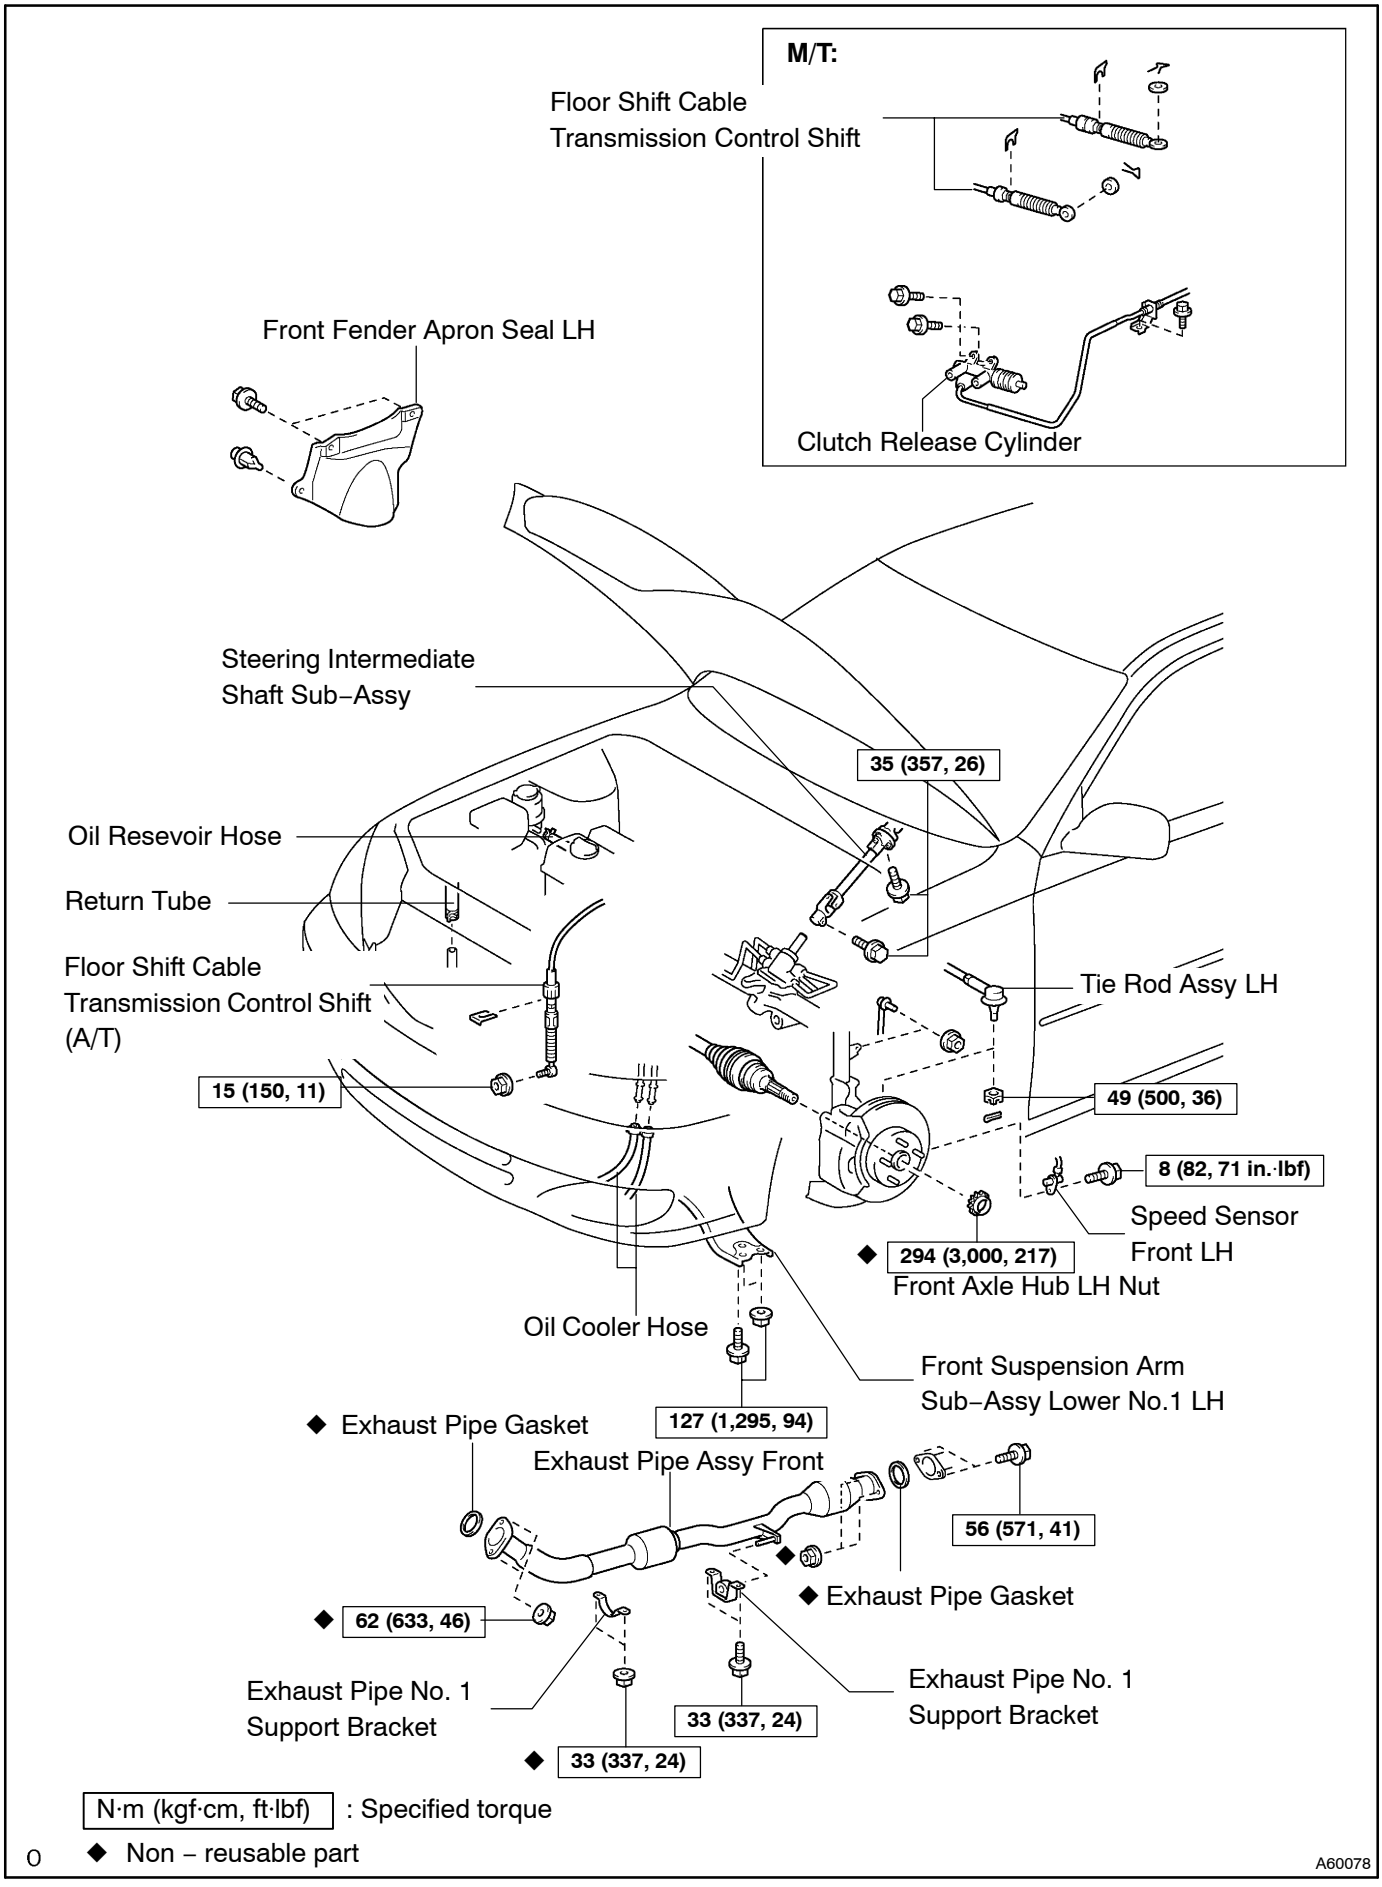
PARTIAL ENGINE ASSY (2AZ–FE)

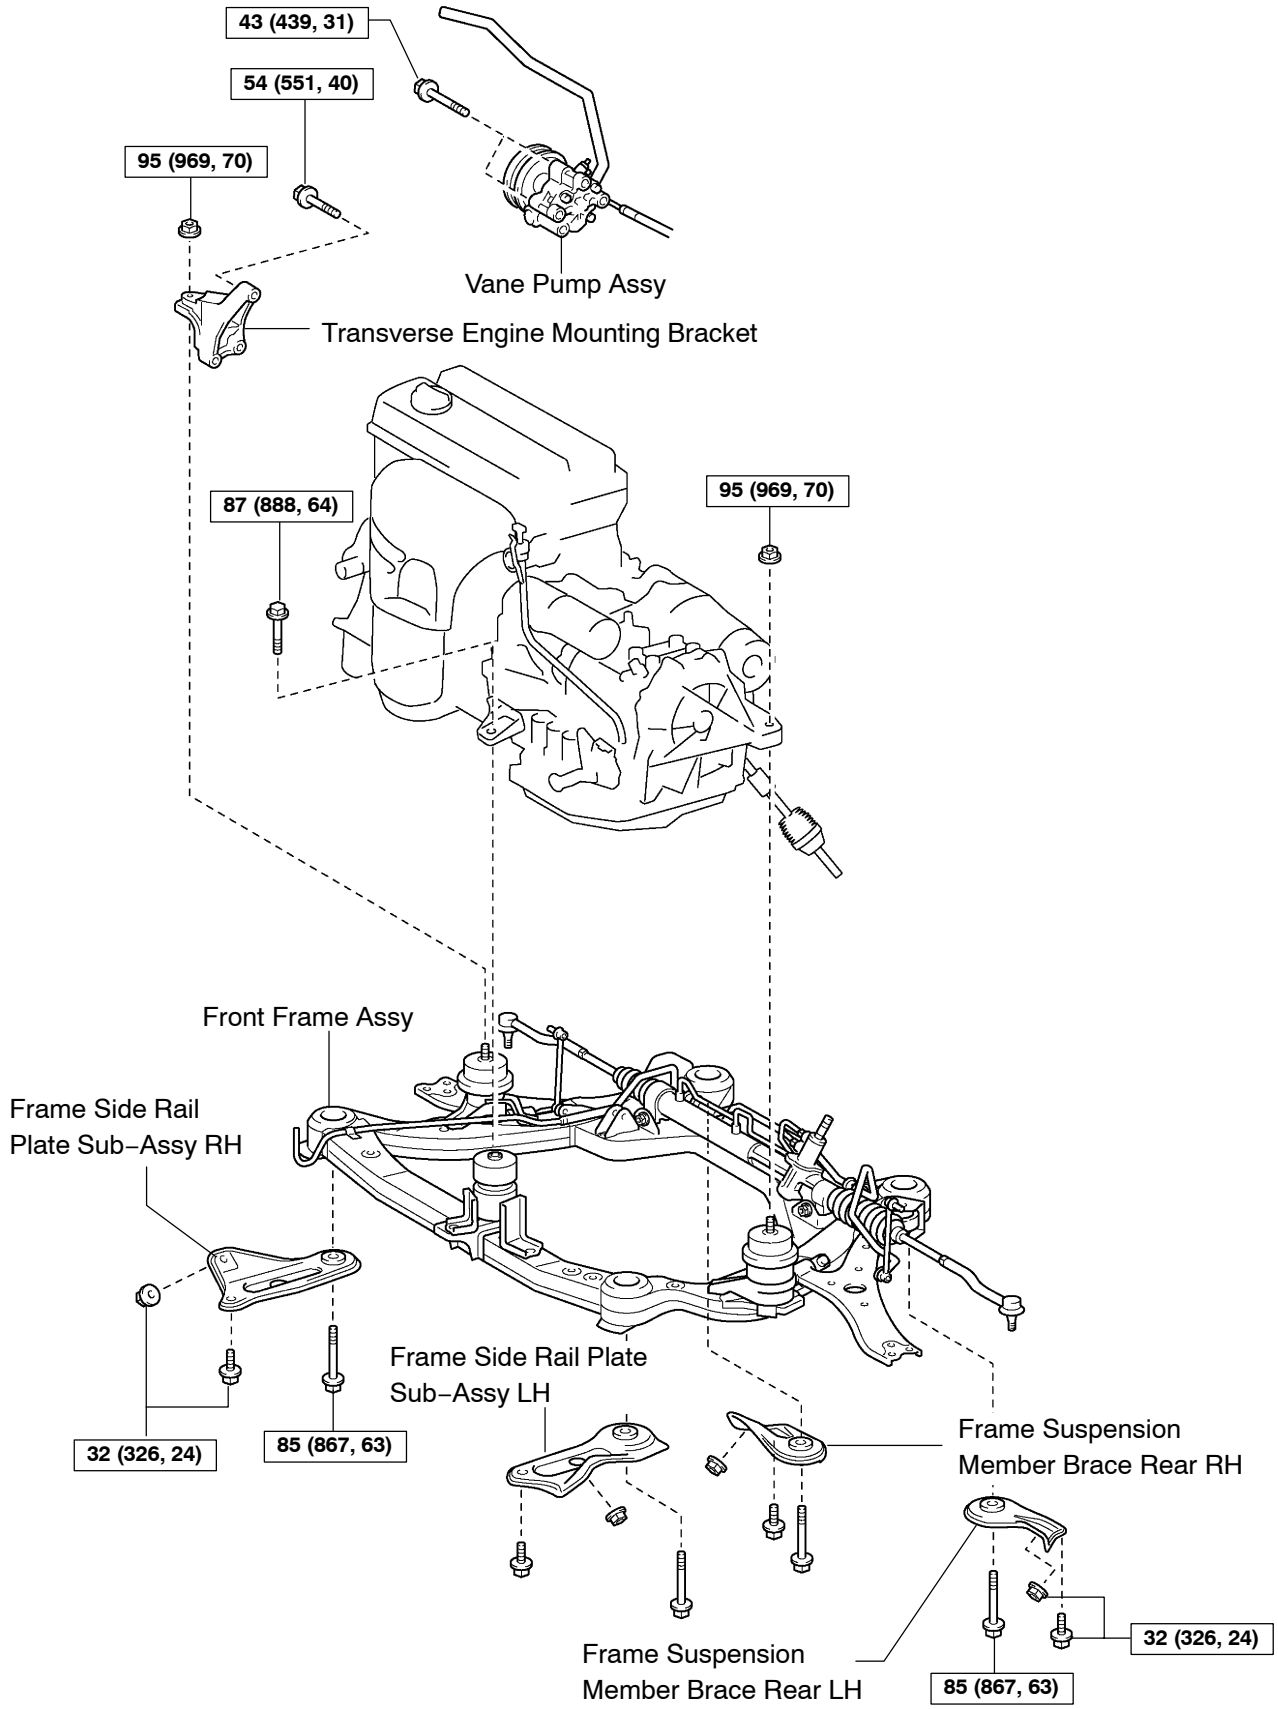
COMPONENTS

140IH–01




M/T:
Floor Shift Cable
Transmission Control Shift
Clutch Release Cylinder
Front Fender Apron Seal LH
Steering Intermediate
Shaft Sub–Assy
35 (357, 26)
Oil Resevoir Hose
Return Tube
Floor Shift Cable
Transmission Control Shift
(A/T)
Tie Rod Assy LH
15 (150, 11)
49 (500, 36)
8 (82, 71 in.·lbf)
Speed Sensor
Front LH
◆ 294 (3,000, 217)
Front Axle Hub LH Nut
Oil Cooler Hose
Front Suspension Arm
Sub–Assy Lower No.1 LH
◆ Exhaust Pipe Gasket
127 (1,295, 94)
Exhaust Pipe Assy Front
56 (571, 41)
◆ Exhaust Pipe Gasket
◆ 62 (633, 46)
Exhaust Pipe No. 1
Support Bracket
33 (337, 24)
Exhaust Pipe No. 1
Support Bracket
◆ 33 (337, 24)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non – reusable part
A60078

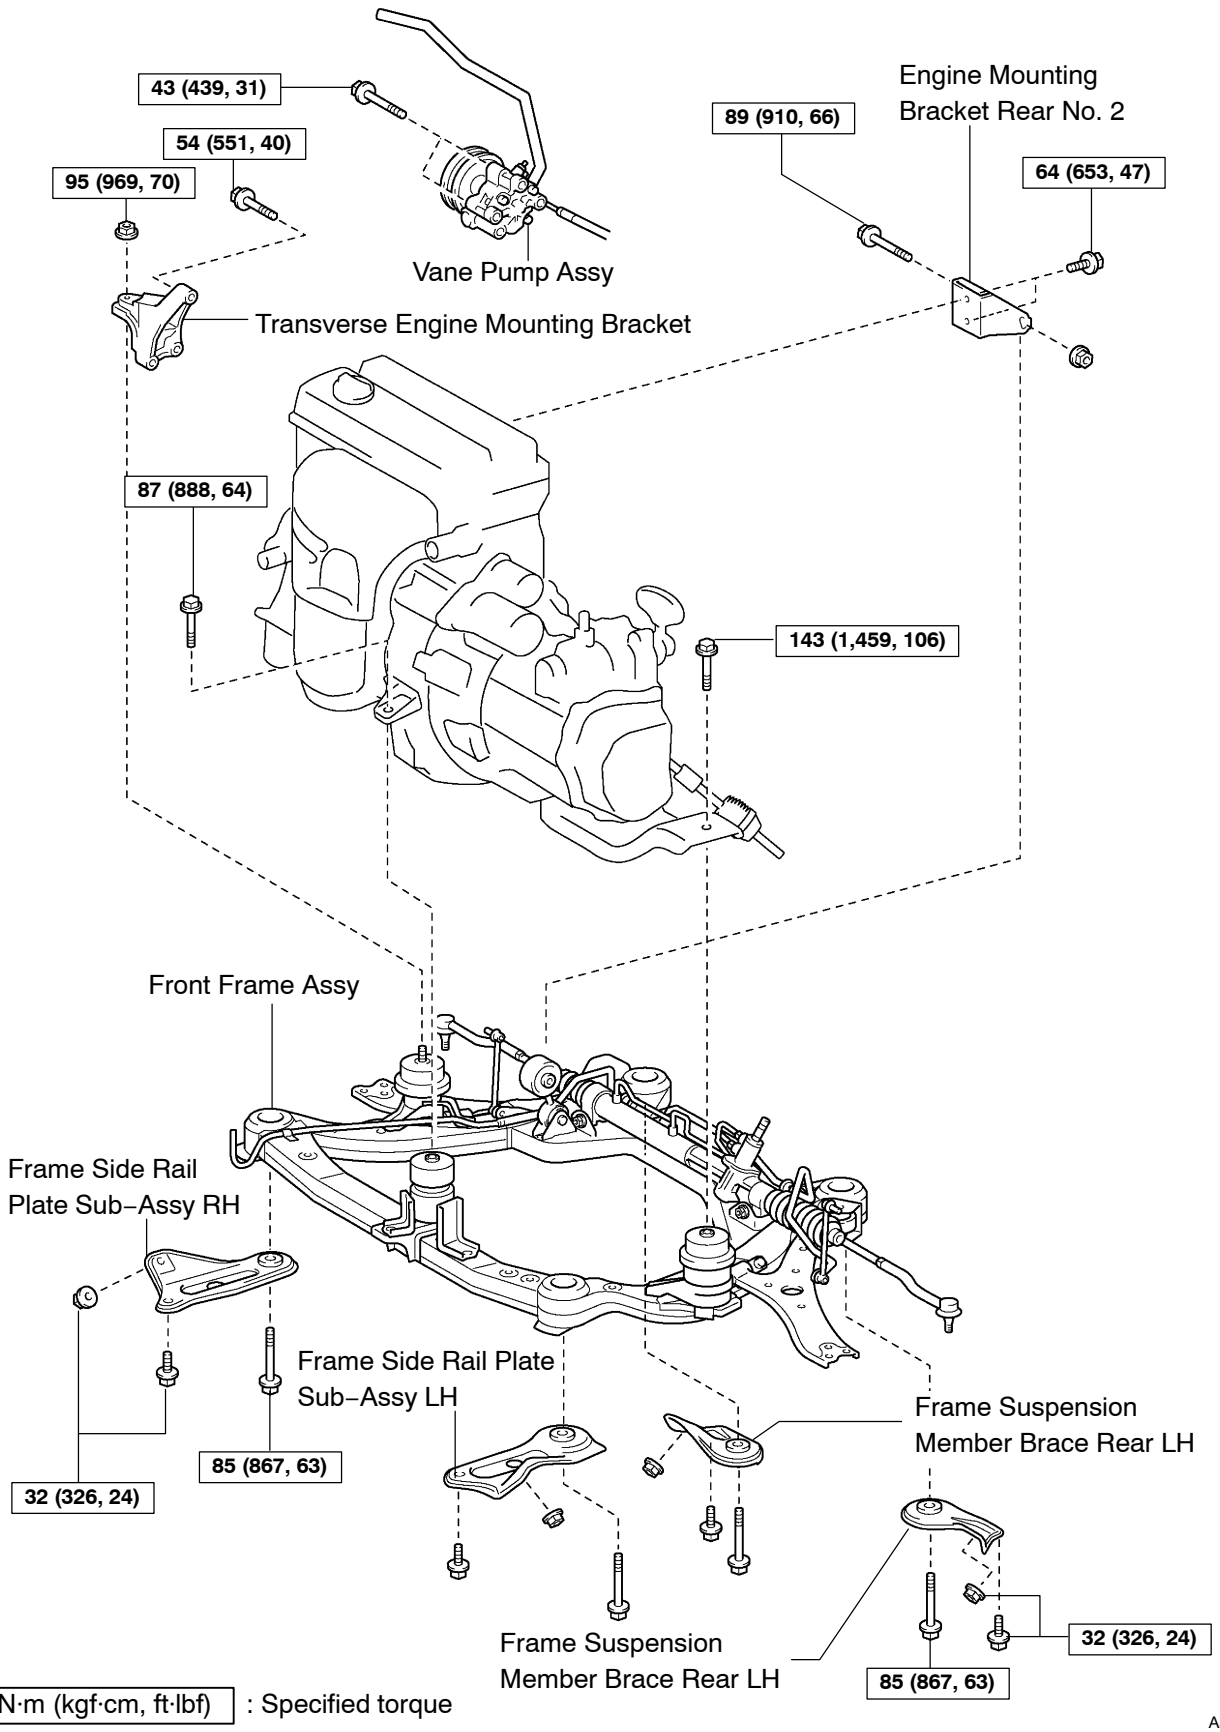
A/T:

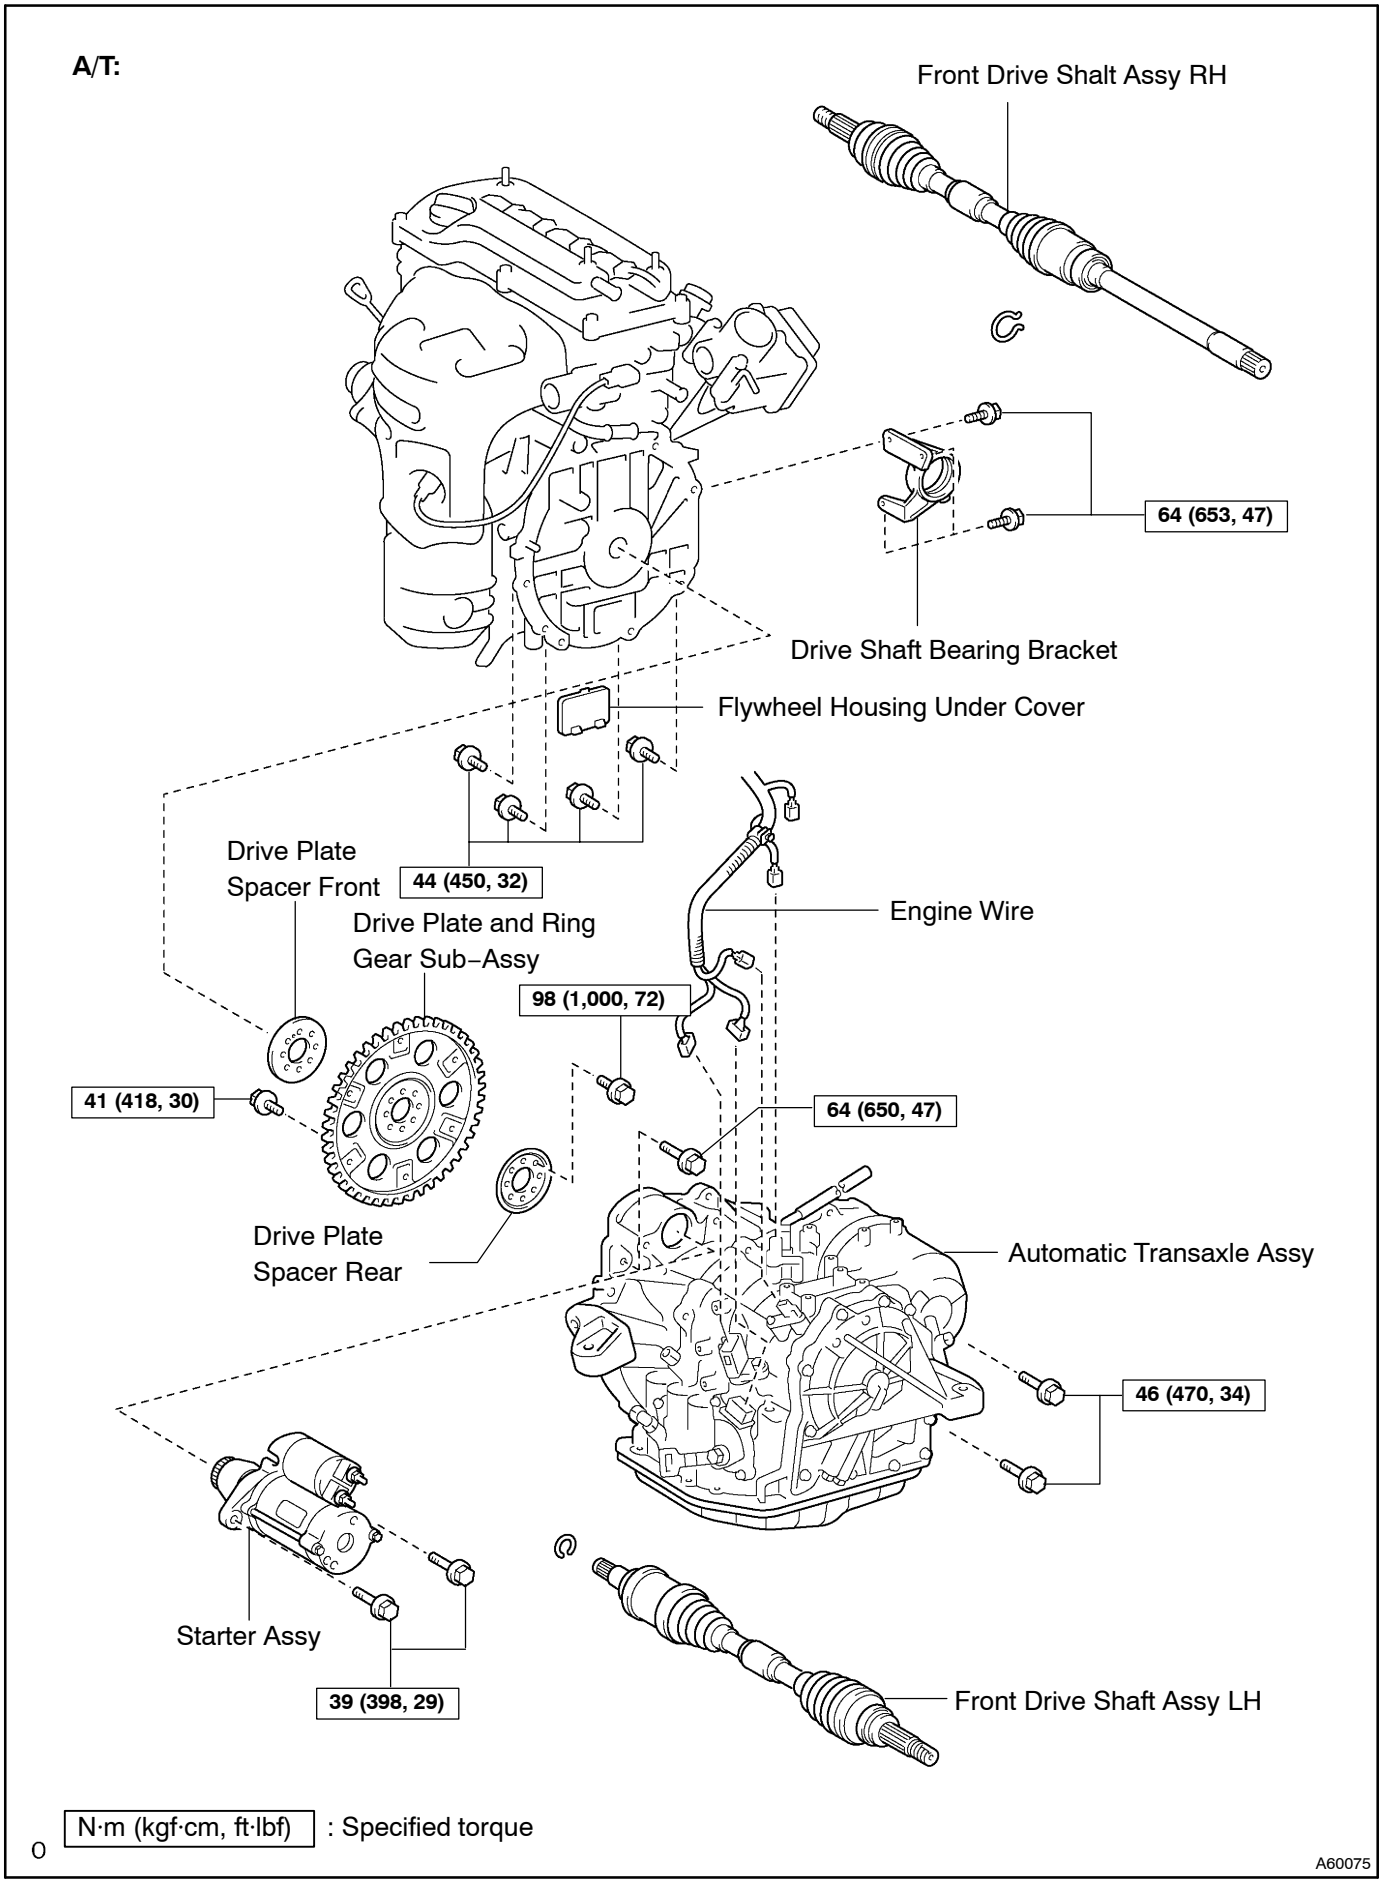


o N·m (kgf·cm, ft·lbf) : Specified torque

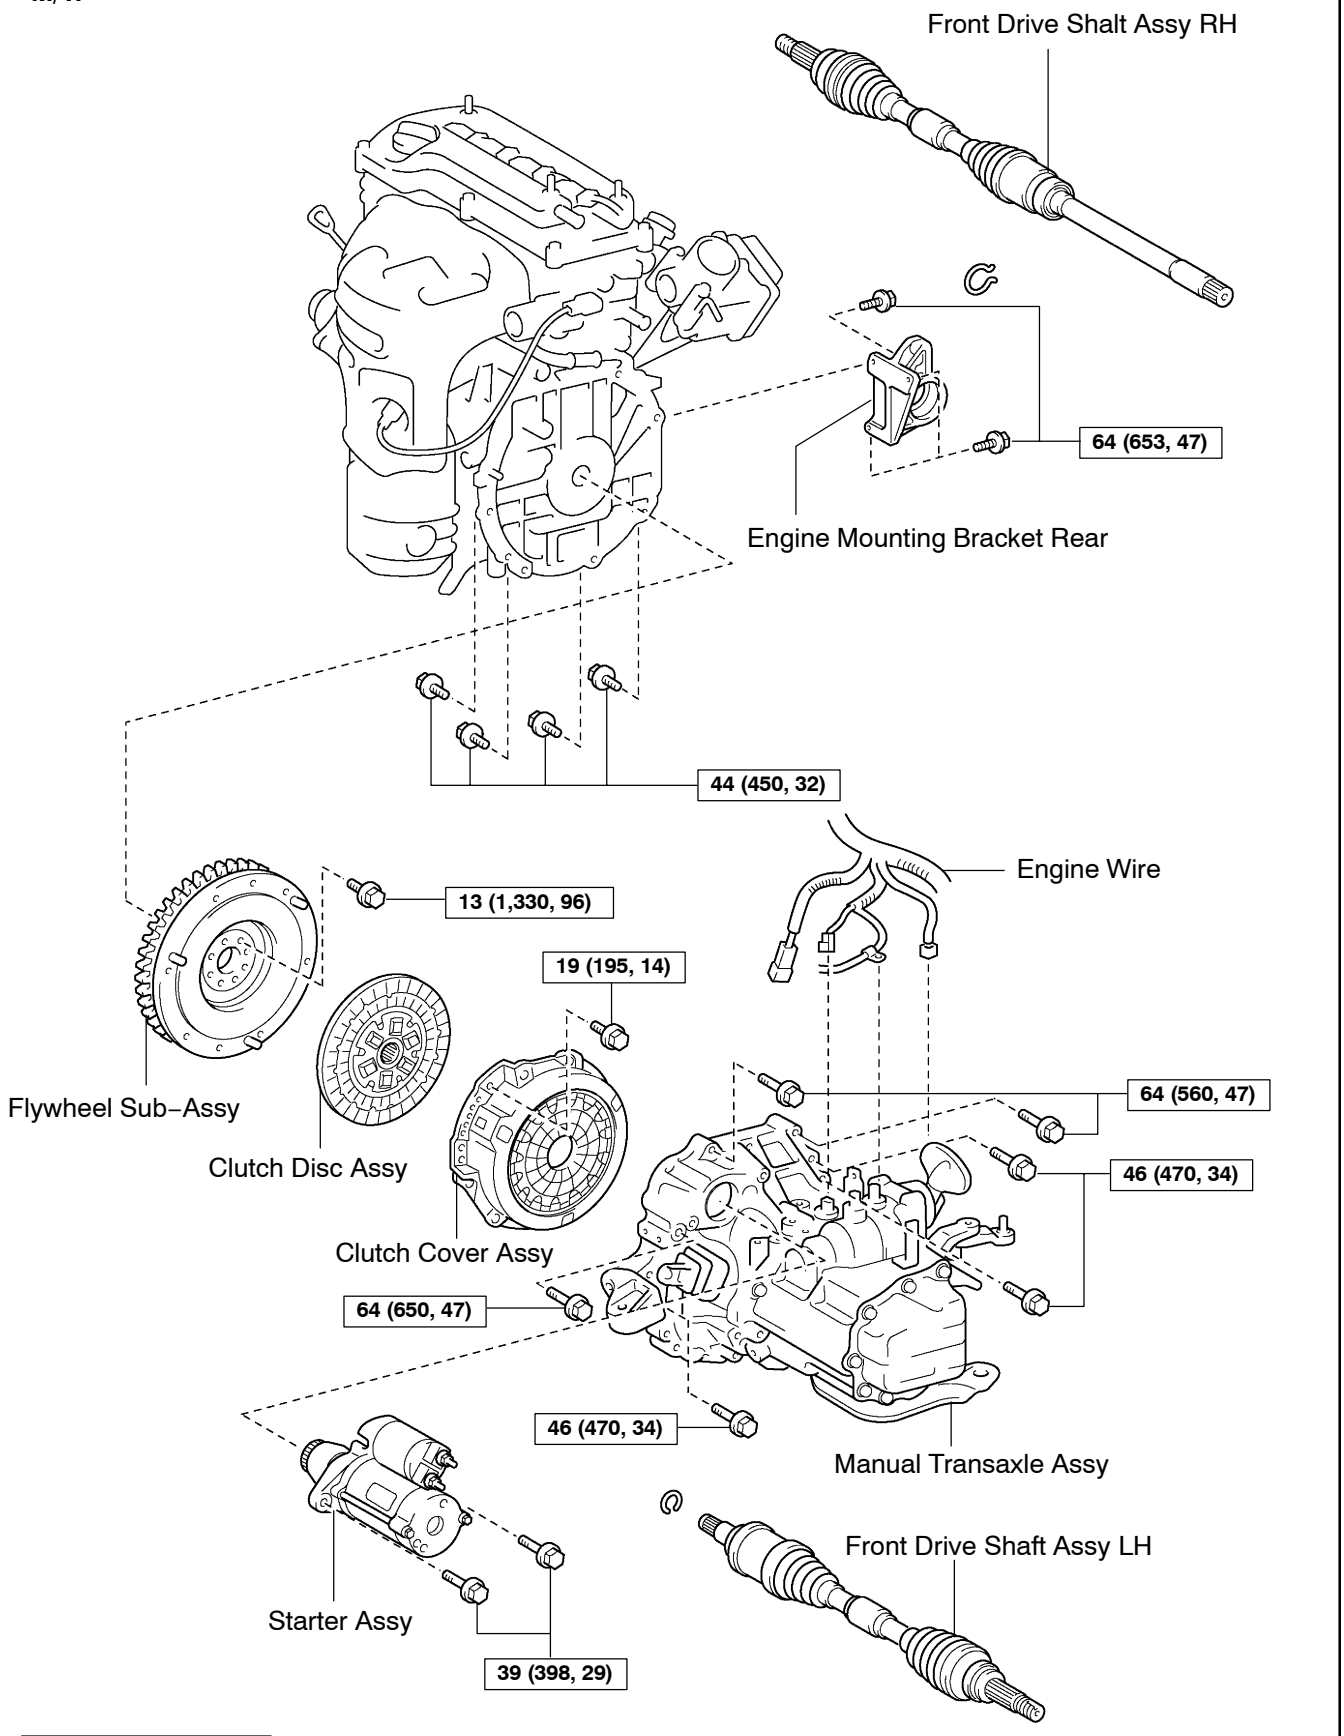
A60070

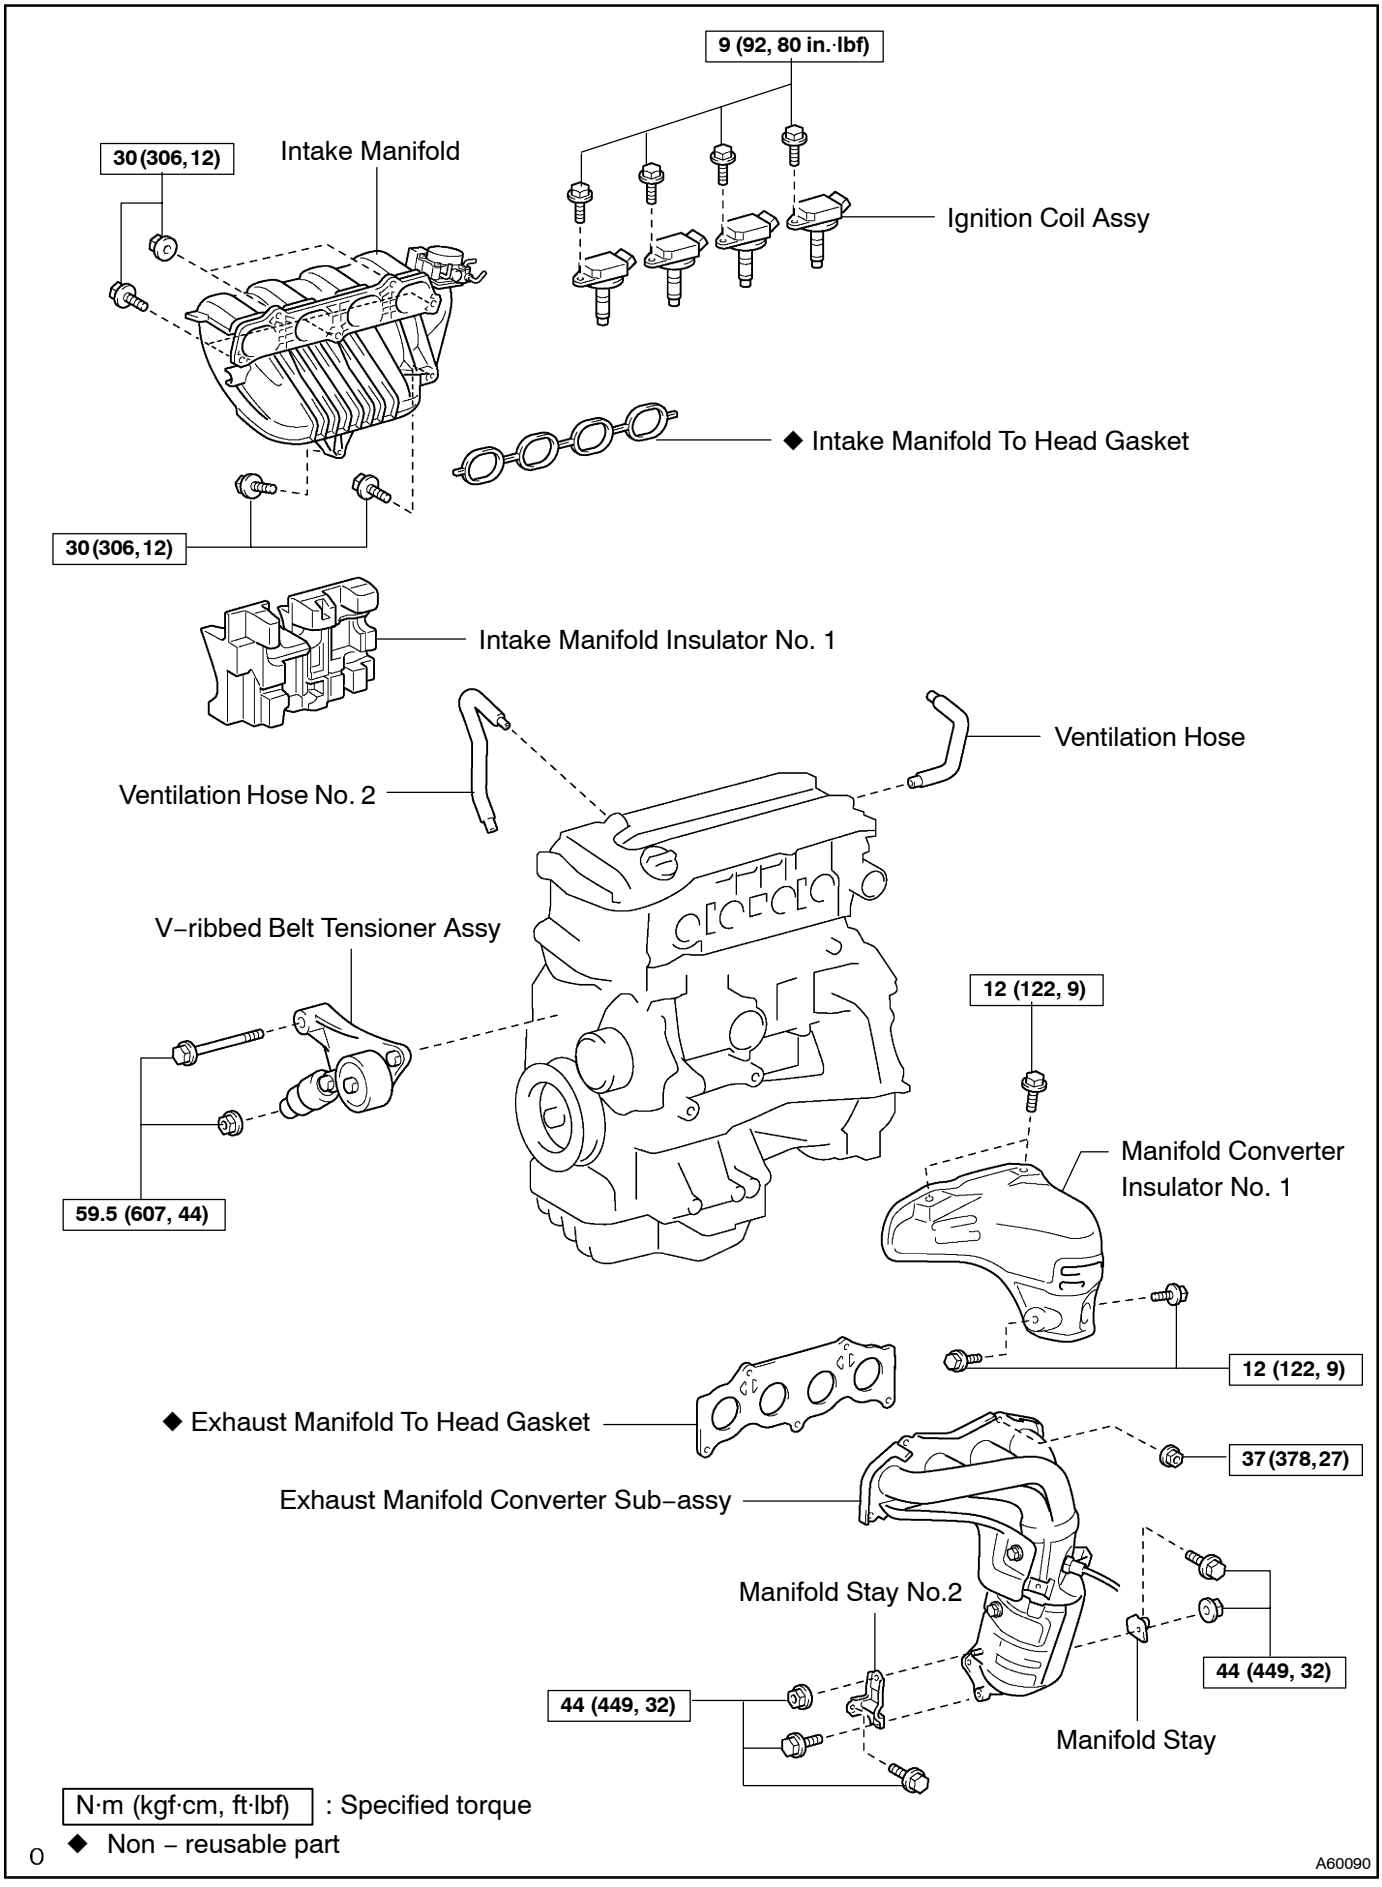
M/T:

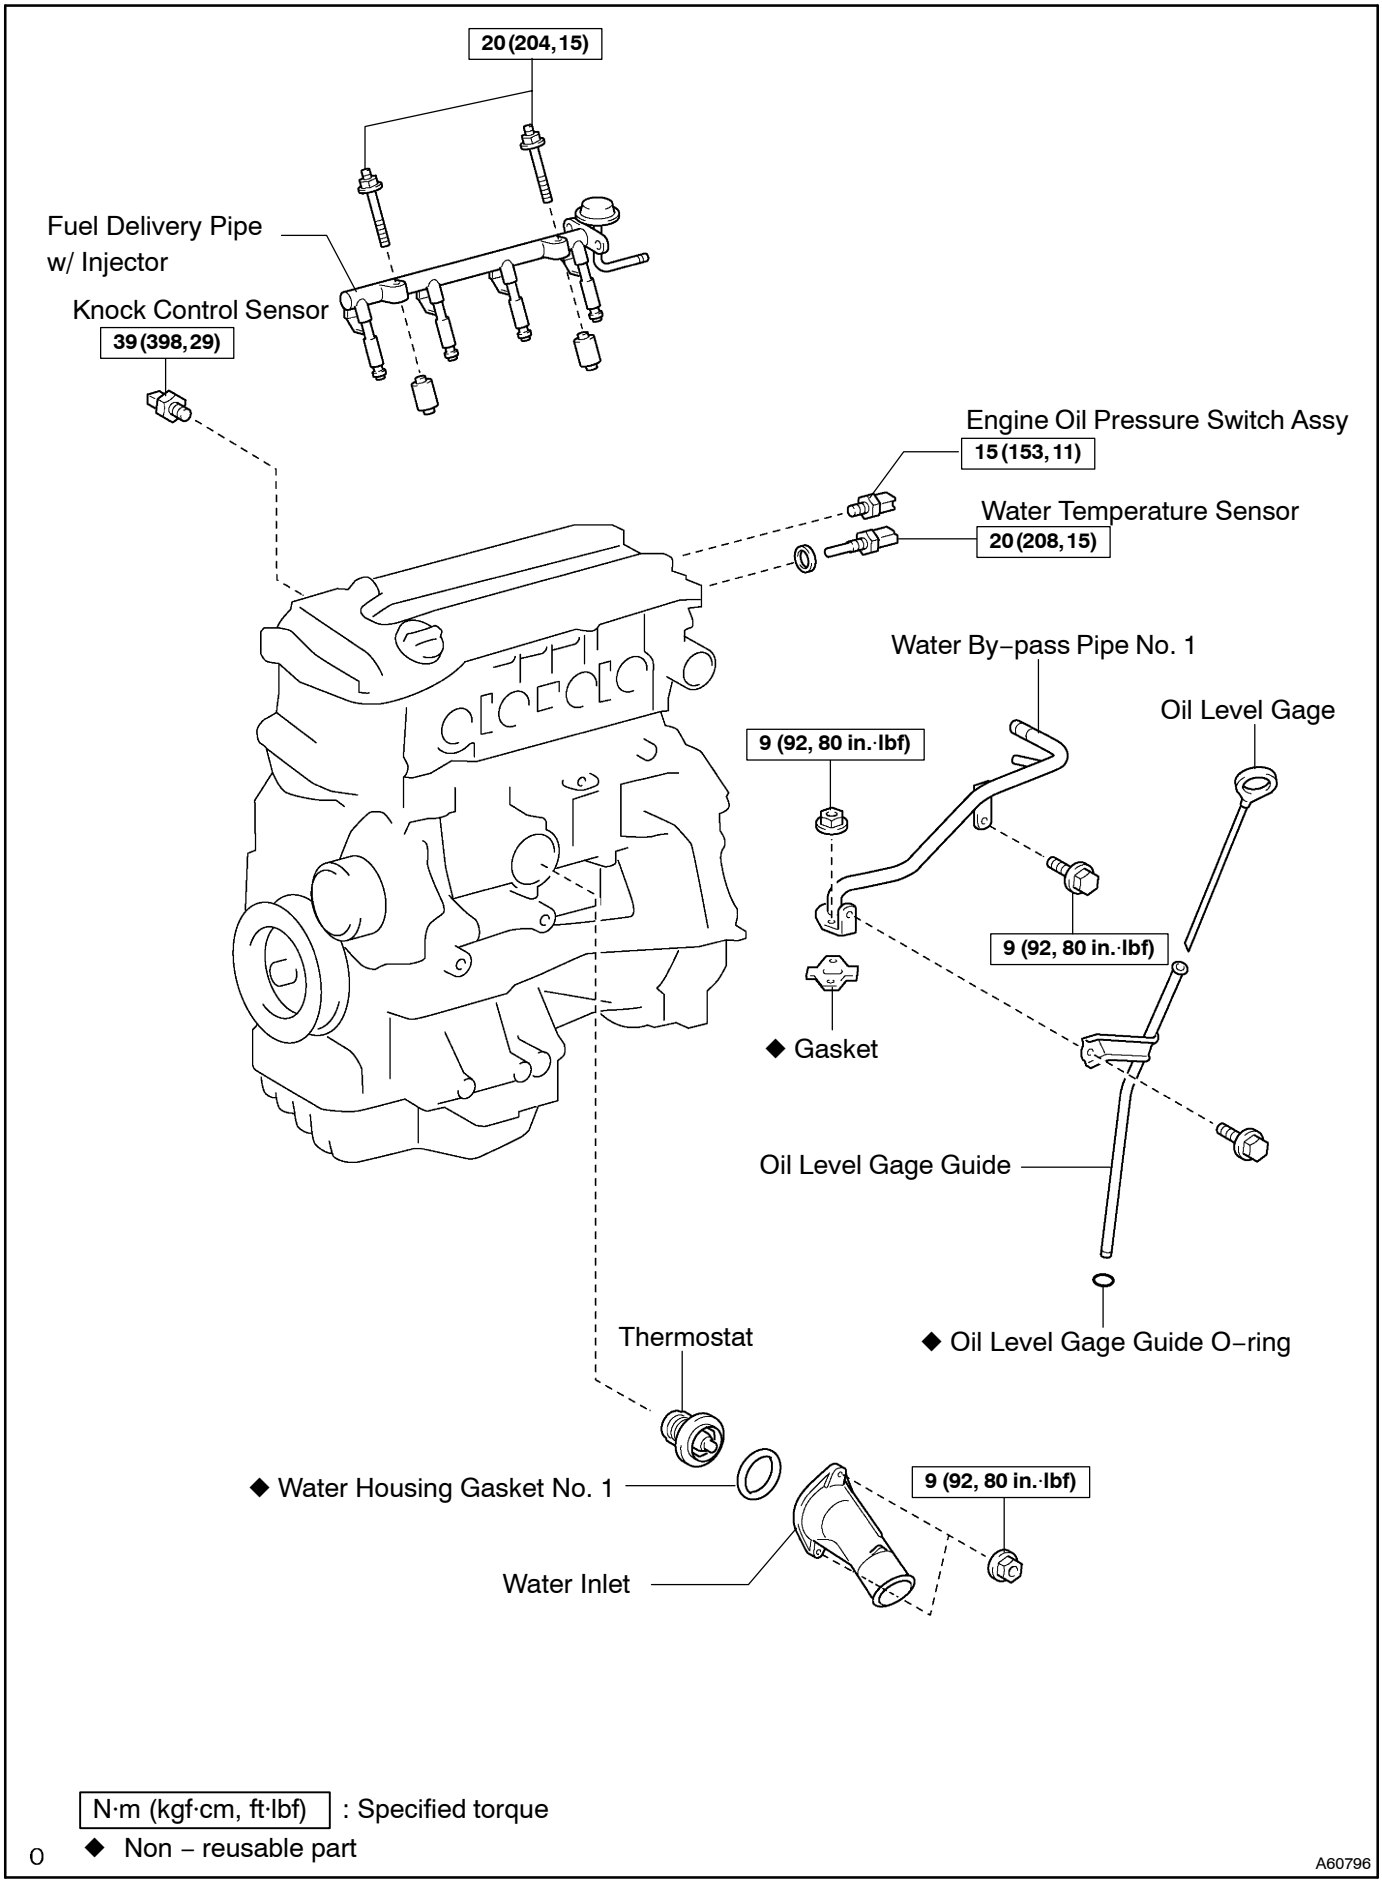

43 (439, 31)
54 (551, 40)
95 (969, 70)
Vane Pump Assy
Transverse Engine Mounting Bracket
89 (910, 66)
Engine Mounting
Bracket Rear No. 2
64 (653, 47)
87 (888, 64)
143 (1,459, 106)
Front Frame Assy
Frame Side Rail
Plate Sub–Assy RH
Frame Side Rail Plate
Sub–Assy LH
Frame Suspension
Member Brace Rear LH
32 (326, 24)
85 (867, 63)
Frame Suspension
Member Brace Rear LH
32 (326, 24)
85 (867, 63)
N·m (kgf·cm, ft·lbf) : Specified torque
A59886


A/T:
Front Drive Shalt Assy RH
64 (653, 47)
Drive Shaft Bearing Bracket
Flywheel Housing Under Cover
Drive Plate
Spacer Front
44 (450, 32)
Drive Plate and Ring
Gear Sub–Assy
Engine Wire
98 (1,000, 72)
41 (418, 30)
64 (650, 47)
Drive Plate
Spacer Rear
Automatic Transaxle Assy
46 (470, 34)
Starter Assy
39 (398, 29)
Front Drive Shaft Assy LH
N·m (kgf·cm, ft·lbf) : Specified torque
A60075

M/T:


Front Drive Shalt Assy RH
64 (653, 47)
Engine Mounting Bracket Rear
44 (450, 32)
Engine Wire
13 (1,330, 96)
19 (195, 14)
Flywheel Sub–Assy
Clutch Disc Assy
Clutch Cover Assy
64 (560, 47)
46 (470, 34)
64 (650, 47)
46 (470, 34)
Manual Transaxle Assy
Front Drive Shaft Assy LH
Starter Assy
39 (398, 29)
N·m (kgf·cm, ft·lbf) : Specified torque
A60074


9 (92, 80 in.·lbf)
30 (306, 12)
Intake Manifold
Ignition Coil Assy
◆ Intake Manifold To Head Gasket
30 (306, 12)
Intake Manifold Insulator No. 1
Ventilation Hose
Ventilation Hose No. 2
V–ribbed Belt Tensioner Assy
12 (122, 9)
Manifold Converter Insulator No. 1
59.5 (607, 44)
12 (122, 9)
◆ Exhaust Manifold To Head Gasket
37 (378, 27)
Exhaust Manifold Converter Sub–assy
Manifold Stay No.2
44 (449, 32)
44 (449, 32)
Manifold Stay
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non – reusable part
A60090


20 (204, 15)
Fuel Delivery Pipe w/ Injector
Knock Control Sensor
39 (398, 29)
Engine Oil Pressure Switch Assy
15 (153, 11)
Water Temperature Sensor
20 (208, 15)
Water By–pass Pipe No. 1
Oil Level Gage
9 (92, 80 in.·lbf)
9 (92, 80 in.·lbf)
◆ Gasket
Oil Level Gage Guide
◆ Oil Level Gage Guide O–ring
Thermostat
◆ Water Housing Gasket No. 1
9 (92, 80 in.·lbf)
Water Inlet
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non – reusable part
A60796