


PARTIAL ENGINE ASSY (1MZ–FE)


COMPONENTS

140I1–02

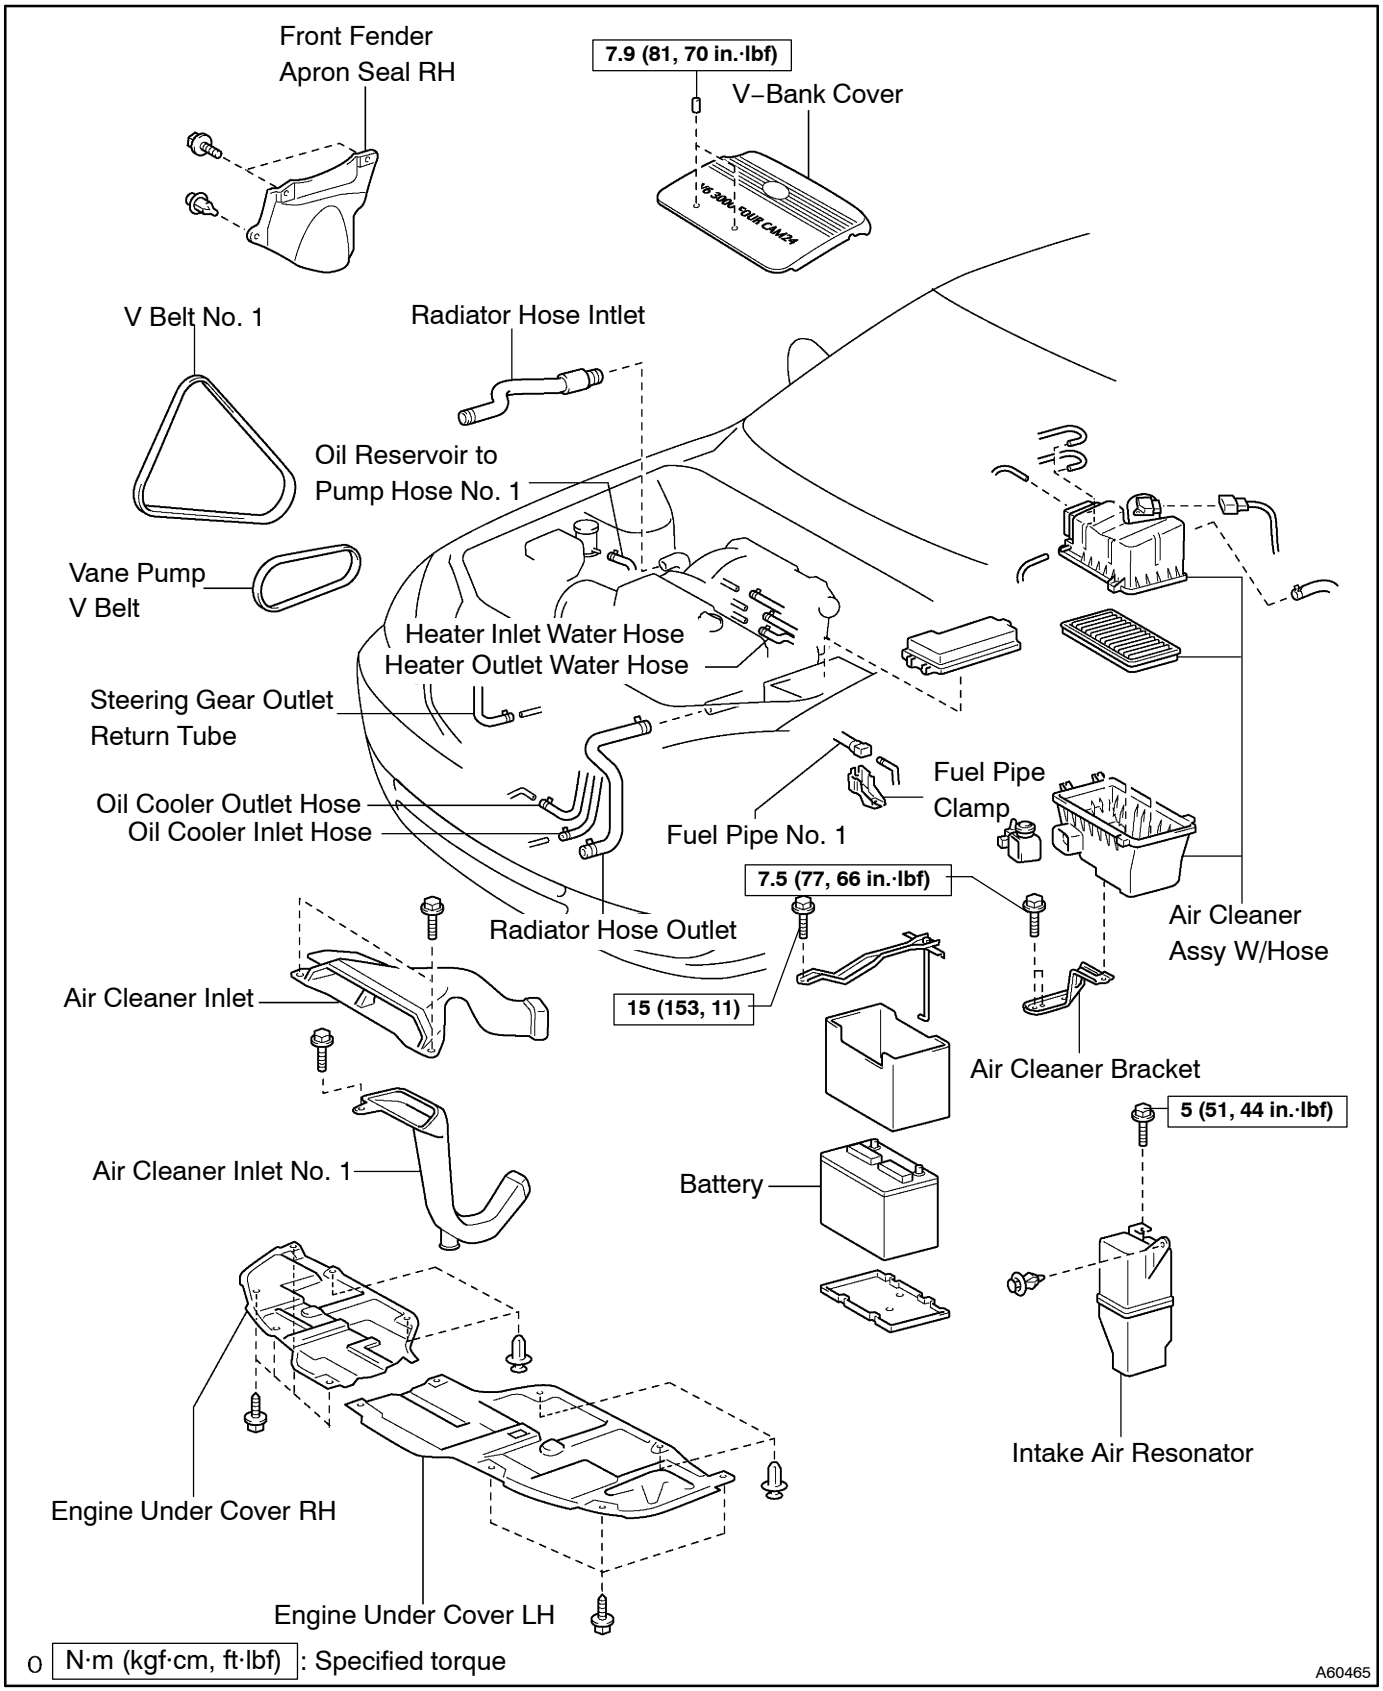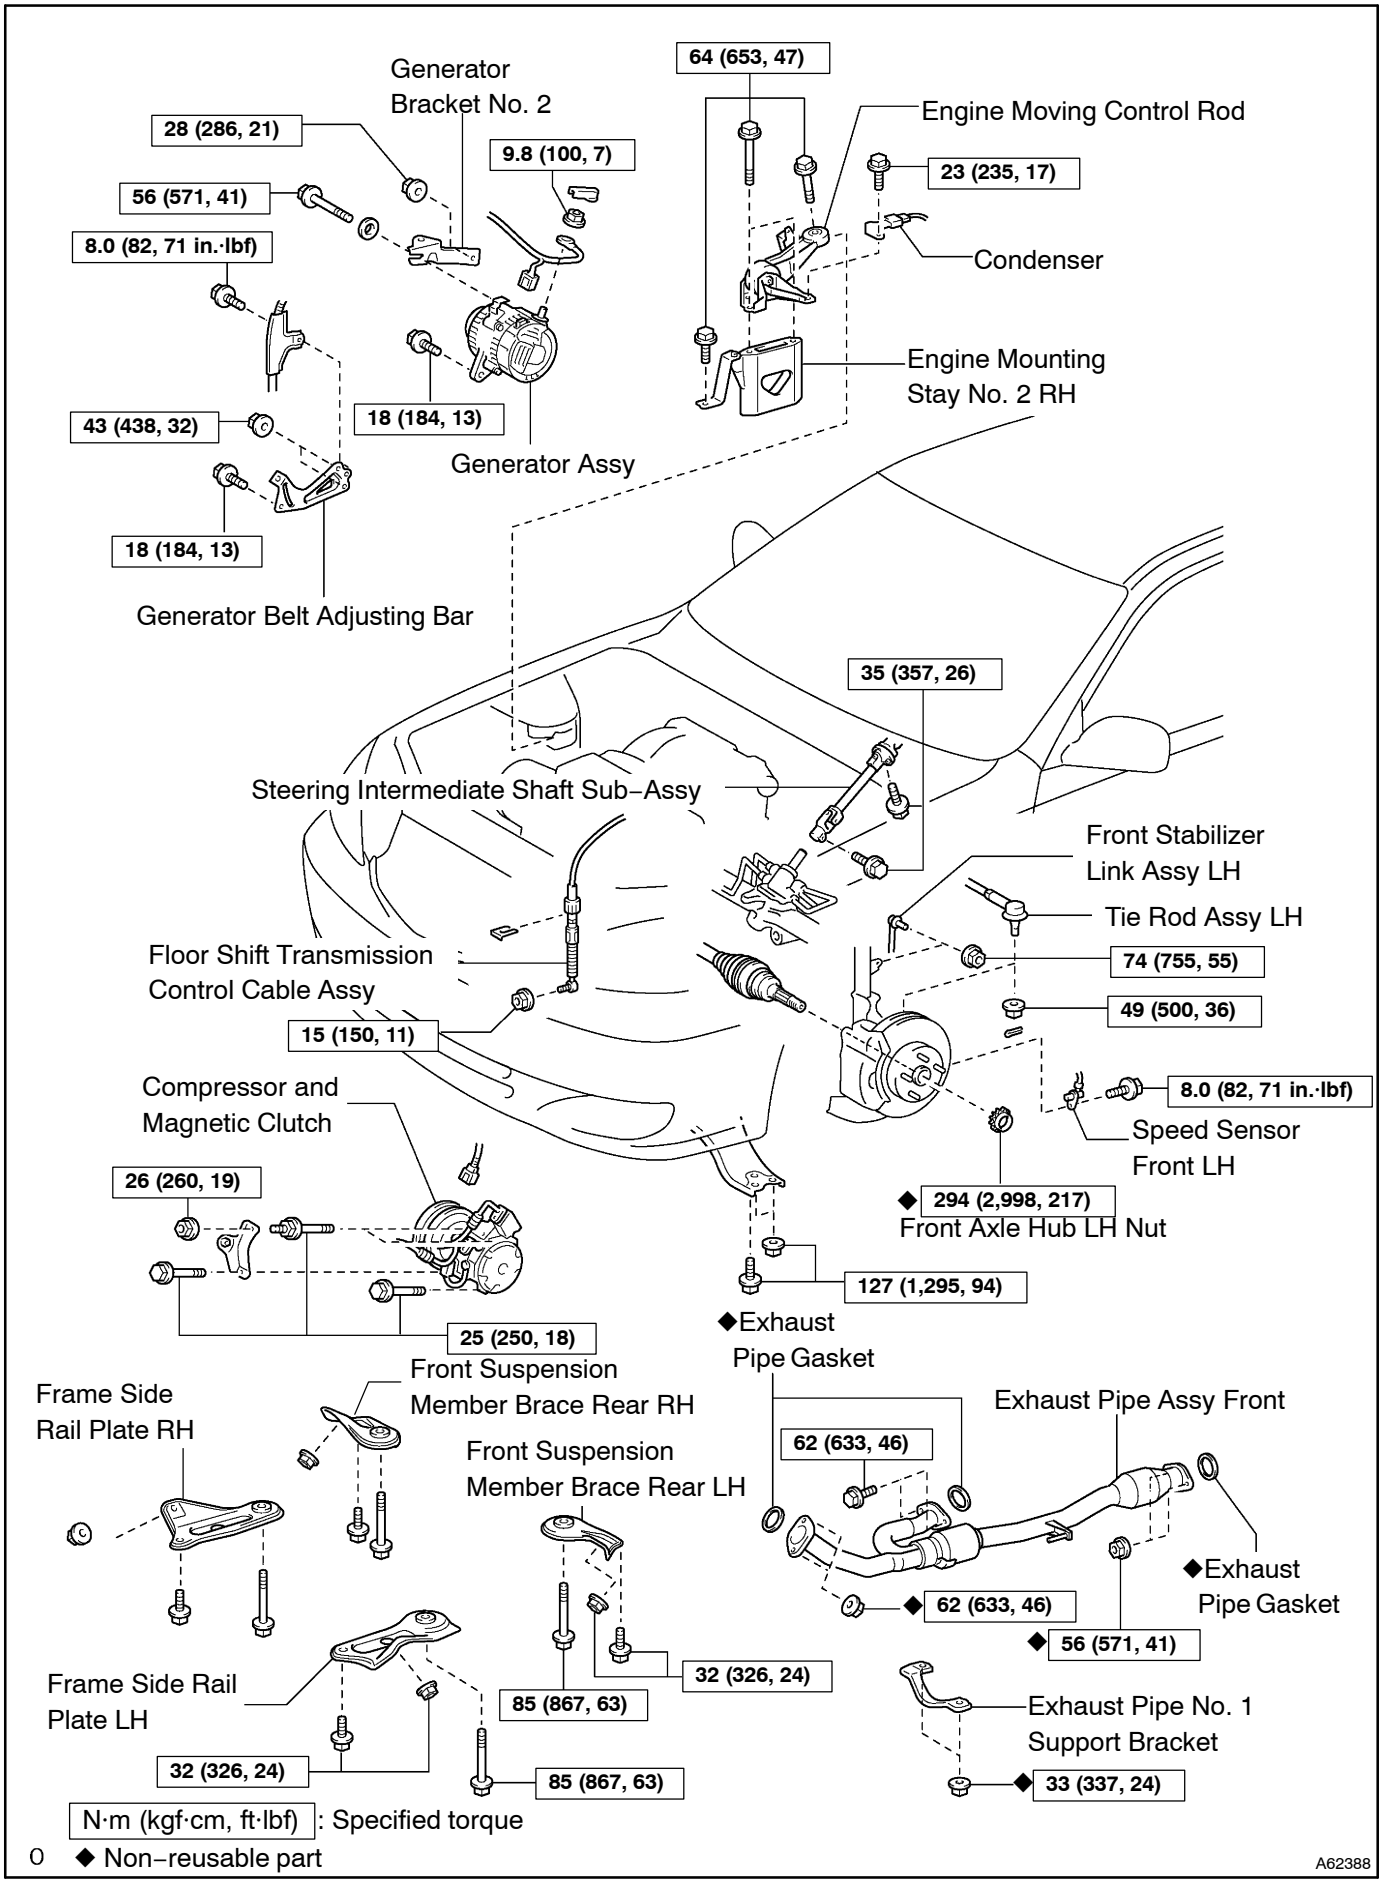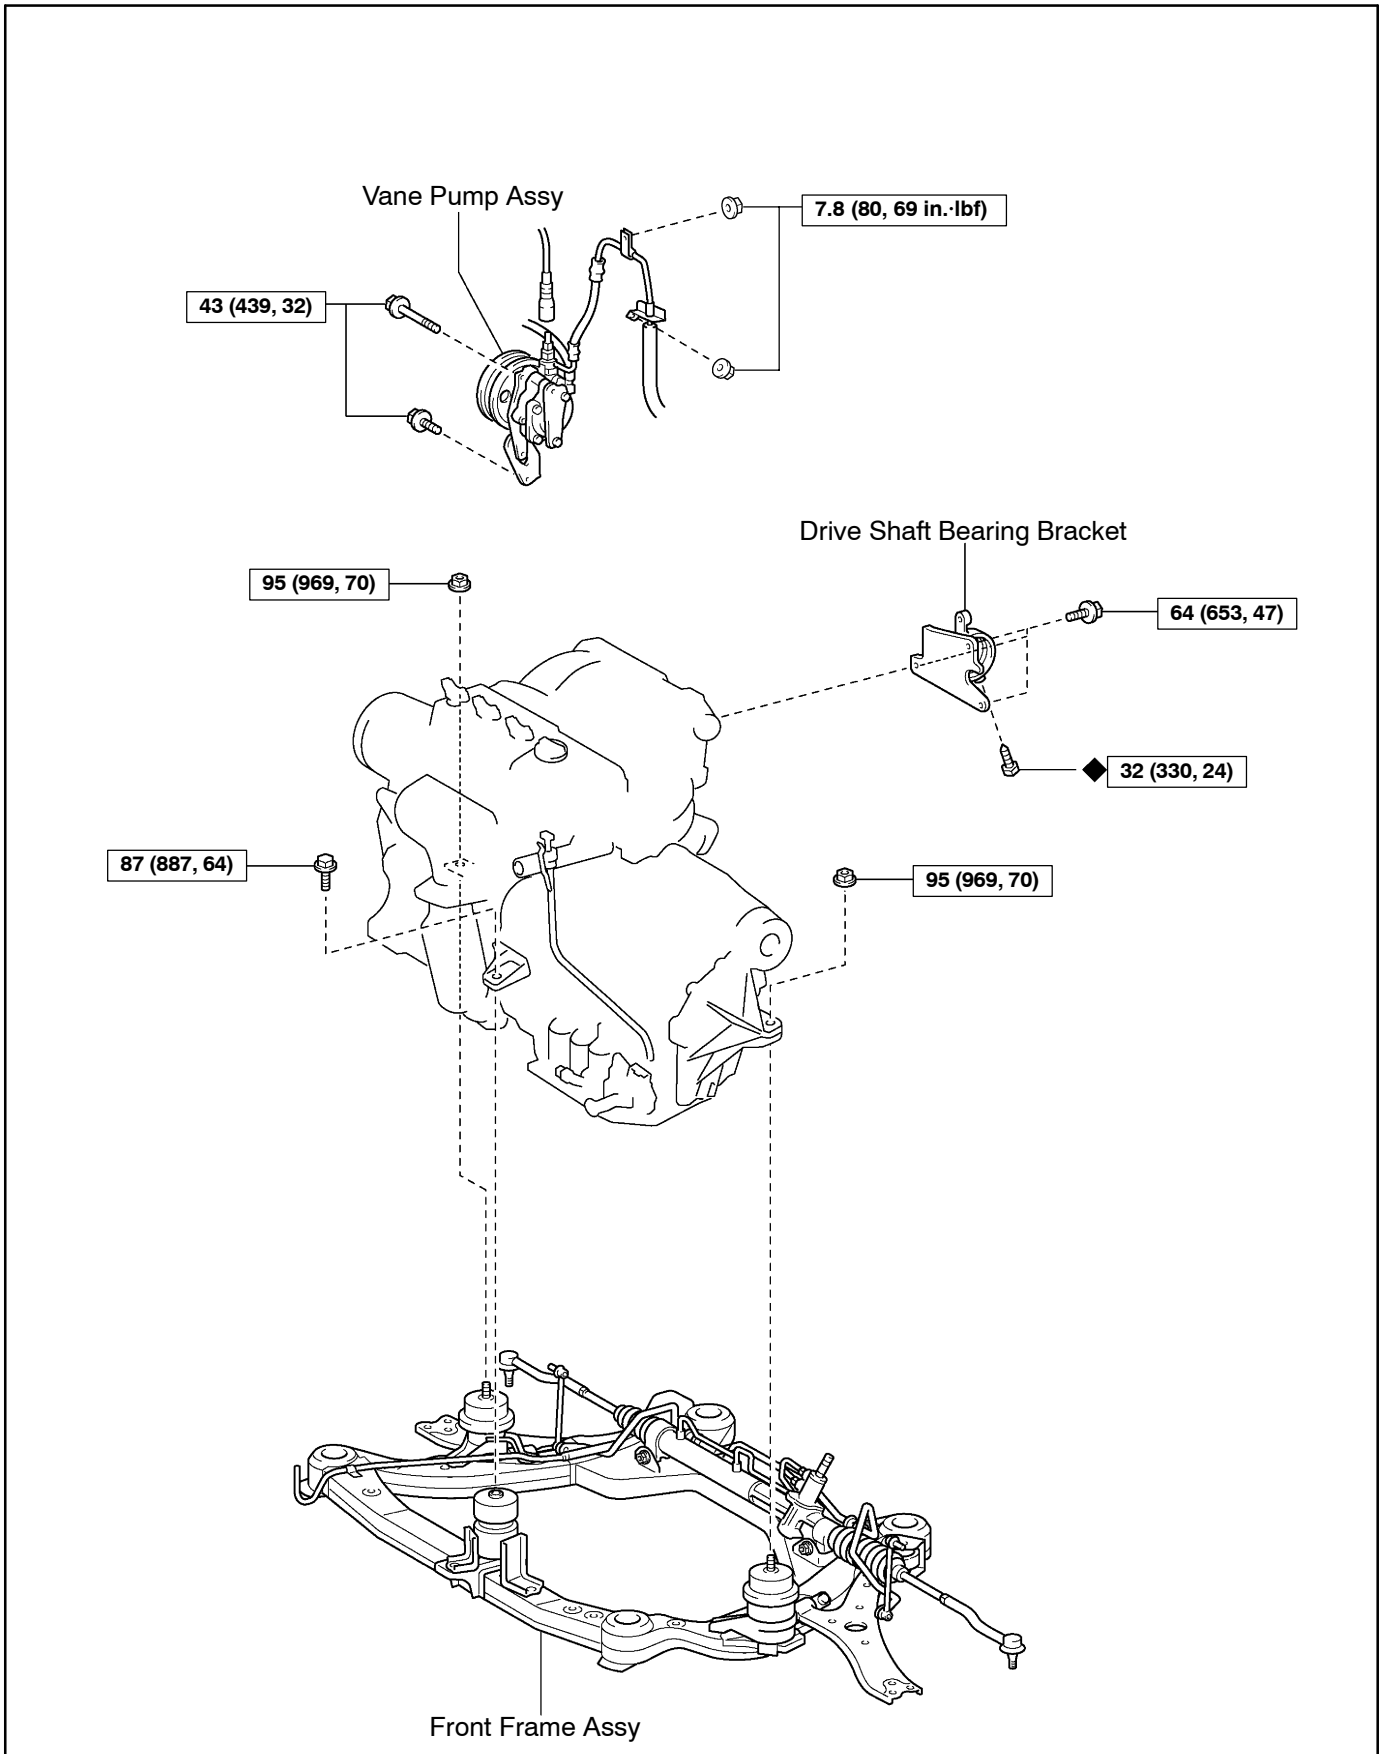


Generator Bracket No. 2
28 (286, 21)
9.8 (100, 7)
56 (571, 41)
8.0 (82, 71 in.·lbf)
43 (438, 32)
18 (184, 13)
18 (184, 13)
Generator Belt Adjusting Bar
Generator Assy
64 (653, 47)
Engine Moving Control Rod
23 (235, 17)
Condenser
Engine Mounting Stay No. 2 RH
35 (357, 26)
Steering Intermediate Shaft Sub–Assy
Front Stabilizer Link Assy LH
Tie Rod Assy LH
74 (755, 55)
49 (500, 36)
Floor Shift Transmission Control Cable Assy
15 (150, 11)
Compressor and Magnetic Clutch
26 (260, 19)
25 (250, 18)
8.0 (82, 71 in.·lbf)
Speed Sensor Front LH
◆ 294 (2,998, 217)
Front Axle Hub LH Nut
127 (1,295, 94)
◆Exhaust Pipe Gasket
Frame Side Rail Plate RH
Front Suspension Member Brace Rear RH
Front Suspension Member Brace Rear LH
Exhaust Pipe Assy Front
62 (633, 46)
◆ 62 (633, 46)
◆Exhaust Pipe Gasket
◆ 56 (571, 41)
Frame Side Rail Plate LH
32 (326, 24)
85 (867, 63)
85 (867, 63)
32 (326, 24)
Exhaust Pipe No. 1 Support Bracket
◆ 33 (337, 24)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A62388


Vane Pump Assy
7.8 (80, 69 in.·lbf)
43 (439, 32)
Drive Shaft Bearing Bracket
95 (969, 70)
64 (653, 47)
◆ 32 (330, 24)
87 (887, 64)
95 (969, 70)
Front Frame Assy
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A60467

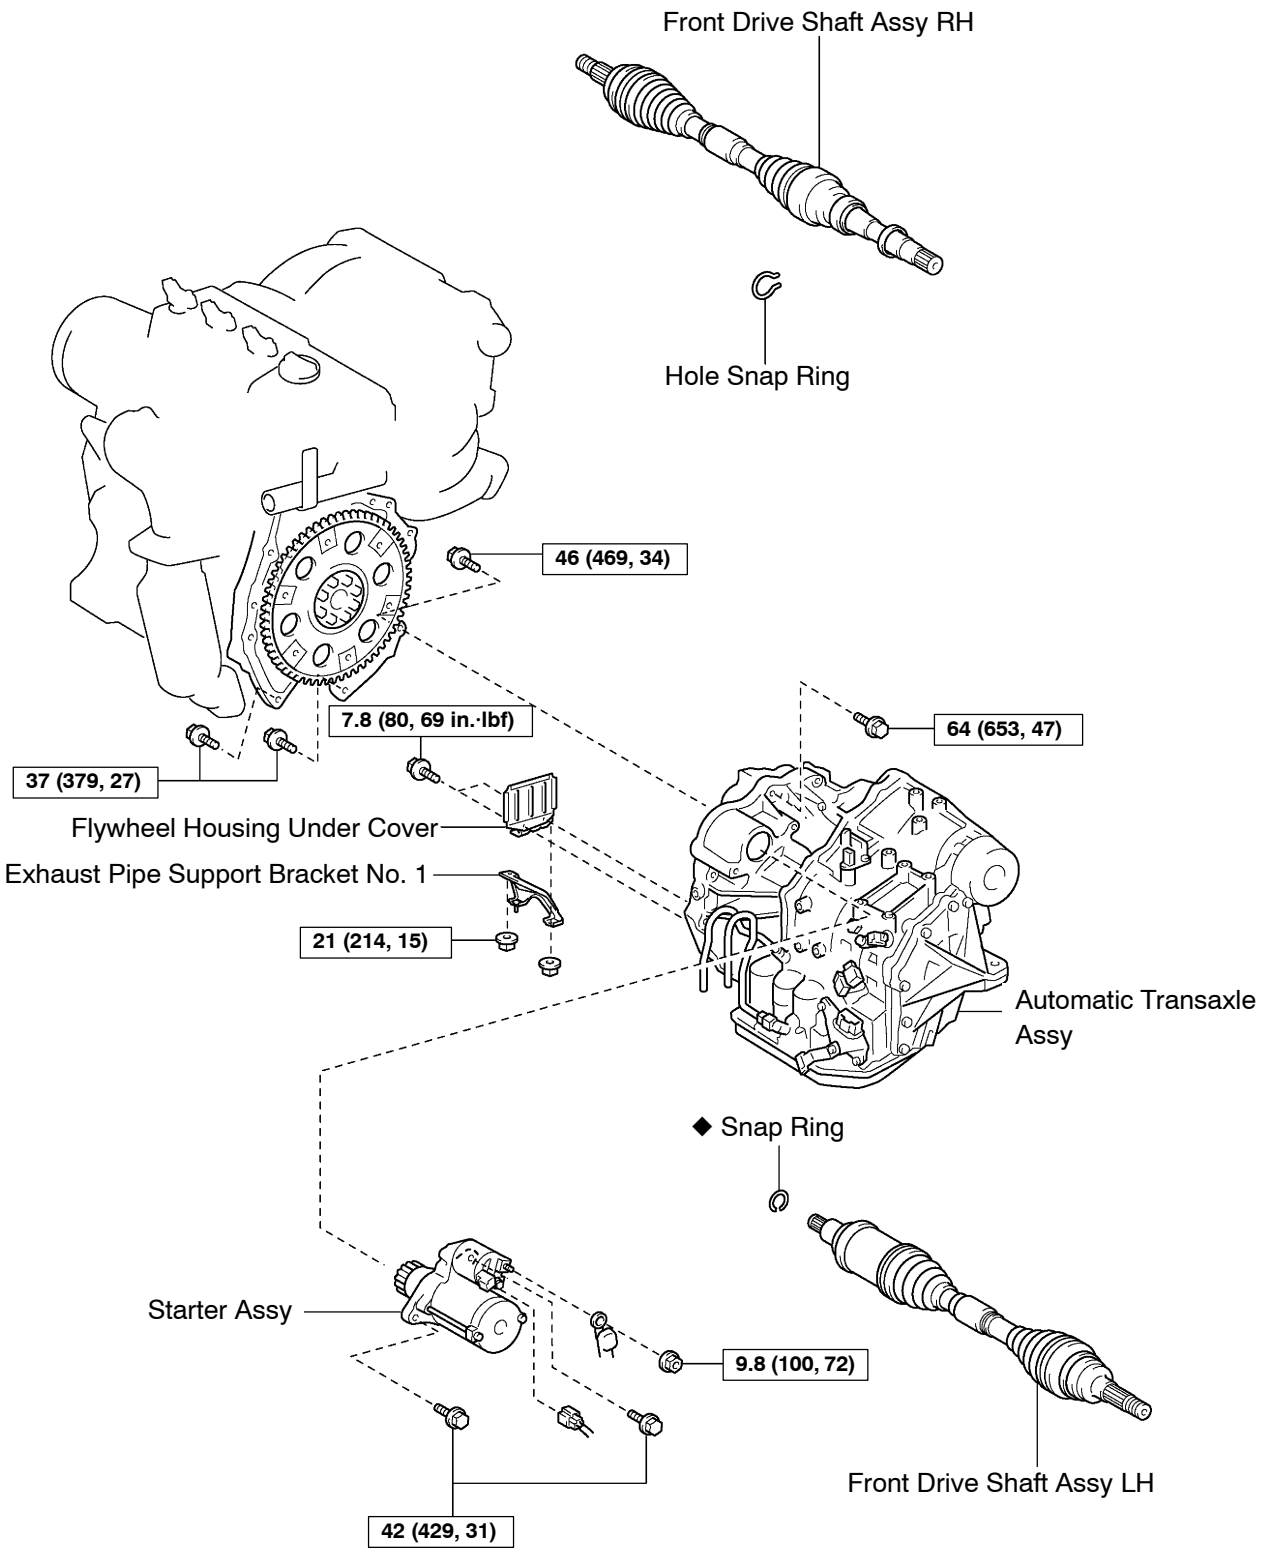



N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

0

A60468

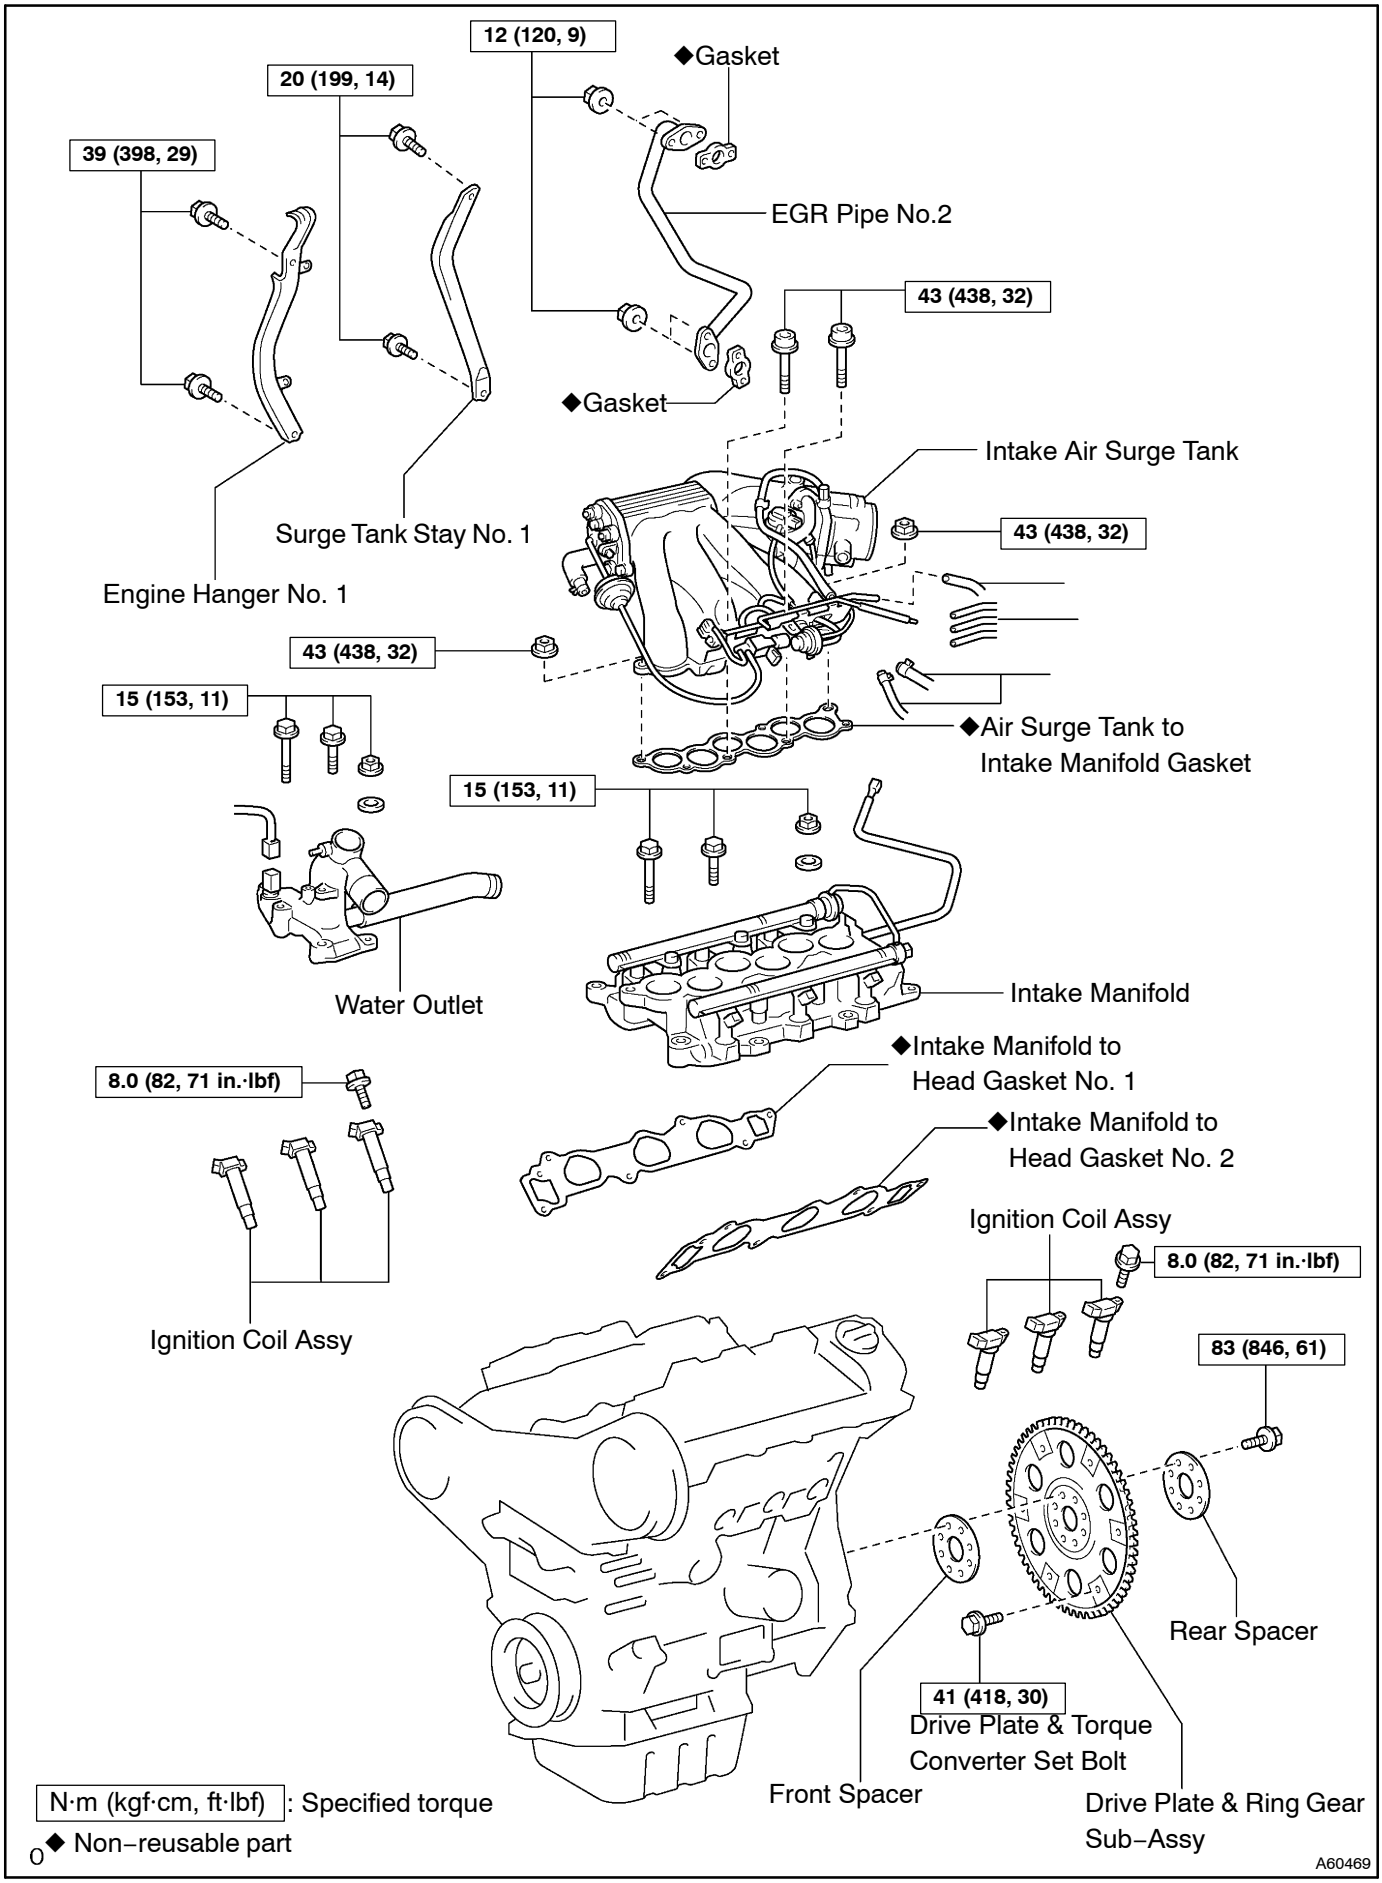
12 (120, 9)
◆Gasket
20 (199, 14)
39 (398, 29)
EGR Pipe No.2
43 (438, 32)
◆Gasket
Intake Air Surge Tank
43 (438, 32)
Surge Tank Stay No. 1
Engine Hanger No. 1
43 (438, 32)
15 (153, 11)
◆Air Surge Tank to
Intake Manifold Gasket
15 (153, 11)
Water Outlet
Intake Manifold
◆Intake Manifold to
Head Gasket No. 1
8.0 (82, 71 in.·lbf)
◆Intake Manifold to
Head Gasket No. 2
Ignition Coil Assy
Ignition Coil Assy
8.0 (82, 71 in.·lbf)
83 (846, 61)
Rear Spacer
41 (418, 30)
Drive Plate & Torque
Converter Set Bolt
Front Spacer
Drive Plate & Ring Gear
Sub–Assy
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A60469

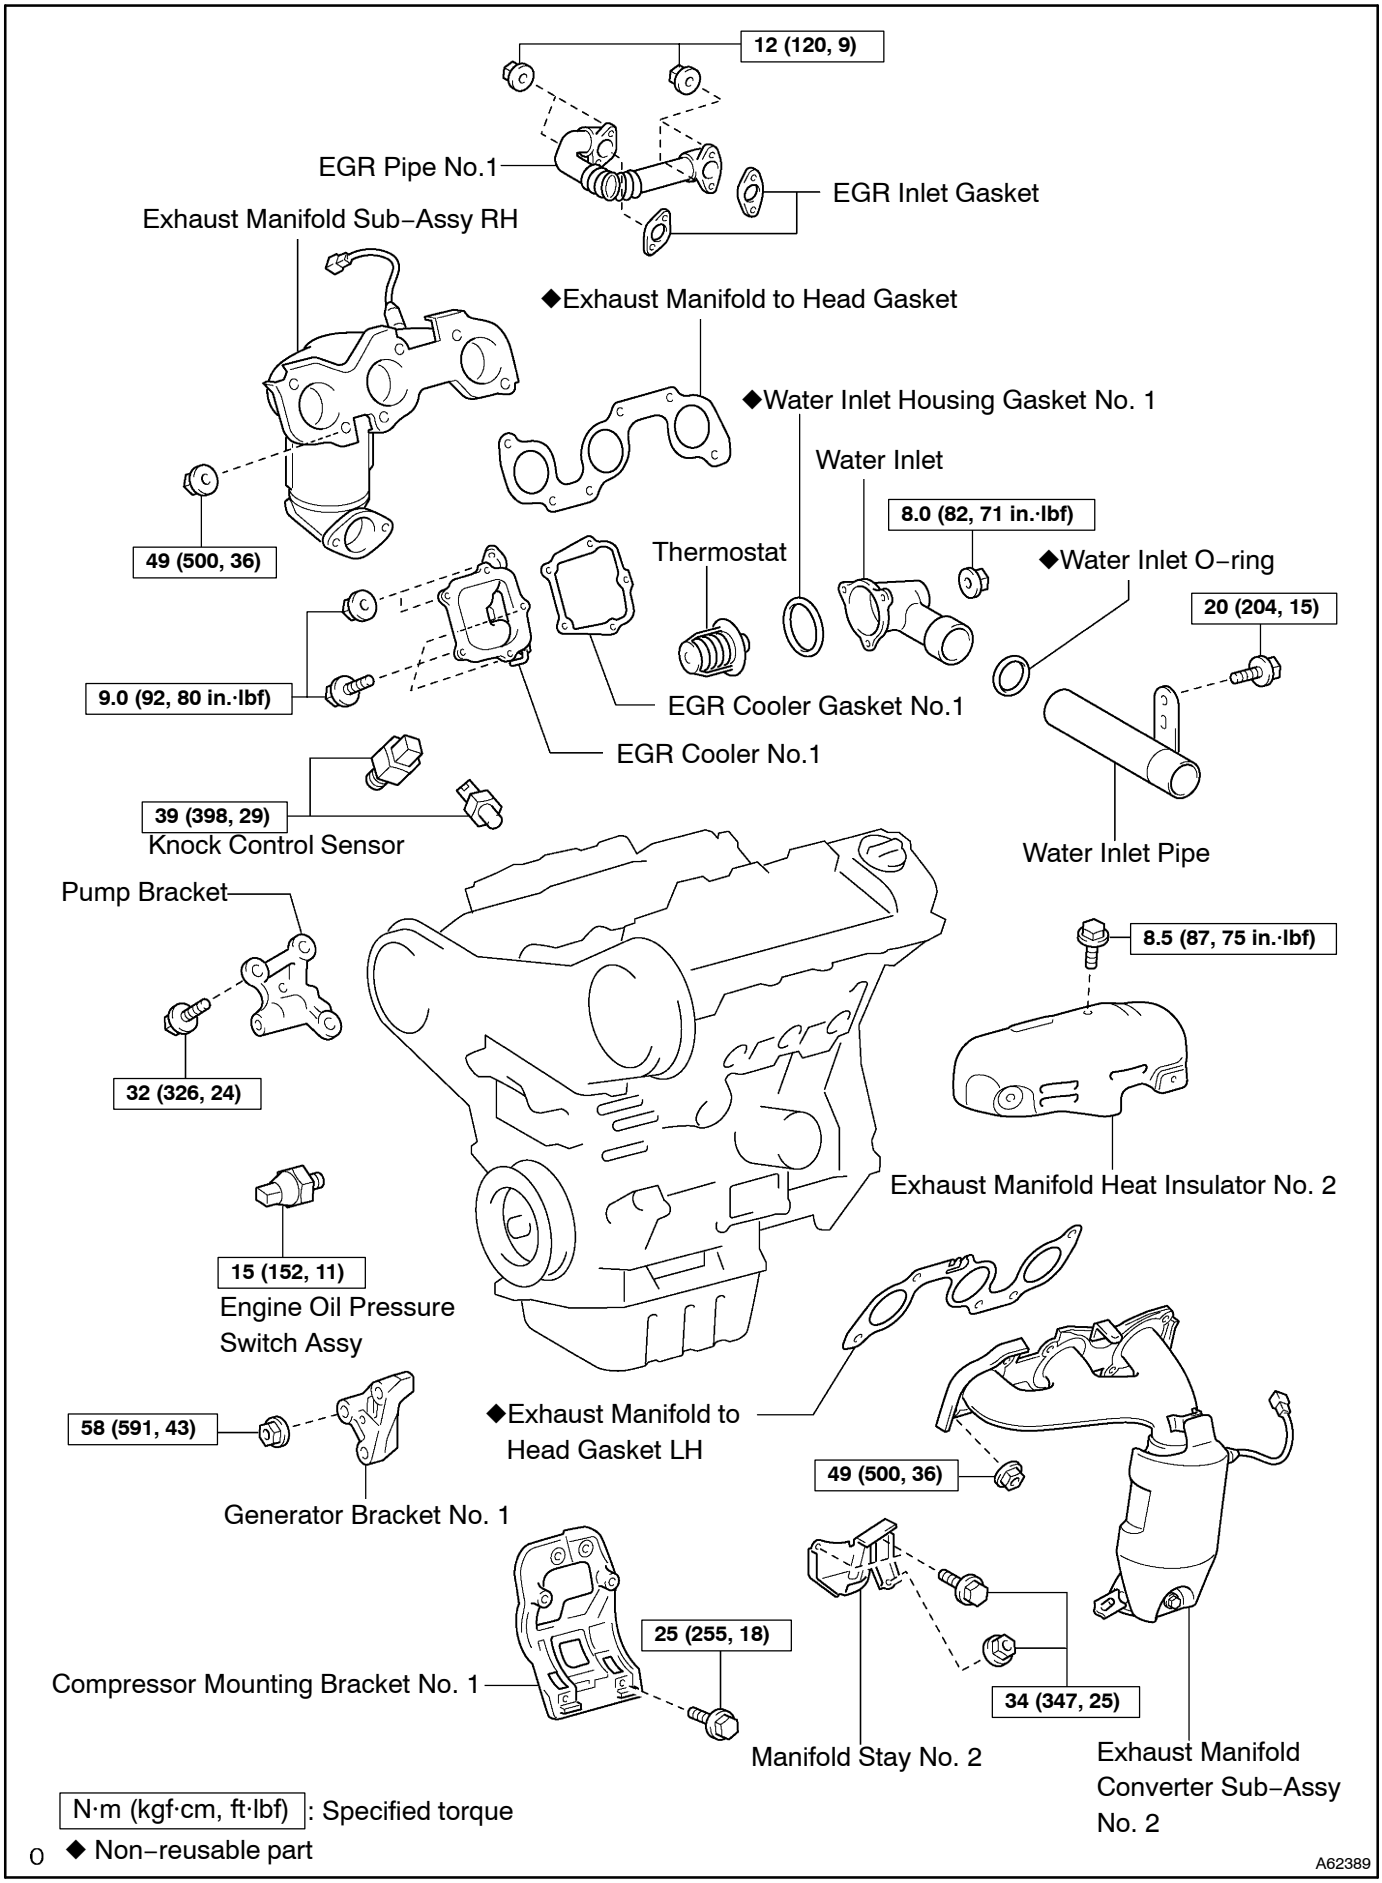
12 (120, 9)
EGR Pipe No.1
EGR Inlet Gasket
Exhaust Manifold Sub–Assy RH
◆Exhaust Manifold to Head Gasket
◆Water Inlet Housing Gasket No. 1
Water Inlet
8.0 (82, 71 in.·lbf)
49 (500, 36)
Thermostat
◆Water Inlet O–ring
20 (204, 15)
9.0 (92, 80 in.·lbf)
EGR Cooler Gasket No.1
EGR Cooler No.1
39 (398, 29)
Knock Control Sensor
Water Inlet Pipe
Pump Bracket
8.5 (87, 75 in.·lbf)
32 (326, 24)
Exhaust Manifold Heat Insulator No. 2
15 (152, 11)
Engine Oil Pressure Switch Assy
58 (591, 43)
◆Exhaust Manifold to Head Gasket LH
49 (500, 36)
Generator Bracket No. 1
25 (255, 18)
Compressor Mounting Bracket No. 1
34 (347, 25)
Manifold Stay No. 2
Exhaust Manifold Converter Sub–Assy No. 2
N·m (kgf·cm, ft·lbf): Specified torque
◆ Non–reusable part
A62389