
THERMOSTAT (2AZ–FE)

1609F–01

REPLACEMENT


1. DRAIN COOLANT (See page 16–31)

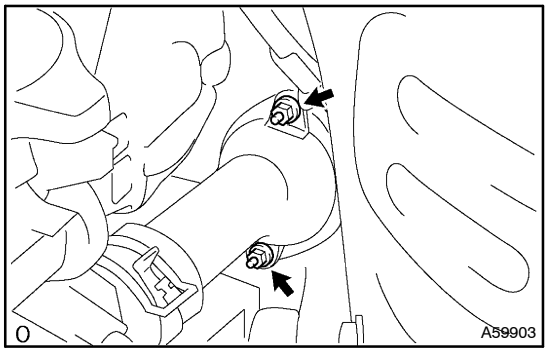

2. REMOVE WATER INLET

(a) Remove 2 nuts, and disconnect the water inlet from the cylinder block.

3. REMOVE THERMOSTAT

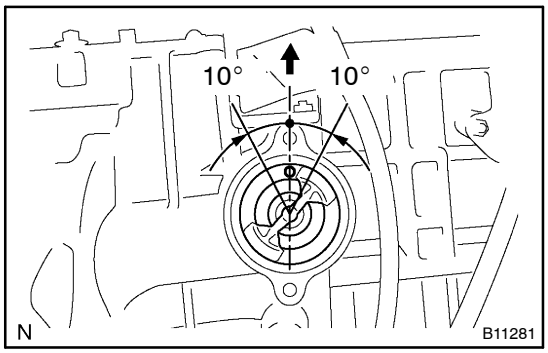

4. INSTALL THERMOSTAT

(a) Install a new gasket to the thermostat.
(b) Install the thermostat with the jiggle valve upward.

HINT:
The jiggle valve may be set within 10° on either side of the prescribed position.

5. INSTALL WATER INLET

(a) Install the water inlet with 2 nuts.
Torque: 9.0 N·m (92 kgf·cm, 80 in.·lbf)

6. ADD COOLANT (See page 16–18)

7. INSPECT CHECK ENGINE COOLANT LEAK (See page 16–13)