
RADIATOR ASSY (2AZ–FE)

1609G–01

Removal & Installation and Disassembly & Reassembly

1. DRAIN COOLANT (See page 16–18)
2. DISCONNECT RADIATOR HOSE INLET
3. DISCONNECT RADIATOR HOSE OUTLET
4. DISCONNECT OIL COOLER INLET HOSE(A/T TRANSAXLE)
5. DISCONNECT OIL COOLER OUTLET HOSE(A/T TRANSAXLE)

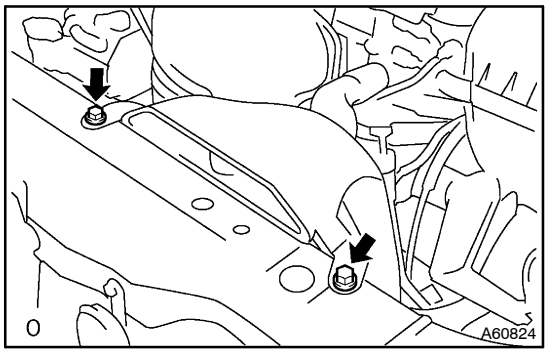


6. REMOVE AIR CLEANER INLET ASSY


(a) Remove the 2 bolts and the air cleaner inlet.

7. REMOVE RADIATOR SUPPORT UPPER

(a) Disconnect the 2 horn connector.

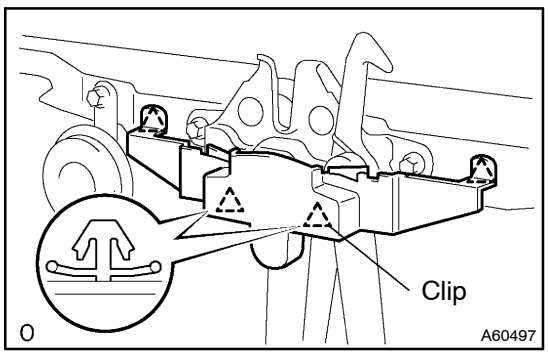

(b) Remove the hood lock release lever cover.

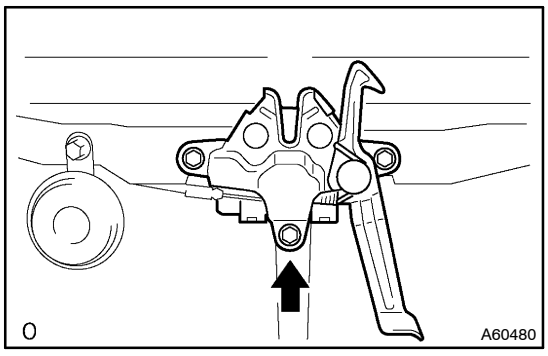

(c) Remove the bolt shown in the illustration.
(d) Remove the 4 bolts and radiator support upper.

8. REMOVE RADIATOR ASSY

(a) Disconnect the fan motor connector.
(b) Remove the radiator w/fan.

9. REMOVE RADIATOR SUPPORT CUSHION

10. REMOVE RADIATOR SUPPORT LOWER

11. REMOVE FAN ASSY,W/MOTOR
12. INSTALL FAN ASSY,W/MOTOR
(a) Install the fan assy w/motor to the radiator.
Torque: 5.0 N·m (51 kgf·cm, 44 in.·lbf)
13. INSTALL RADIATOR SUPPORT UPPER

(a) Install the radiator support upper with the 4 bolts.
Torque: 14 N·m (142 kgf·cm, 10 ft·lbf)
14. ADJUST HOOD SUB–ASSY
(See page 16–18)
15. ADD COOLANT (See page 16–18)
16. CHECK ENGINE COOLANT LEAK (See page 16–18)