
RADIATOR ASSY (1MZ–FE)

1609B–01

Removal & Installation and Disassembly & Reassembly

1. DRAIN COOLANT (See page 16–31)
2. DISCONNECT RADIATOR HOSE INLET
3. DISCONNECT RADIATOR HOSE OUTLET
4. DISCONNECT OIL COOLER INLET HOSE
5. DISCONNECT OIL COOLER OUTLET HOSE

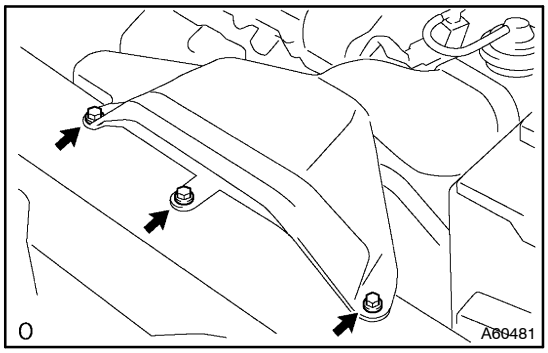


6. REMOVE AIR CLEANER INLET ASSY


(a) Remove the 3 bolts, the air cleaner inlet and air cleaner inlet No.1.

7. REMOVE RADIATOR SUPPORT UPPER

(a) Disconnect the 2 horn connector.

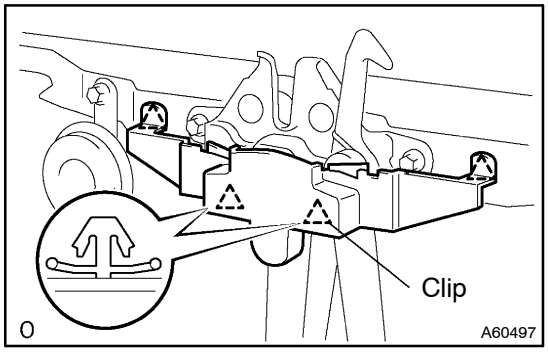

(b) Remove the hood lock release lever cover.

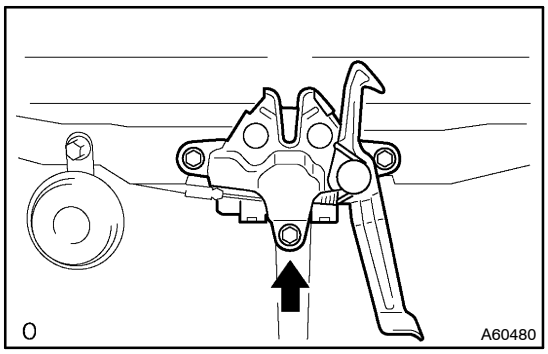

(c) Remove the bolt shown in the illustration.
(d) Remove the 4 bolts and radiator support upper.

8. REMOVE RADIATOR ASSY

(a) Disconnect the fan motor connector.
(b) Remove the radiator w/fan.

9. REMOVE RADIATOR SUPPORT CUSHION

10. REMOVE RADIATOR SUPPORT LOWER

11. REMOVE FAN ASSY,W/MOTOR
12. INSTALL FAN ASSY,W/MOTOR
(a) Install the fan assy w/motor to the radiator.
Torque: 5.0N·m (51 kgf·cm, 44 in.·lbf)
13. INSTALL RADIATOR SUPPORT UPPER

(a) Install the radiator support upper with the 4 bolts.
Torque: 14 N·m (142 kgf·cm,10 ft·lbf)
14. ADJUST HOOD SUB–ASSY
(See page 75–1)
15. ADD COOLANT (See page 16–31)
16. CHECK ENGINE COOLANT LEAK (See page 16–31)