
OIL PUMP ASSY (2AZ–FE)

1705T–01

REPLACEMENT

1. REMOVE CHAIN SUB–ASSY
(See page 14–105)

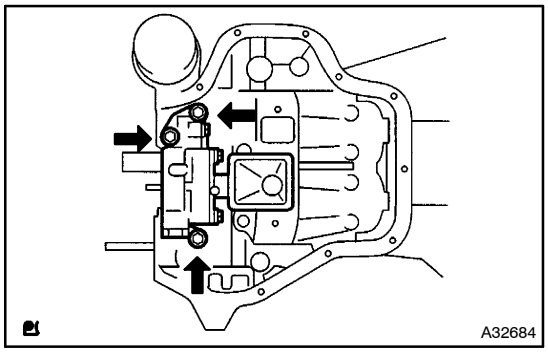

2. REMOVE OIL PUMP ASSY

(a) Remove 3 bolts and oil pump assembly.

3. INSTALL OIL PUMP ASSY

(a) Place a new gasket on the cylinder block.
(b) Install the oil pump assembly with 3 bolts.
Torque: 19 N·m (194 kgf·cm, 14 ft·lbf)