
OIL FILTER SUB–ASSY (1MZ–FE)

1705Q–01


REPLACEMENT

1. REMOVE ENGINE UNDER COVER RH

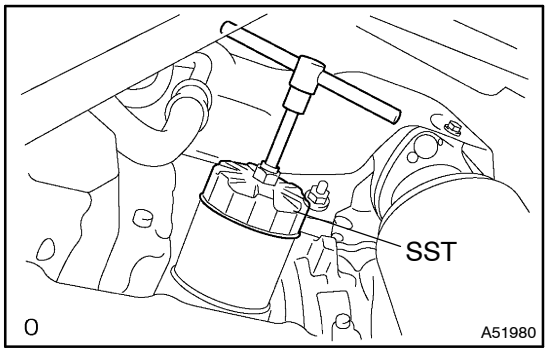

2. REMOVE OIL FILTER SUB–ASSY

(a) Using SST, remove the oil filter.
SST 09228–07501

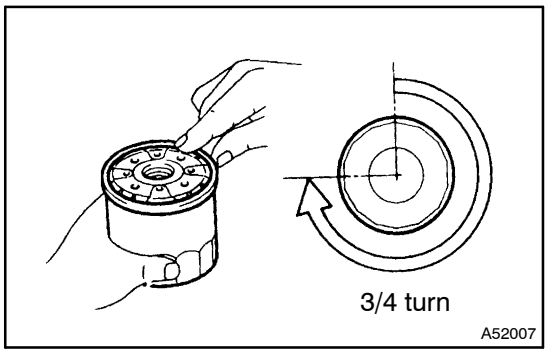

3. INSTALL OIL FILTER SUB–ASSY

(a) Check and clean the oil filter installation surface.
(b) Apply clean engine oil to the gasket of a new oil filter.
(c) Lightly screw the oil filter into place, and tighten it until the gasket contacts the seat.
(d) Using SST, tighten it an additional 3/4 turn.
SST 09228–07501

4. ADD ENGINE OIL

(a) Add new oil.
Oil capacity:
Drain and refill w/ oil filter change 4.7 liters (5.0 US qts, 4.1 Imp. qts)
Drain and refill w/o oil filter change 4.5 liters (4.8 US qts, 4.0 Imp. qts)
Dry fill 5.5 liters (5.8 US qts, 4.8 Imp. qts)
(b) Install the oil filler cap.

5. INSPECT OIL LEAK