GENERATOR ASSY (1AZ–FE)


1909F–01

REPLACEMENT

1. REMOVE FAN AND GENERATOR V BELT


(See page 14–1)

SST 09249–63010

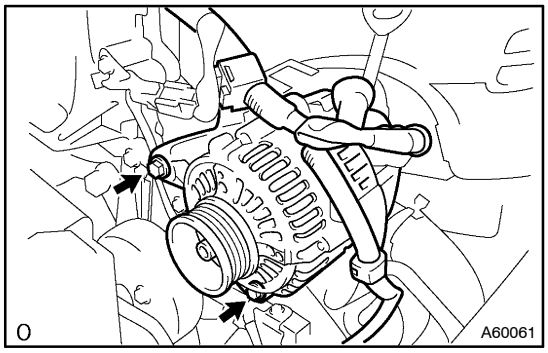

2. REMOVE GENERATOR ASSY

(a) Disconnect the engine wire as shown in the illustration.
(b) Remove 2 bolts and alternator assembly.

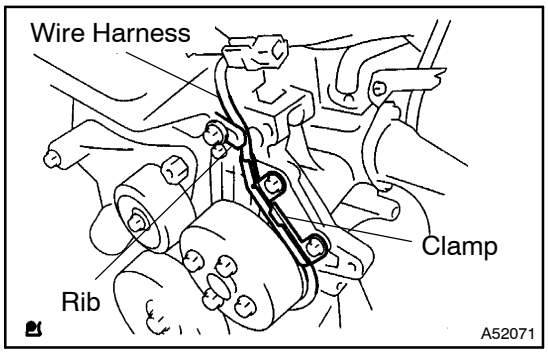

3. INSTALL GENERATOR ASSY

(a) Confirm the wire harness of the crank position sensor is placed as shown in the illustration.
(b) Install the alternator assembly.

Torque:
M8 21 N·m (214 kgf·cm, 15 ft·lbf)
M10 52 N·m (530 kgf·cm, 38 ft·lbf)
Wiring harness clamp 8.4 N·m (85 kgf·cm, 74 in.·lbf)
Alternator wire 9.8 N·m (100 kgf·cm, 7 ft·lbf)

NOTICE:
Be careful not to put the wire harness in when install the alternator.

4. INSTALL FAN AND GENERATOR V BELT

(See page 14–1)

SST 09249–63010