# GENERATOR ASSY (2AZ–FE)


1909A–01

## REPLACEMENT

**1. REMOVE FAN AND GENERATOR V BELT**


**(See page 14–66)**

SST 09249–63010

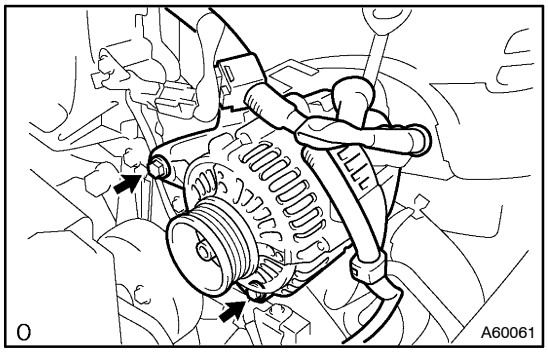


**2. REMOVE GENERATOR ASSY**

(a) Disconnect the engine wire as shown in the illustration.
(b) Remove 2 bolts and alternator assembly.

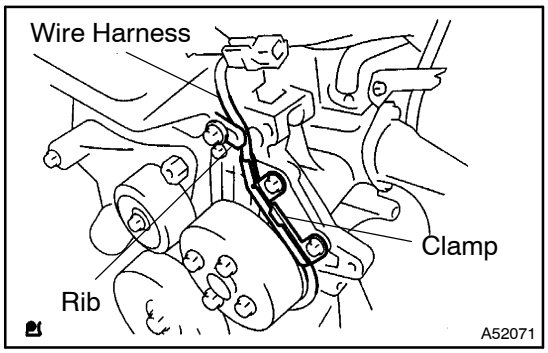


**3. INSTALL GENERATOR ASSY**

(a) Confirm the wire harness of the crank position sensor is placed as shown in the illustration.
(b) Install the alternator assembly.

**Torque:**
**M8 21 N·m (214 kgf·cm, 15 ft·lbf)**
**M10 52 N·m (530 kgf·cm, 38 ft·lbf)**
**Wiring harness clamp 8.4 N·m (85 kgf·cm, 74 in.·lbf)**
**Alternator wire 9.8 N·m (100 kgf·cm, 7 ft·lbf)**

**NOTICE:**
**Be careful not to put the wire harness in when install the alternator.**

**4. INSTALL FAN AND GENERATOR V BELT**

**(See page 14–66)**

SST 09249–63010