
STARTER ASSY (1MZ–FE)

1900U–02

REPLACEMENT

1. REMOVE BATTERY
2. REMOVE AIR CLEANER INLET ASSY
3. REMOVE AIR CLEANER ASSEMBLY WITH HOSE
4. REMOVE AIR CLEANER BRACKET
5. REMOVE AIR CLEANER INLET NO.1

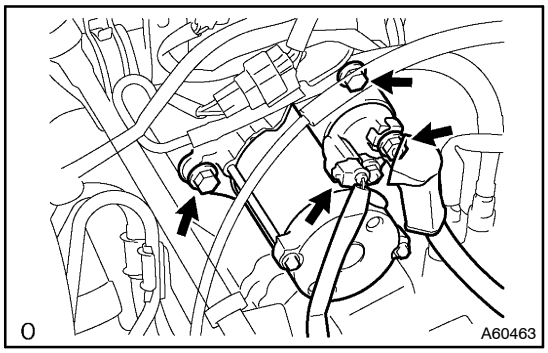

6. REMOVE STARTER ASSY

(a) Disconnect the starter connector.
(b) Remove the nut, and disconnect the lead wire from terminal 30.
(c) Remove the 2 bolts and starter.

7. INSTALL STARTER ASSY

Torque:
Bolt 42 N·m (429 kgf·cm, 31 ft·lbf)
Nut 9.8 N·m (100 kgf·cm, 7 ft·lbf)

8. INSTALL AIR CLEANER ASSEMBLY WITH HOSE