



300AV–01

COMPONENTS

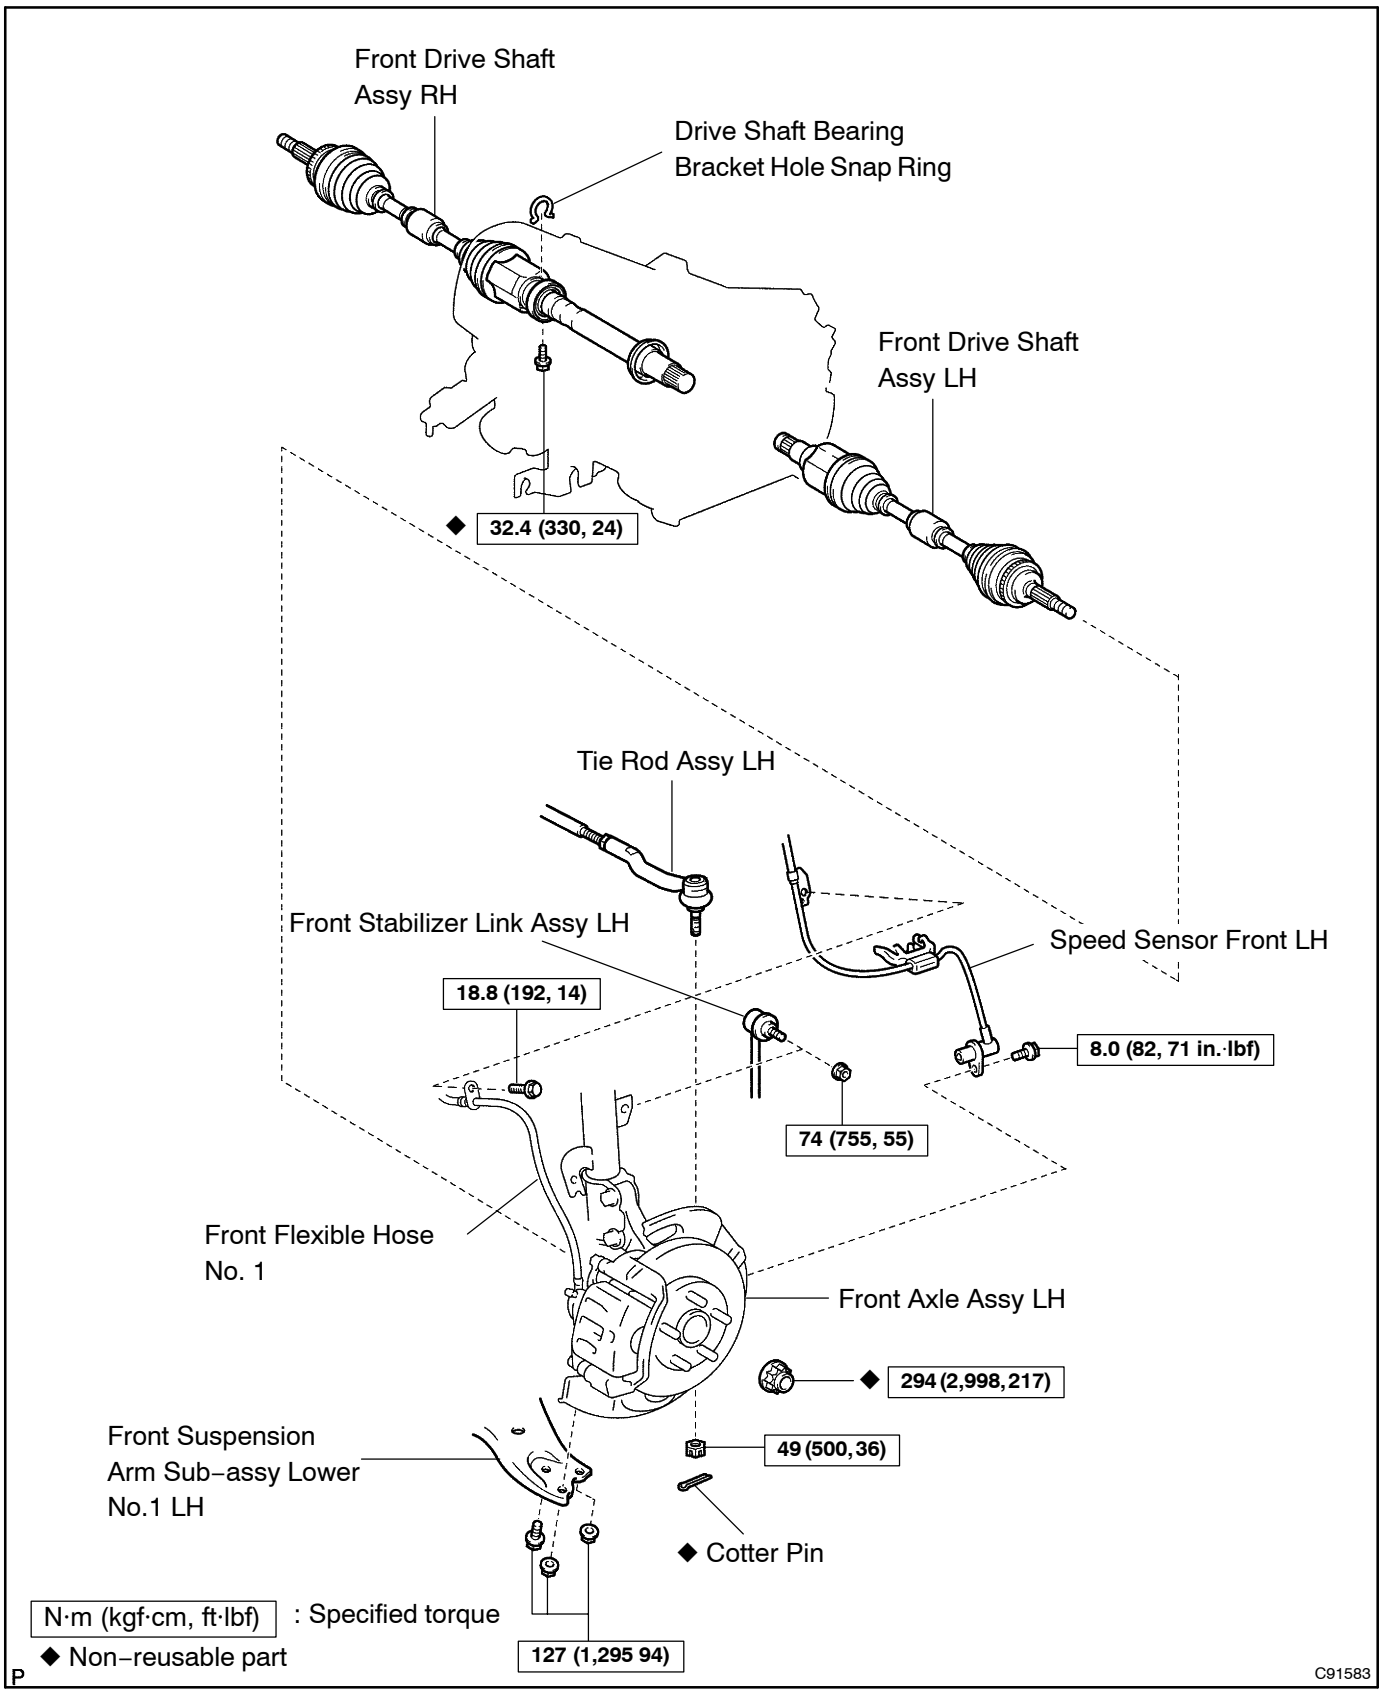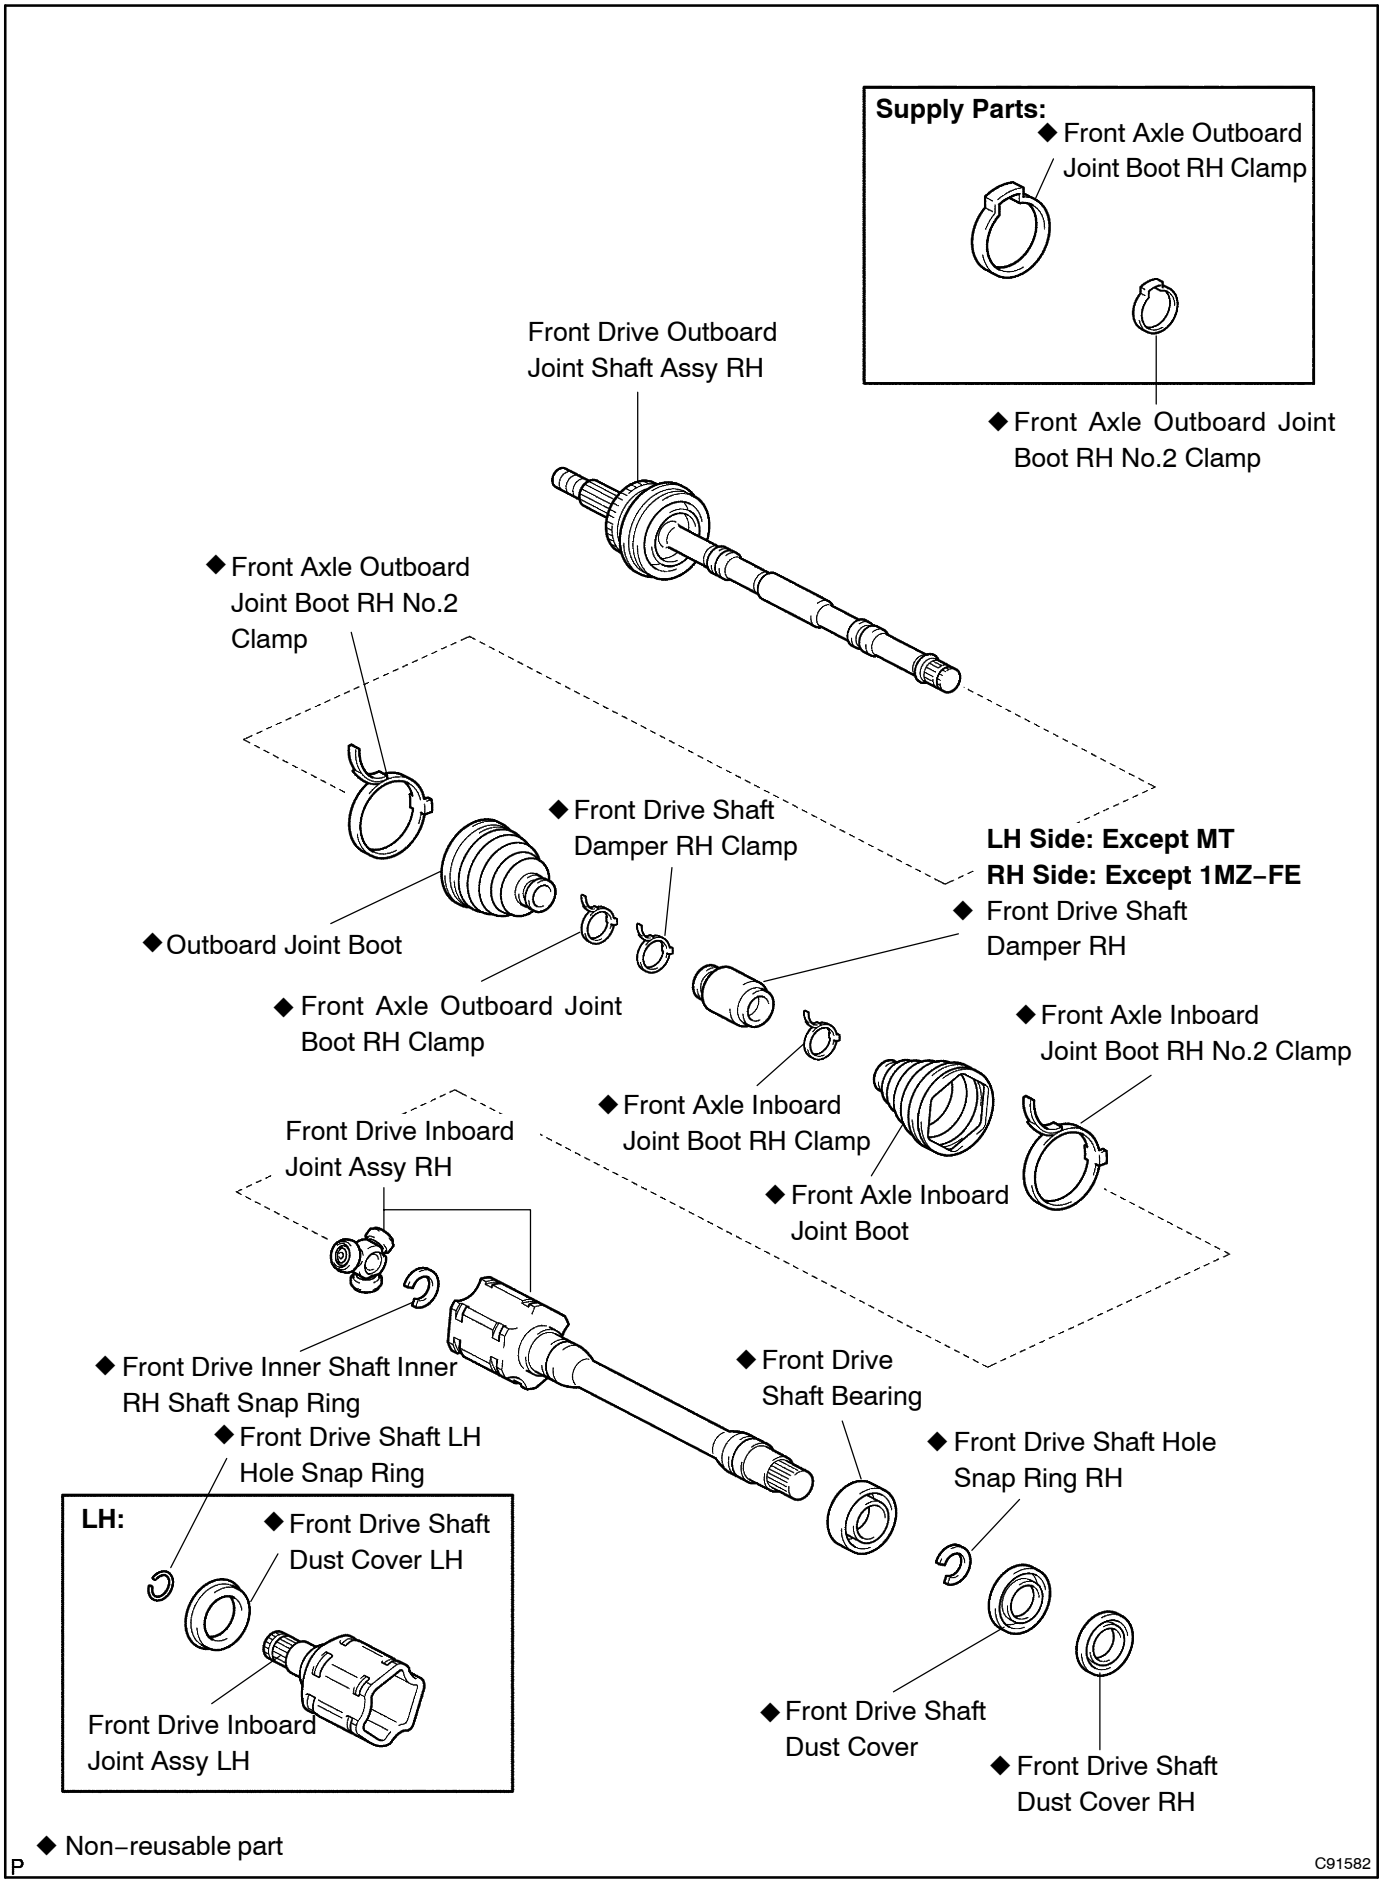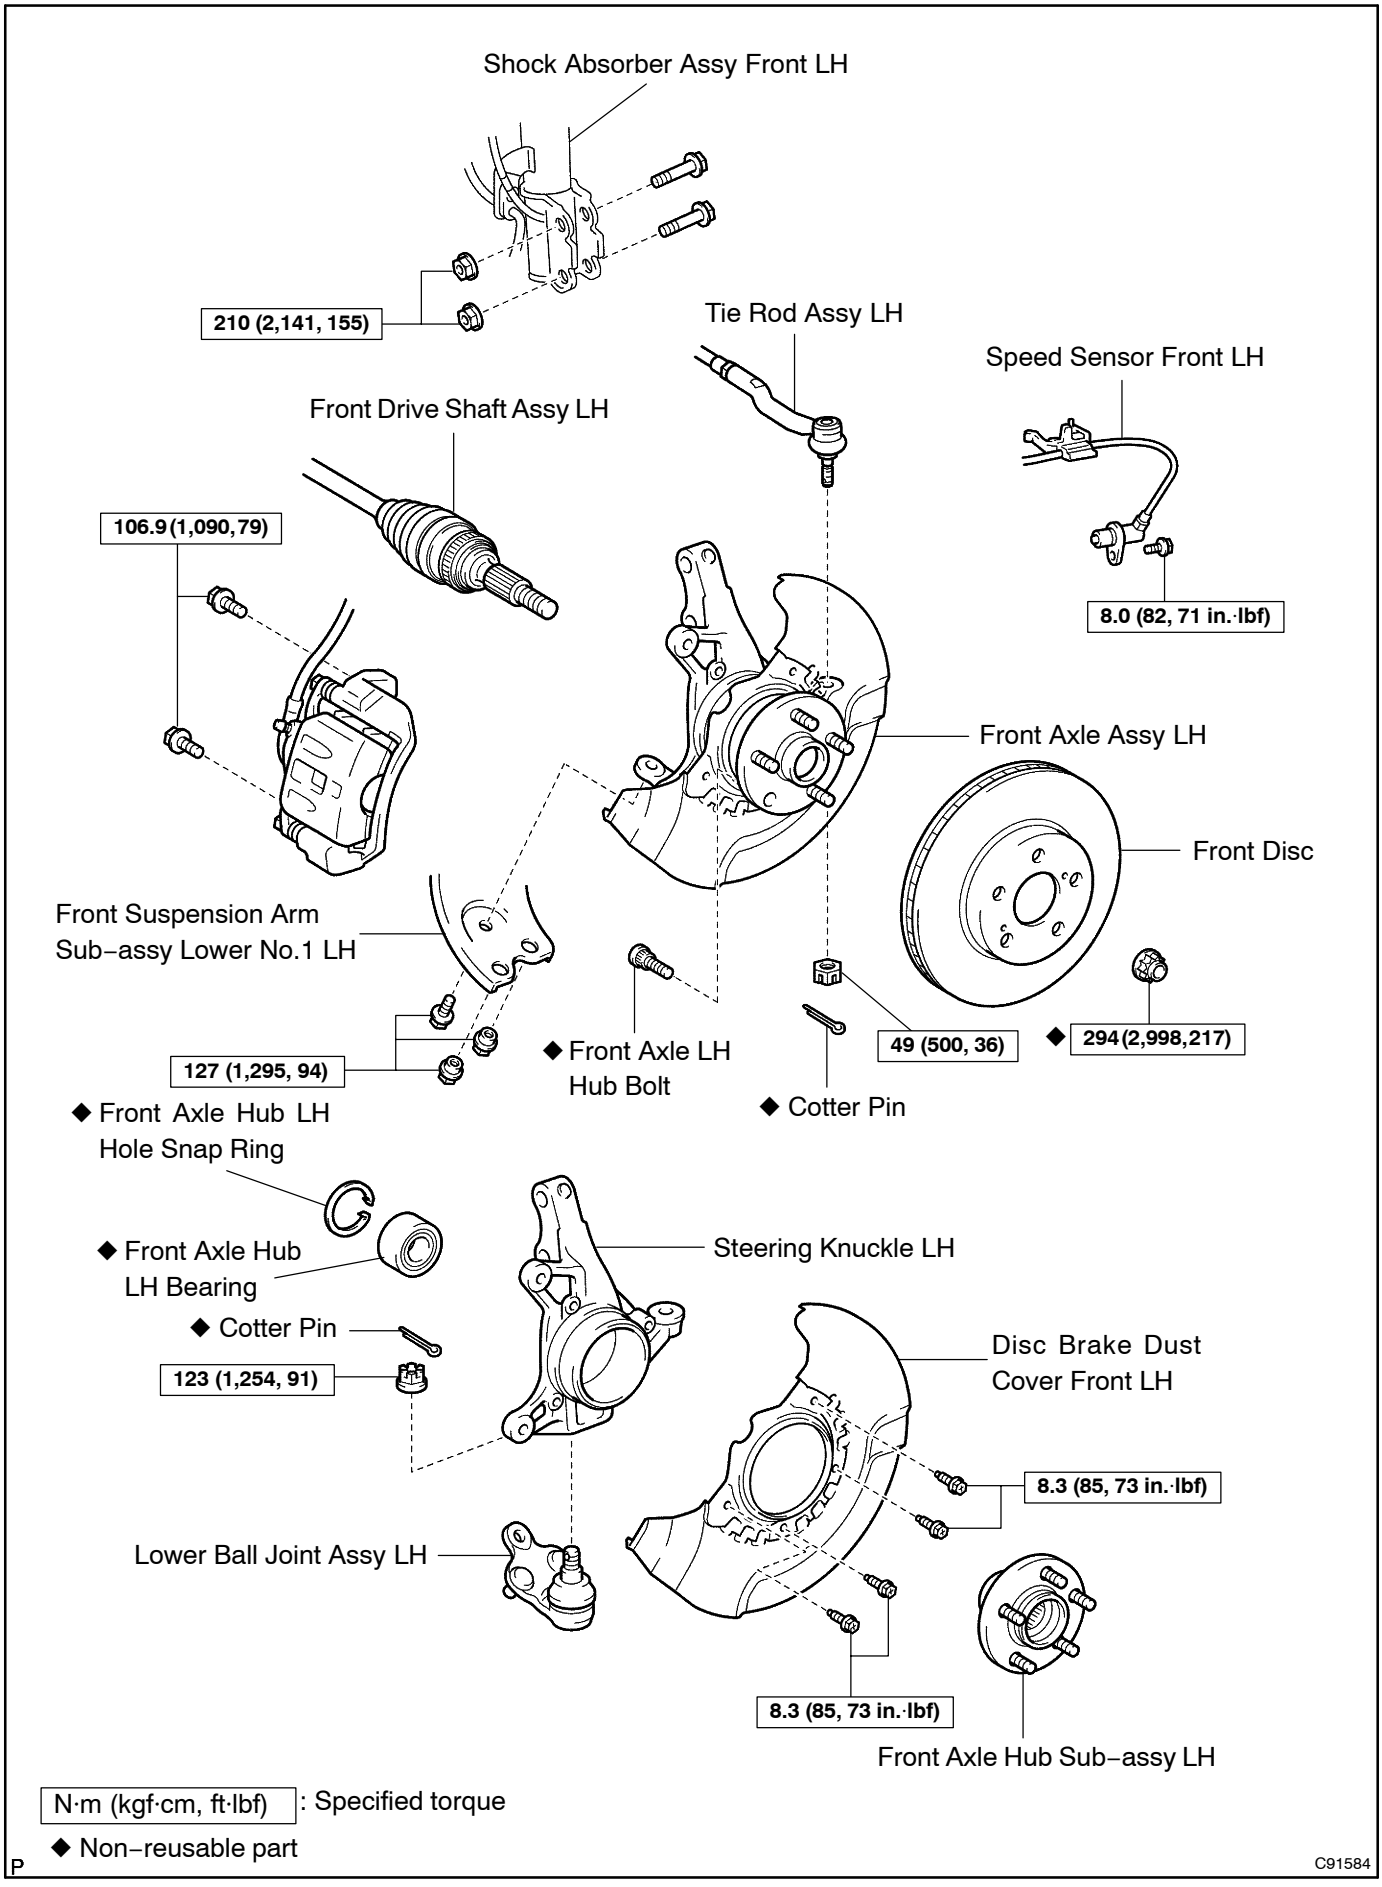


Supply Parts:
◆ Front Axle Outboard Joint Boot RH Clamp
◆ Front Axle Outboard Joint Boot RH No.2 Clamp
Front Drive Outboard Joint Shaft Assy RH
◆ Front Axle Outboard Joint Boot RH No.2 Clamp
◆ Front Drive Shaft Damper RH Clamp
LH Side: Except MT
RH Side: Except 1MZ–FE
◆ Front Drive Shaft Damper RH
◆ Outboard Joint Boot
◆ Front Axle Outboard Joint Boot RH Clamp
◆ Front Axle Inboard Joint Boot RH No.2 Clamp
◆ Front Axle Inboard Joint Boot RH Clamp
Front Drive Inboard Joint Assy RH
◆ Front Axle Inboard Joint Boot
◆ Front Drive Inner Shaft Inner RH Shaft Snap Ring
◆ Front Drive Shaft Bearing
◆ Front Drive Shaft LH Hole Snap Ring
◆ Front Drive Shaft Hole Snap Ring RH
LH:
◆ Front Drive Shaft Dust Cover LH
Front Drive Inboard Joint Assy LH
◆ Front Drive Shaft Dust Cover
◆ Front Drive Shaft Dust Cover RH
◆ Non–reusable part
C91582


Shock Absorber Assy Front LH
210 (2,141, 155)
Tie Rod Assy LH
Speed Sensor Front LH
Front Drive Shaft Assy LH
106.9 (1,090, 79)
8.0 (82, 71 in.·lbf)
Front Axle Assy LH
Front Disc
Front Suspension Arm
Sub–assy Lower No.1 LH
127 (1,295, 94)
◆ Front Axle LH
Hub Bolt
49 (500, 36)
◆ 294 (2,998,217)
◆ Cotter Pin
◆ Front Axle Hub LH
Hole Snap Ring
◆ Front Axle Hub
LH Bearing
Steering Knuckle LH
◆ Cotter Pin
123 (1,254, 91)
Disc Brake Dust
Cover Front LH
8.3 (85, 73 in.·lbf)
Lower Ball Joint Assy LH
8.3 (85, 73 in.·lbf)
Front Axle Hub Sub–assy LH
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
C91584

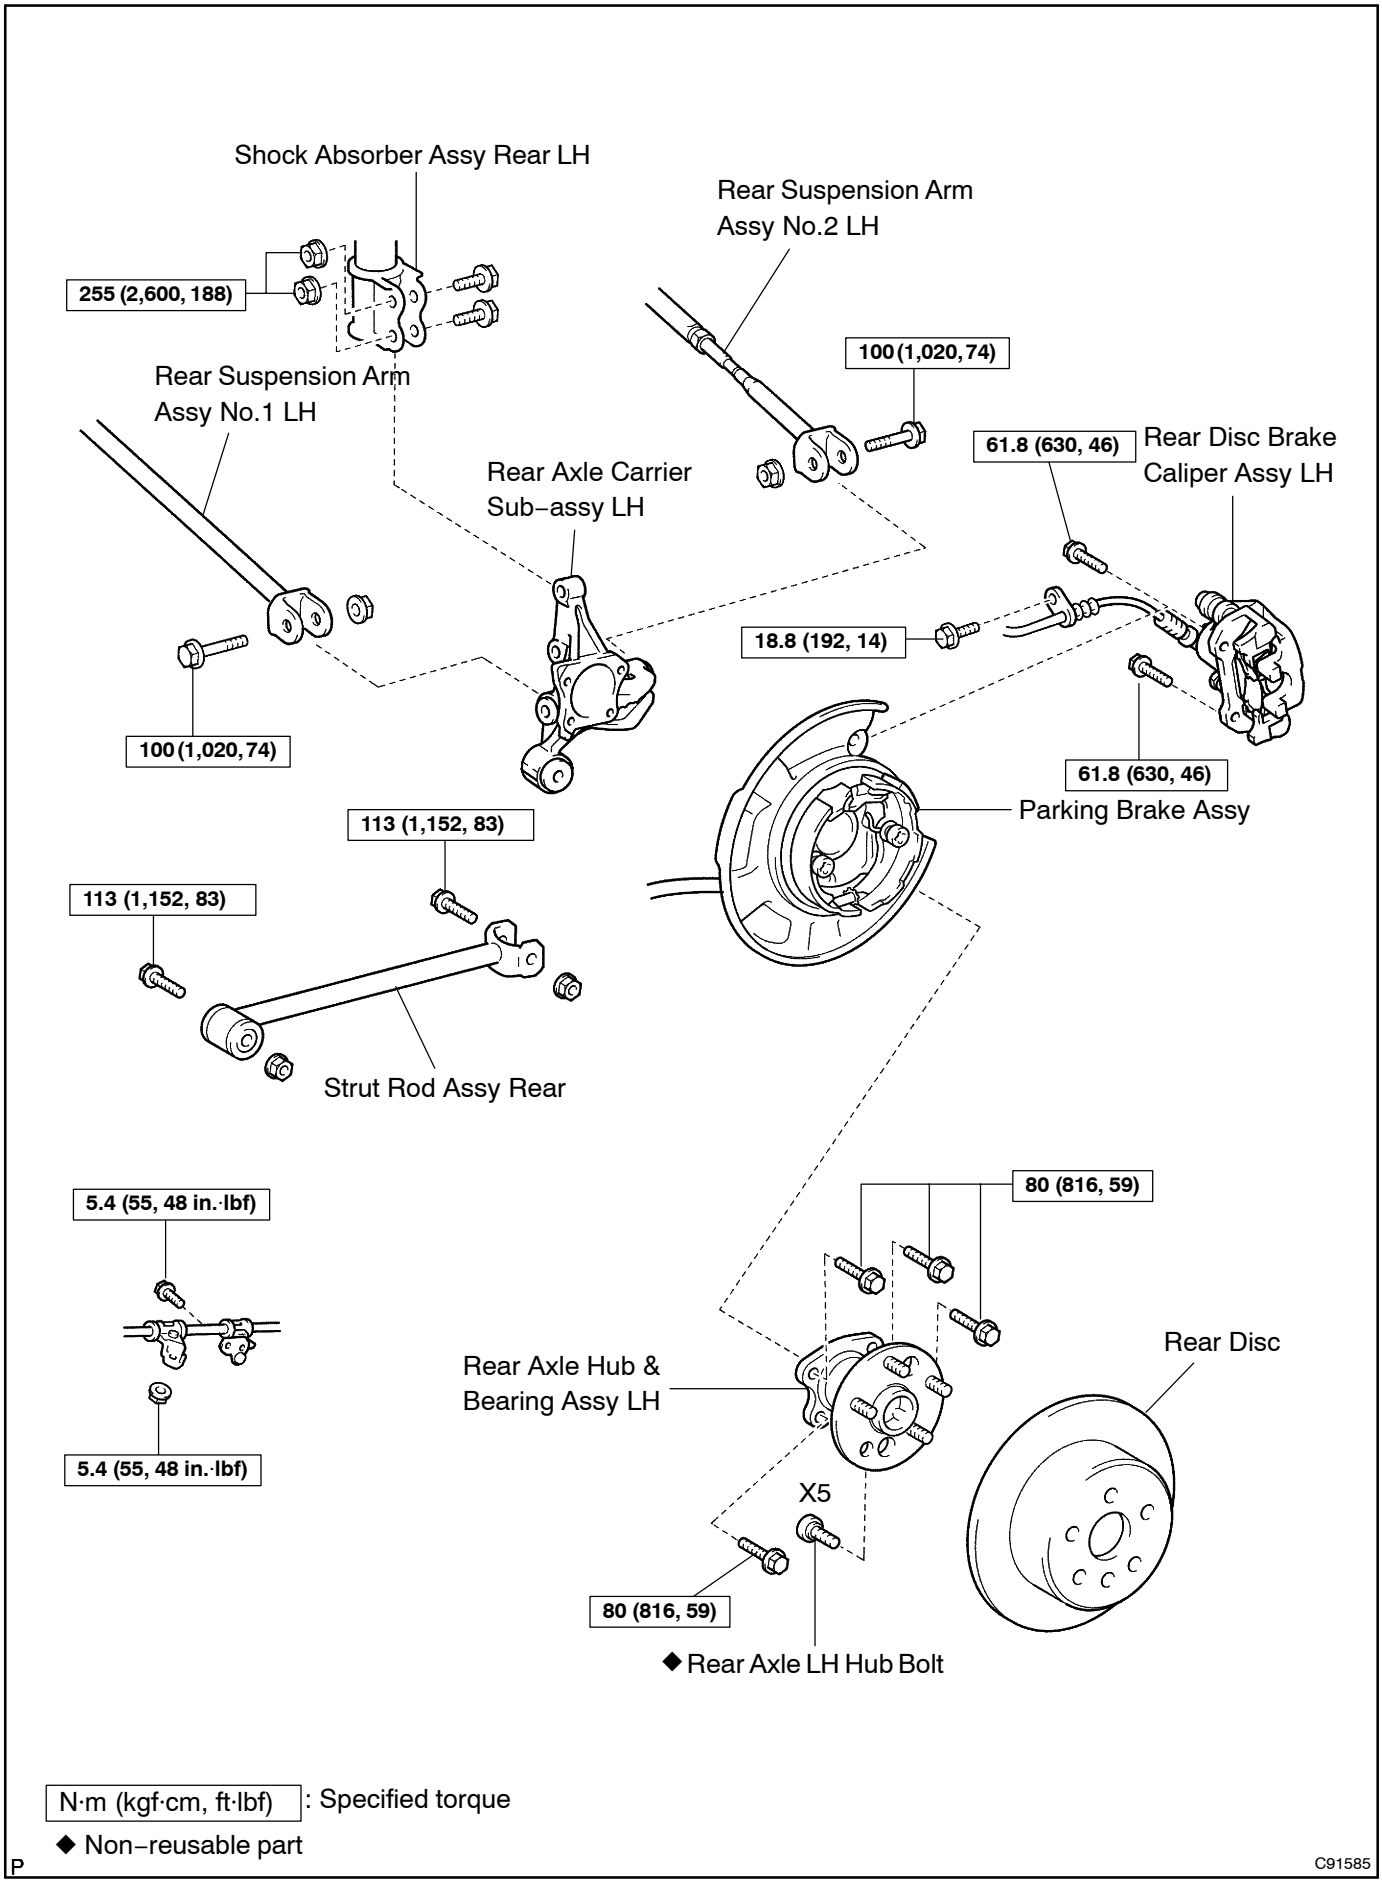

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

P

C91585