FRONT AXLE LH HUB BOLT

3006N–01

REPLACEMENT


HINT:

- COMPONENTS: See page 30–4
- Replace the RH side by the same procedures with LH side.

1. REMOVE FRONT WHEEL


2. DISCONNECT FRONT DISC BRAKE CALIPER ASSY LH(See page 30–19)

3. REMOVE FRONT DISC

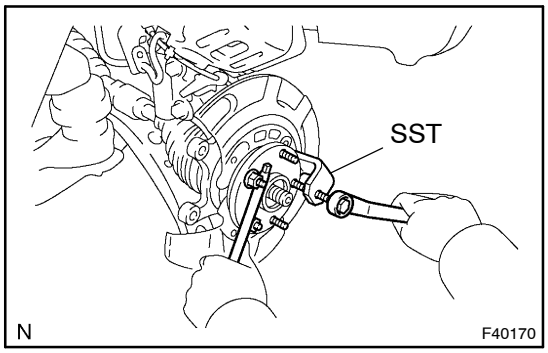

4. REMOVE FRONT AXLE LH HUB BOLT

(a) Using SST and a screwdriver or an equivalent to hold, remove the front axle LH hub bolt.
SST 09628–10011

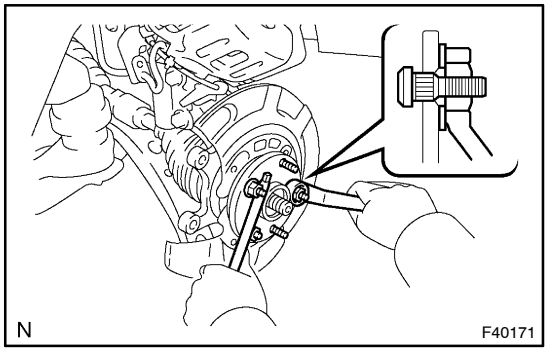

5. INSTALL FRONT AXLE LH HUB BOLT

(a) Install a washer and nut to a new front axle LH hub bolt as shown in the illustration.

(b) Using a screwdriver to hold, install the hub bolt by torquing the nut.

6. INSTALL FRONT DISC

7. INSTALL FRONT DISC BRAKE CALIPER ASSY LH(See page 30–19)

8. INSTALL FRONT WHEEL
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)