REAR AXLE LH HUB BOLT


REPLACEMENT

3006S–01

HINT:


- COMPONENTS: See page 30–4
- Replace the RH side by the same procedures with the LH side.

1. **REMOVE REAR WHEEL**
2. **DISCONNECT REAR DISC BRAKE CALIPER ASSY LH(See page 30–26)**
3. **REMOVE REAR DISC**

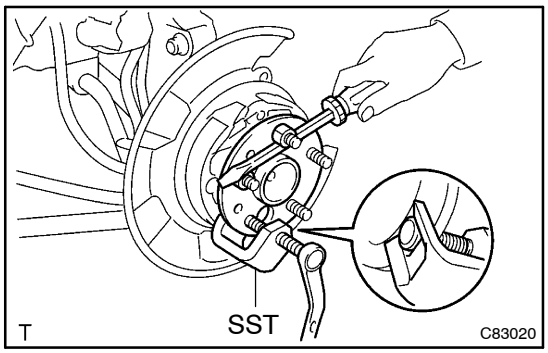

4. **REMOVE REAR AXLE LH HUB BOLT**

(a) Using SST and a screwdriver or an equivalent to hold, remove the rear axle LH hub bolt.
SST 09628–10011

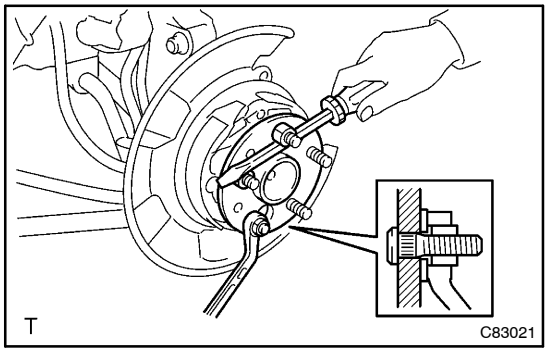

5. **INSTALL REAR AXLE LH HUB BOLT**

(a) Install a washer and nut to a new rear axle LH hub bolt as shown in the illustration.
(b) Using a screwdriver to hold, install the rear axle LH hub bolt by torquing the nut.

6. **INSTALL REAR DISC**
7. **INSTALL REAR DISC BRAKE CALIPER ASSY LH(See page 30–26)**
8. **INSTALL REAR WHEEL**
   Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)