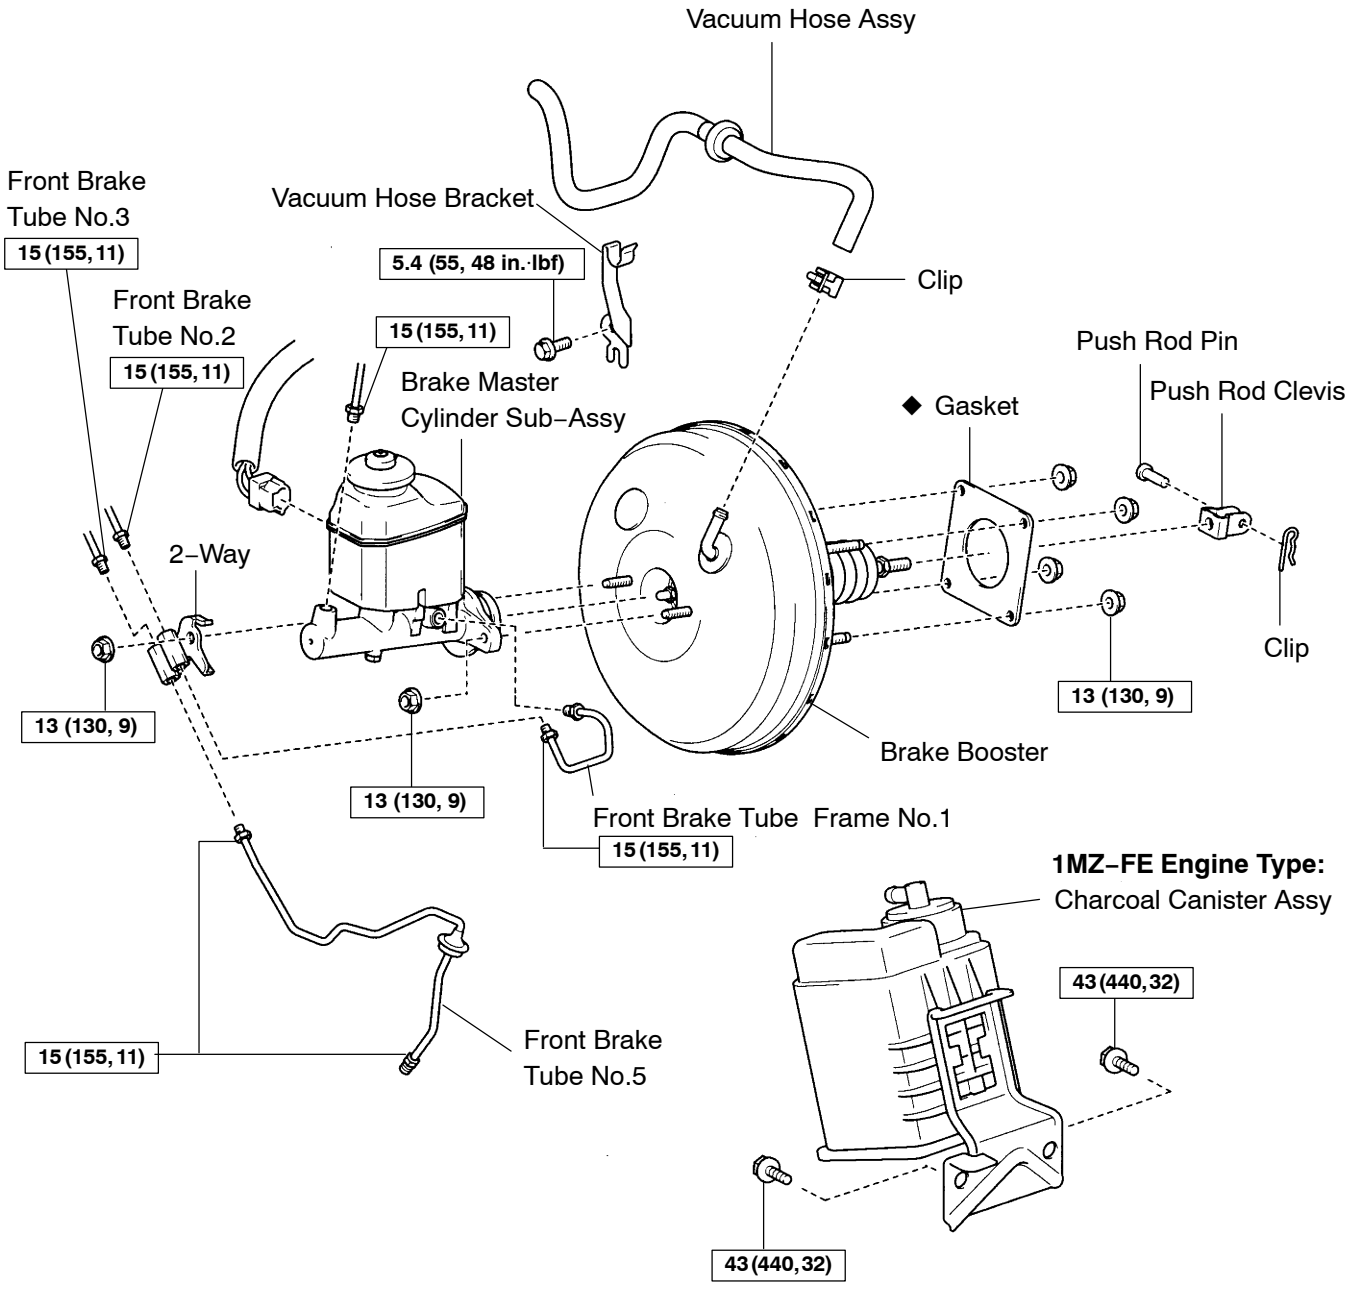
320DF–01

COMPONENTS

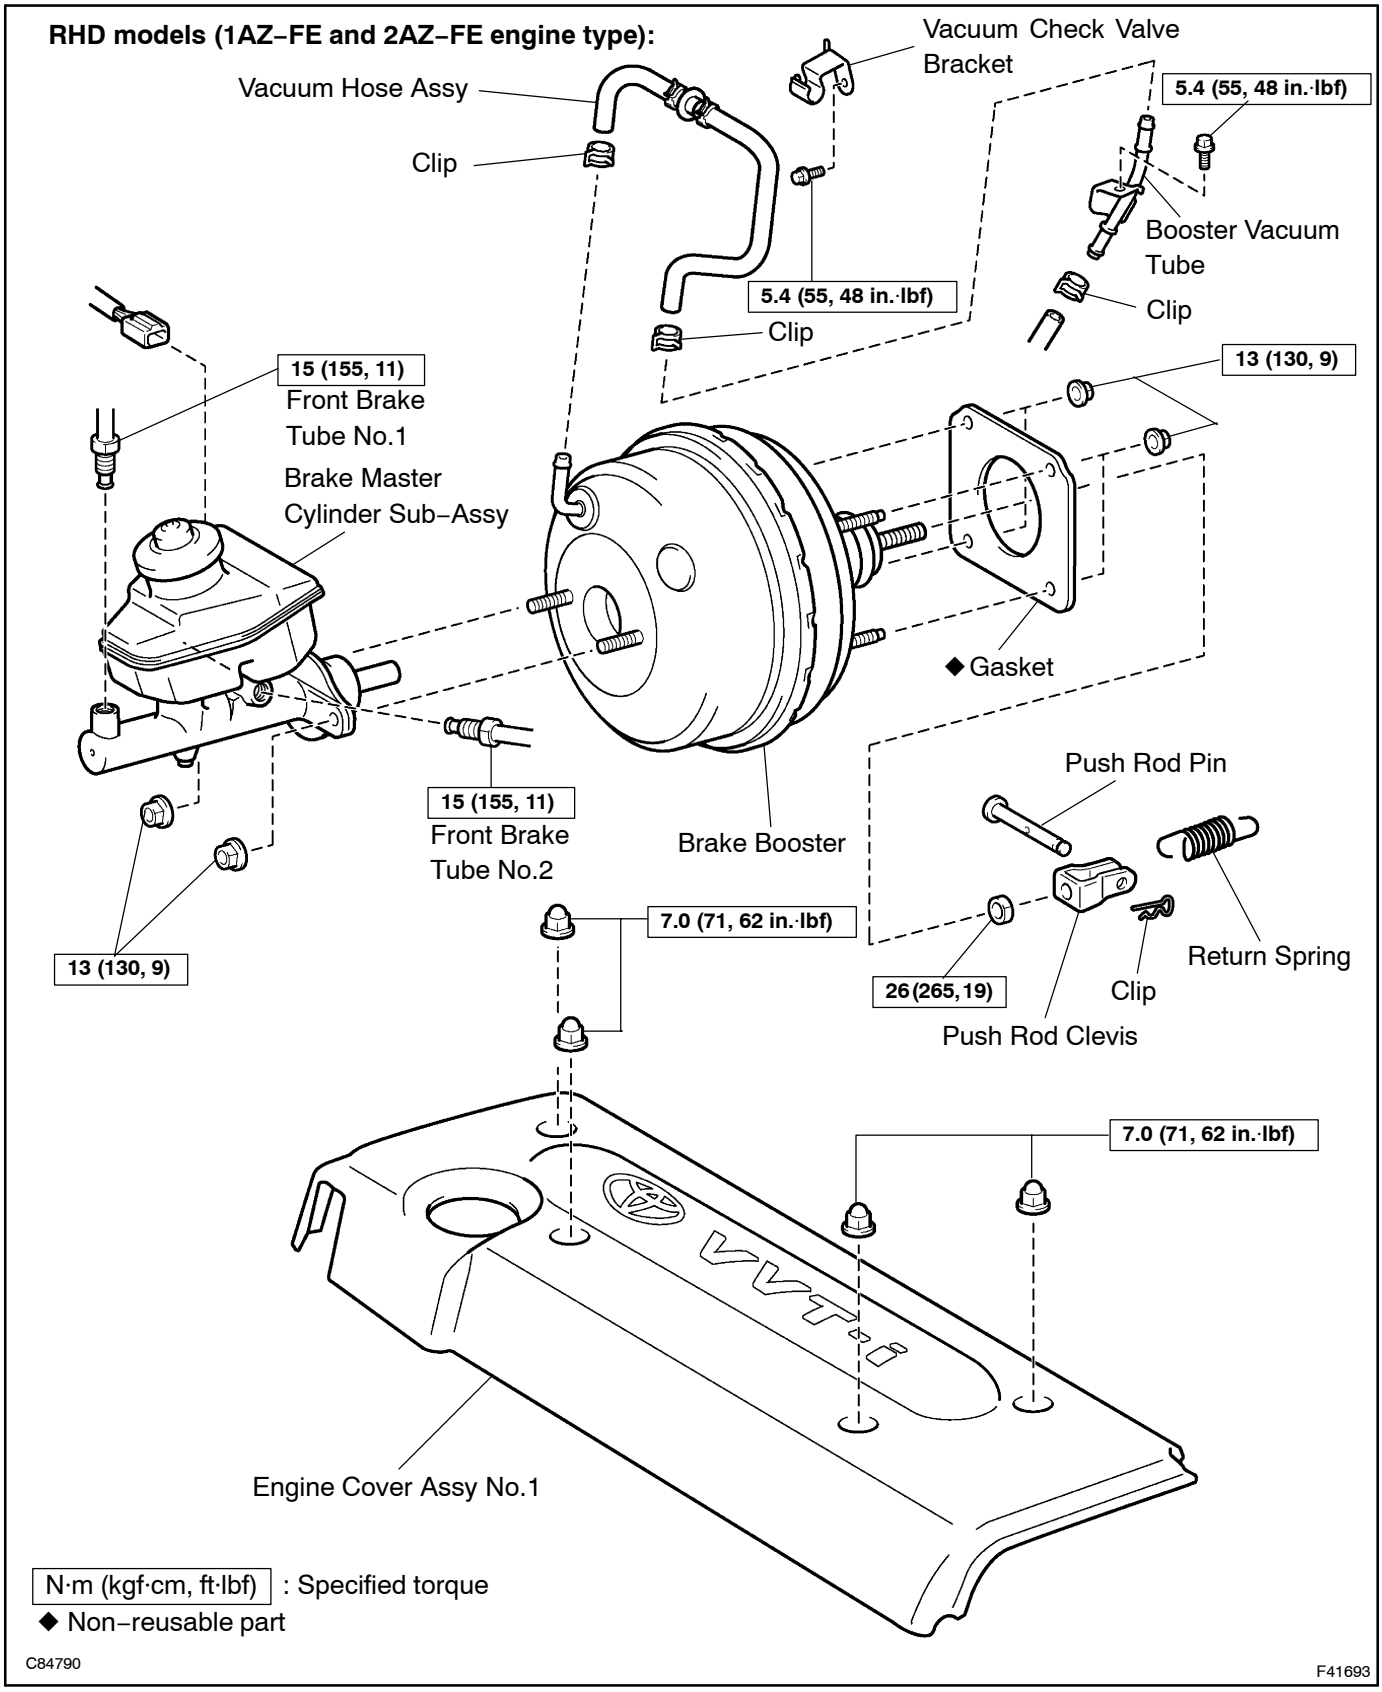
LHD models:

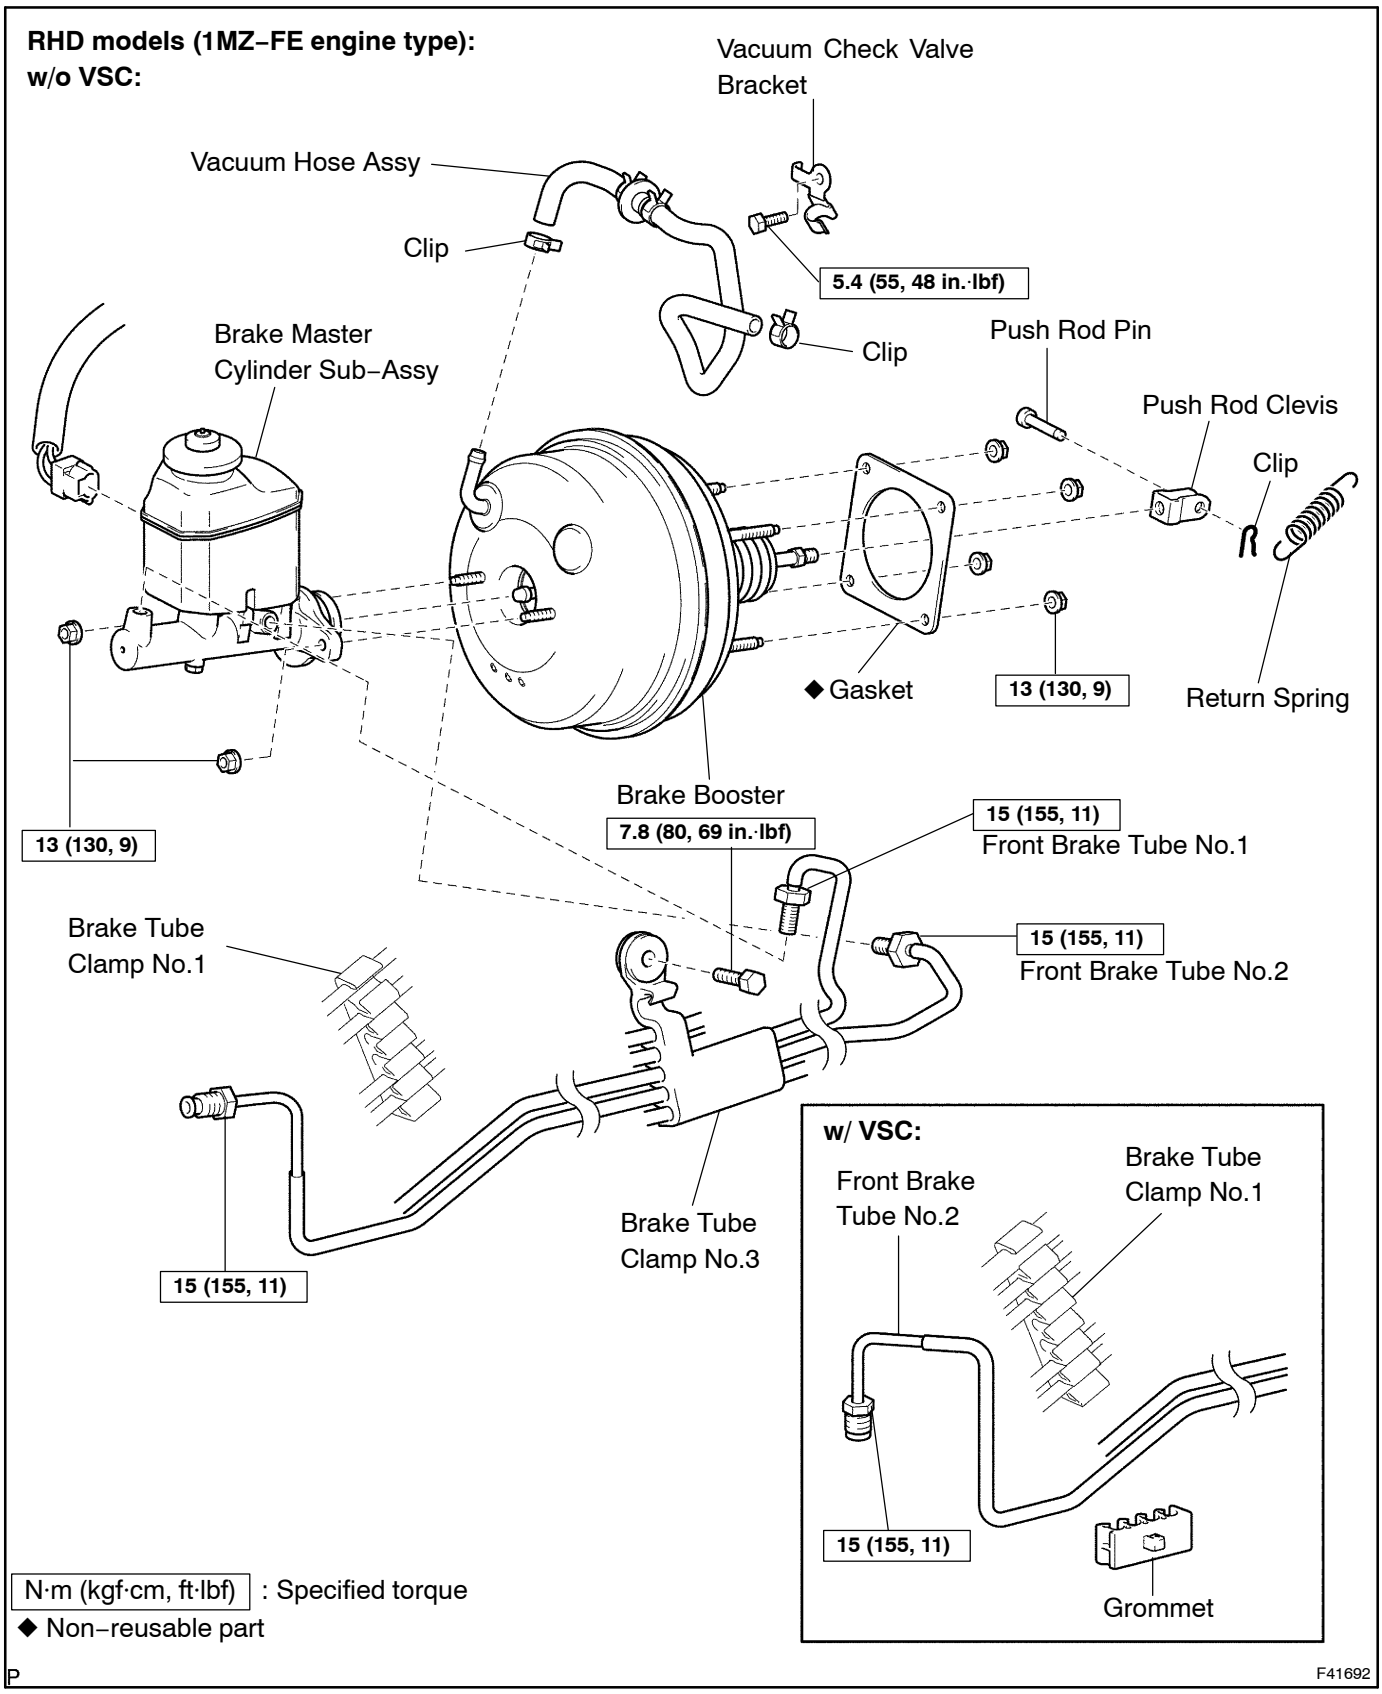


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

F42133


RHD models (1AZ–FE and 2AZ–FE engine type):
Vacuum Check Valve Bracket
Vacuum Hose Assy
Clip
5.4 (55, 48 in.·lbf)
Booster Vacuum Tube
5.4 (55, 48 in.·lbf)
Clip
Clip
15 (155, 11)
Front Brake Tube No.1
13 (130, 9)
Brake Master Cylinder Sub–Assy
◆ Gasket
15 (155, 11)
Front Brake Tube No.2
Brake Booster
Push Rod Pin
7.0 (71, 62 in.·lbf)
13 (130, 9)
Return Spring
26 (265, 19)
Clip
Push Rod Clevis
7.0 (71, 62 in.·lbf)
Engine Cover Assy No.1
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
C84790
F41693


RHD models (1MZ–FE engine type):
w/o VSC:
Vacuum Check Valve Bracket
Vacuum Hose Assy
Clip
5.4 (55, 48 in.·lbf)
Clip
Brake Master Cylinder Sub–Assy
Push Rod Pin
Push Rod Clevis
Clip
◆ Gasket
13 (130, 9)
Return Spring
Brake Booster
7.8 (80, 69 in.·lbf)
13 (130, 9)
15 (155, 11)
Front Brake Tube No.1
Brake Tube Clamp No.1
15 (155, 11)
Front Brake Tube No.2
Brake Tube Clamp No.3
15 (155, 11)
w/ VSC:
Front Brake Tube No.2
Brake Tube Clamp No.1
15 (155, 11)
Grommet
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
F41692