YAWRATE SENSOR


320DR–01

REPLACEMENT

NOTICE:


Do not separate the sensor from the bracket.

1. **REMOVE CONSOLE PANEL UPPER REAR**
   (See page 71–10)
2. **REMOVE RR CONSOLE BOX(See page 71–10)**

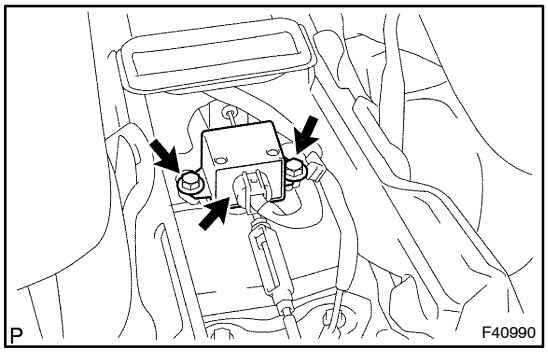

3. **REMOVE YAWRATE SENSOR**

(a) Disconnect the yawrate sensor connector.
(b) Remove the 2 bolts and yawrate sensor.

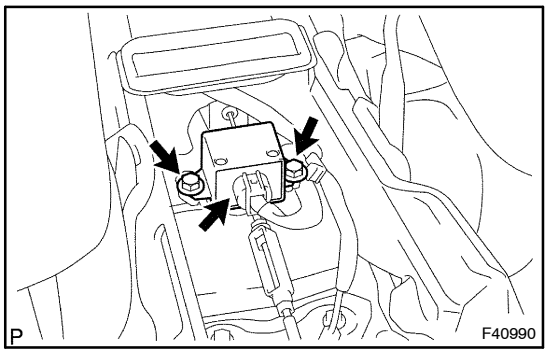

4. **INSTALL YAWRATE SENSOR**

(a) Install the yawrate sensor with the 2 bolts.
Torque: 12.5 N·m (127 kgf·cm, 9 ft·lbf)
(b) Connect the yawrate sensor connector.

5. **INSTALL RR CONSOLE BOX(See page 71–10)**
6. **INSTALL CONSOLE PANEL UPPER REAR**
   (See page 71–10)
7. **PERFORM YAWRATE SENSOR ZERO POINT CALIBRATION(See page 05–511)**
8. **PERFORM DECELERATION SENSOR ZERO POINT CALIBRATION(See page 05–511)**