33056–01


ADJUSTMENT

1. **REMOVE REAR WHEEL**
2. **ADJUST PARKING BRAKE SHOE CLEARANCE(See page 33–21)**
3. **INSTALL REAR WHEEL**
   Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
4. **INSPECT PARKING BRAKE PEDAL TRAVEL(PEDAL TYPE PARKING BRAKE)**

(a) Slowly depress the parking brake pedal all the way, and count the number of clicks.
Parking brake pedal travel: 3 – 6 clicks at 300 N (31 kgf, 68.3 lbf)

5. **INSPECT PARKING BRAKE LEVER TRAVEL(LEVER TYPE PARKING BRAKE)**

(a) Pull the parking brake lever all the way up, and count the number of clicks.
Parking brake lever travel: 6 – 9 clicks at 200 N (20 kgf, 44.1 lbf)

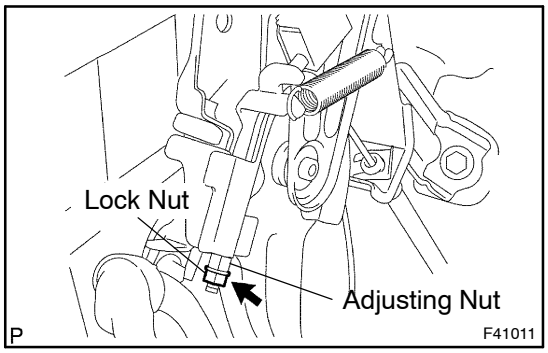


6. **ADJUST PARKING BRAKE PEDAL TRAVEL(PEDAL TYPE PARKING BRAKE)**

(a) Depress the parking brake pedal 3 notches to make a room for the procedure, and loosen the lock nut.
(b) Return the parking brake pedal to the original position.
(c) Turn the adjusting nut until the parking brake pedal travel is correct.
(d) Depress the parking brake pedal 3 notches to make a room for the procedure, and tighten the lock nut.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)
(e) Return the parking brake pedal to the original position.
(f) Check whether parking brake drags or not.
(g) When operating the parking brake pedal, check that the parking brake pedal indicator light lights up.

7. **ADJUST PARKING BRAKE LEVER TRAVEL(LEVER TYPE PARKING BRAKE)**

(a) Remove the console panel upper.
(b) Remove the air duct rear No.1.

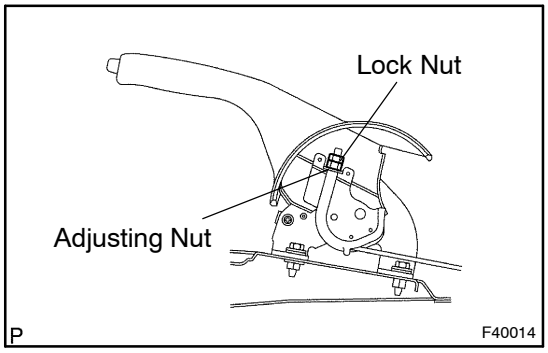

(c) Loosen the lock nut and turn the adjusting nut until the lever travel is correct.
(d) Tighten the lock nut.
Torque: 5.0 N·m (51 kgf·cm, 44 in.·lbf)
(e) Install the air duct rear No.1.
(f) Install the console panel upper.