PARKING BRAKE LEVER SUB–ASSY

33058–01


REPLACEMENT

HINT:

COMPONENTS: See page 71–7 and 33–3

1. **REMOVE CONSOLE PANEL UPPER (See page 71–10)**
2. **REMOVE AIR DUCT REAR NO.1 (See page 71–10)**
3. **REMOVE PARKING BRAKE LEVER SUB–ASSY**

(a) Disconnect the parking brake switch connector.
(b) Remove the lock nut and adjusting nut.

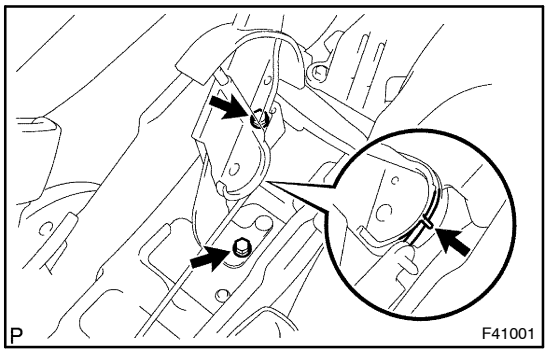


(c) Remove the 2 bolts.
(d) Using a screwdriver, disconnect the parking brake cable No.1 and remove the parking brake lever sub–assy.

4. **REMOVE PARKING BRAKE SWITCH ASSY**

(a) Remove the screw and parking brake switch assy.

5. **INSTALL PARKING BRAKE SWITCH ASSY**

(a) Install the parking brake switch assy with the screw.

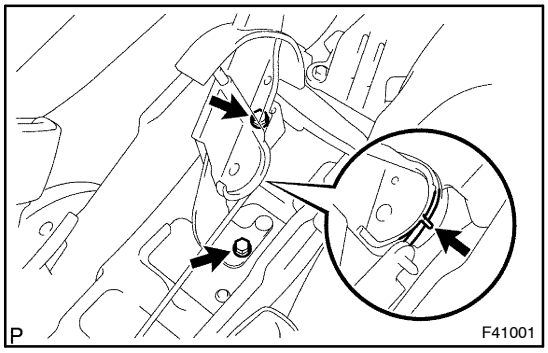

6. **INSTALL PARKING BRAKE LEVER SUB–ASSY**

(a) Connect the parking brake cable to the lever and install the adjusting nut and lock nut.
(b) Install the paking brake lever sub–assy with the 2 bolts.
Torque: 23 N·m (235 kgf·cm, 17 ft·lbf)
(c) Connect the parking brake switch connector.

7. **INSTALL AIR DUCT REAR NO.1 (See page 71–10)**
8. **INSTALL CONSOLE PANEL UPPER (See page 71–10)**
9. **CHECK PARKING BRAKE LEVER TRAVEL(See page 33–2)**

10. ADJUST PARKING BRAKE LEVER TRAVEL(See page 33–2)