PARKING BRAKE CONTROL PEDAL ASSY


33059–01

OVERHAUL

HINT:


COMPONENTS: See page 71–7 and 33–3

1. **REMOVE INSTRUMENT CLUSTER FINISH PANEL**
   (See page 71–10)
2. **REMOVE COMBINATION METER ASSY**
   (See page 71–10)
3. **REMOVE FRONT DOOR SCUFF PLATE LH**
   (See page 71–10)
4. **REMOVE COWL SIDE TRIM SUB–ASSY LH**
   (See page 71–10)
5. **REMOVE INSTRUMENT PANEL SUB–ASSY UPPER**
   (See page 71–10)

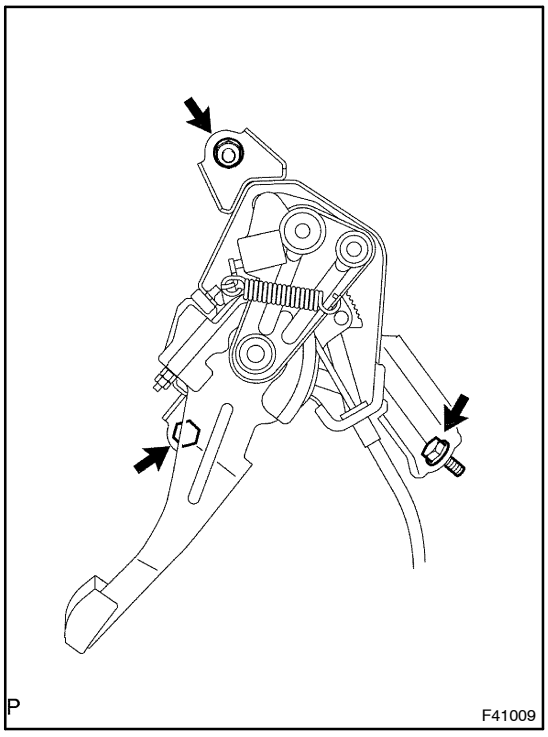

6. **REMOVE PARKING BRAKE CONTROL PEDAL ASSY**

(a) Disconnect the parking brake switch connector.
(b) Remove the 2 bolts, nut and parking brake control pedal assy.

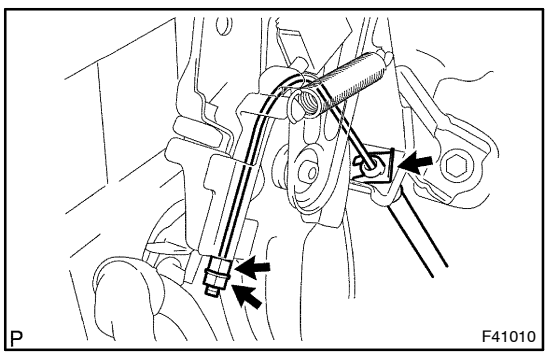

7. **REMOVE PARKING BRAKE CABLE ASSY NO.1**

(a) Remove the lock nut, adjusting nut, clip and parking brake assy No.1.

8. REMOVE PARKING BRAKE SWITCH ASSY

(a) Remove the screw and parking brake switch assy.

9. REMOVE TENSION SPRING

10. REMOVE RETURN SPRING DAMPER

11. REMOVE PARKING PEDAL PAD


12. INSTALL PARKING PEDAL PAD

13. INSTALL RETURN SPRING DAMPER

14. INSTALL TENSION SPRING


15. INSTALL PARKING BRAKE SWITCH ASSY

(a) Install the parking brake switch assy with the screw.

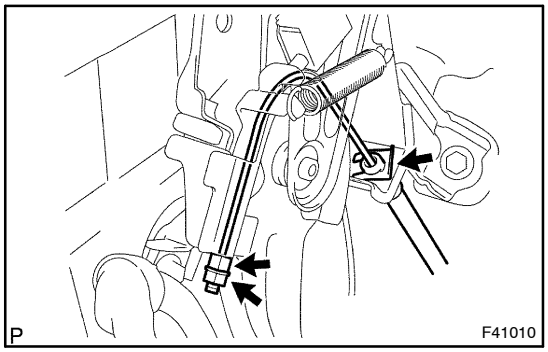

16. INSTALL PARKING BRAKE CABLE ASSY NO.1

(a) Install the parking brake cable assy No.1 with the clip, adjusting nut and lock nut.

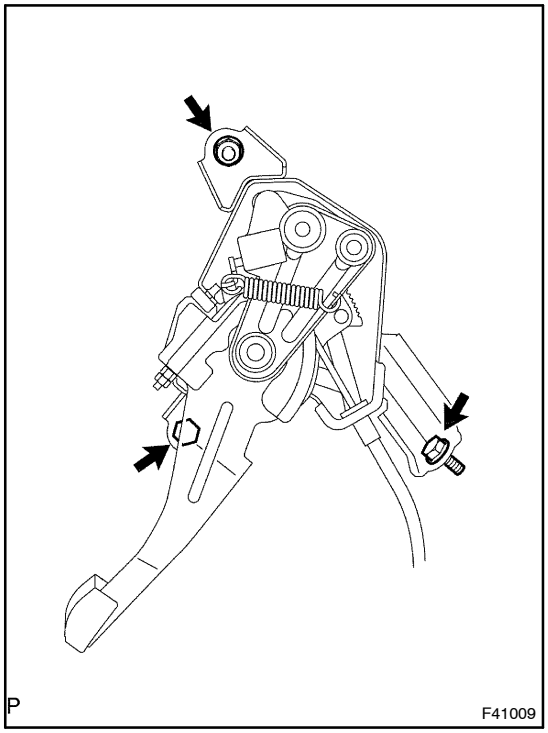

17. INSTALL PARKING BRAKE CONTROL PEDAL ASSY

(a) Install the parking brake control pedal assy with the 2 bolts and nut.
Torque: 39 N·m (398 kgf·cm, 29 ft·lbf)

(b) Connect the parking brake switch connector.

18. **INSTALL INSTRUMENT PANEL SUB–ASSY UPPER**
    (See page 71–10)
19. **INSTALL COWL SIDE TRIM SUB–ASSY LH**
    (See page 71–10)
20. **INSTALL FRONT DOOR SCUFF PLATE LH**
    (See page 71–10)
21. **INSTALL COMBINATION METER ASSY**
    (See page 71–10)
22. **INSTALL INSTRUMENT CLUSTER FINISH PANEL**
    (See page 71–10)
23. **INSPECT AND ADJUST PARKING BRAKE PEDAL TRAVEL(See page 33–2)**