PARKING BRAKE CABLE ASSY NO.1


3305A–01

REPLACEMENT

HINT:

COMPONENTS: See page 71–7 and 33–3


1. **REMOVE FRONT DOOR SCUFF PLATE LH(PEDAL TYPE PARKING BRAKE) (See page 71–10)**
2. **REMOVE COWL SIDE TRIM SUB–ASSY LH(PEDAL TYPE PARKING BRAKE) (See page 71–10)**
3. **REMOVE INSTRUMENT PANEL SUB–ASSY UPPER(PEDAL TYPE PARKING BRAKE) (See page 71–10)**
4. **REMOVE CONSOLE PANEL UPPER REAR (See page 71–10)**
5. **REMOVE CONSOLE BOX CARPET (See page 71–10)**
6. **REMOVE RR CONSOLE BOX(See page 71–10)**
7. **REMOVE INSTRUMENT PANEL ASH RECEPTACLE ASSY (See page 71–10)**
8. **REMOVE CONSOLE PANEL UPPER (See page 71–10)**
9. **REMOVE CONSOLE BOX FRONT (See page 71–10)**
10. **REMOVE AIR DUCT REAR NO.1 (See page 71–10)**
11. **REMOVE AIR DUCT REAR NO.2 (See page 71–10)**
12. **REMOVE CONSOLE BOX DUCT NO.1 (See page 71–10)**
13. **REMOVE SHIFT LEVER SHAFT HOUSING ASSY(See page 71–10)**
14. **REMOVE YAWRATE SENSOR(W/ VSC) (See page 32–53)**

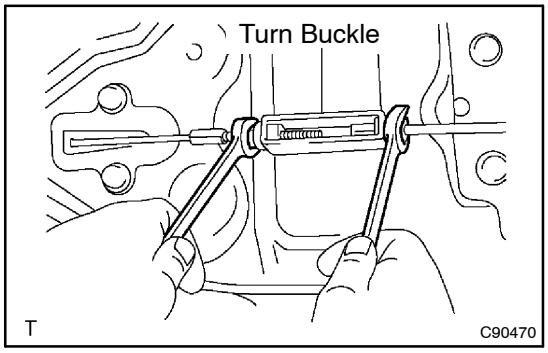

15. **REMOVE PARKING BRAKE CABLE ASSY NO.1(PEDAL TYPE PARKING BRAKE)**


(a) Loosen the turn buckle, disconnect the parking brake cable assy No.1 from the parking brake cable assy No.4.


(b) Remove the 2 bolts and console box mounting bracket No.2.

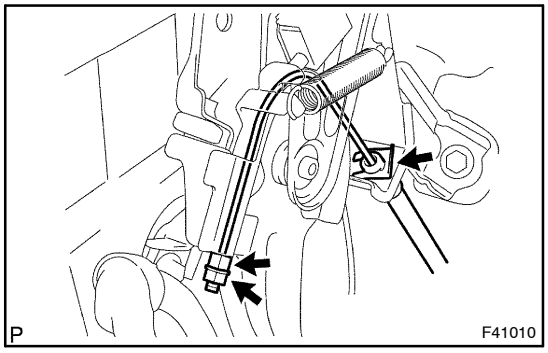

(c) Remove the lock nut, adjusting nut, clip and disconnect the parking brake cable assy No.1 from the parking brake control pedal assy.

(d) Remove the 2 nuts, 2 bolts, clip and parking brake cable assy No.1.

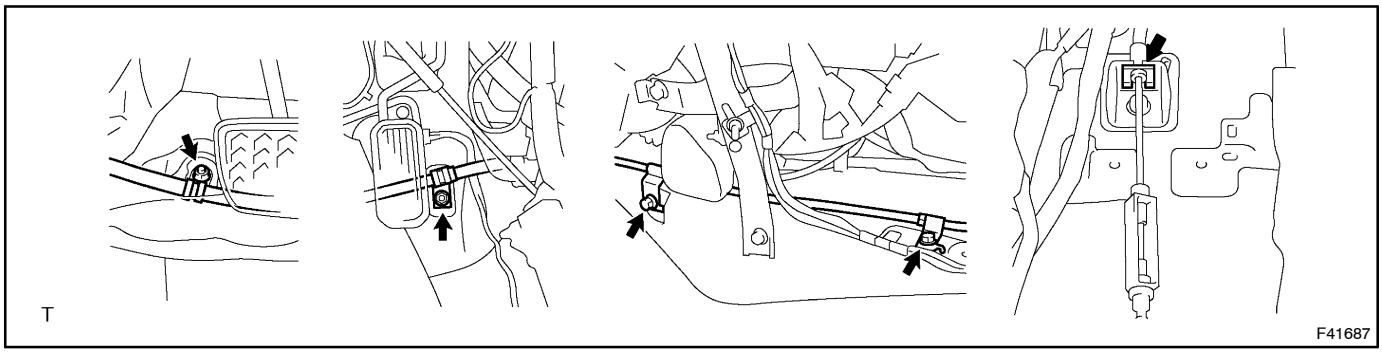


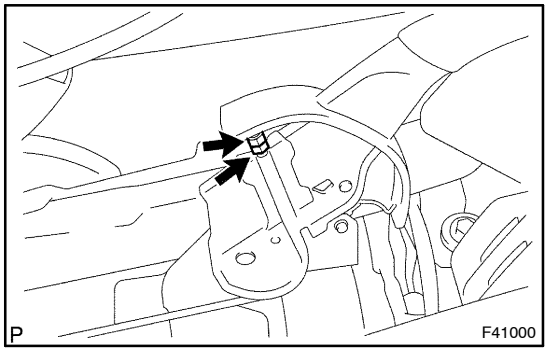

16. REMOVE PARKING BRAKE CABLE ASSY NO.1(LEVER TYPE PARKING BRAKE)

(a) Remove the lock nut and adjusting nut from the parking brake cable assy No.1.


(b) Remove the 2 bolts and console box mounting bracket No.2.

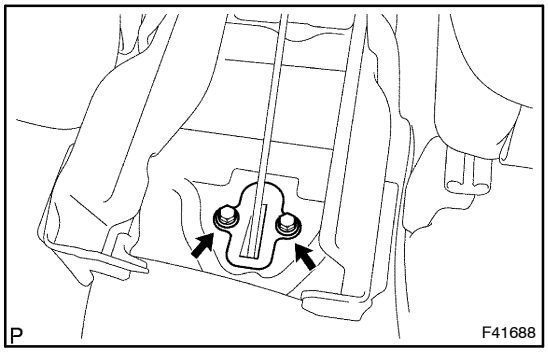


(c) Remove the 2 bolts and separate the parking brake cable No.1 from the parking brake equalizer.

17. INSTALL PARKING BRAKE CABLE ASSY NO.1(PEDAL TYPE PARKING BRAKE)


(a) Install the parking brake cable assy No.1 with the 2 nuts, 2 bolts and clip.

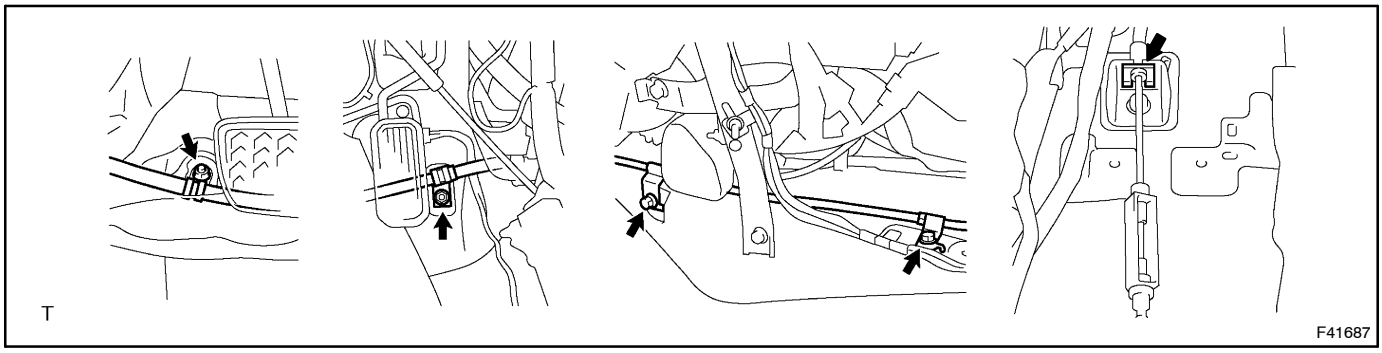

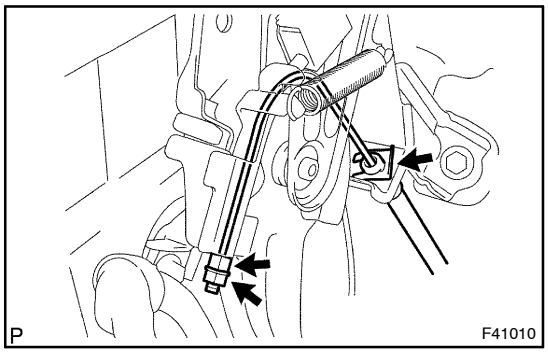


(b) Install the parking brake cable assy No.1 with the clip, adjusting nut and lock nut to the parking brake control pedal assy.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

(c) Install the console box mounting bracket No.2 with the 2 bolts.
Torque: 12.5 N·m (128 kgf·cm, 9 ft·lbf)

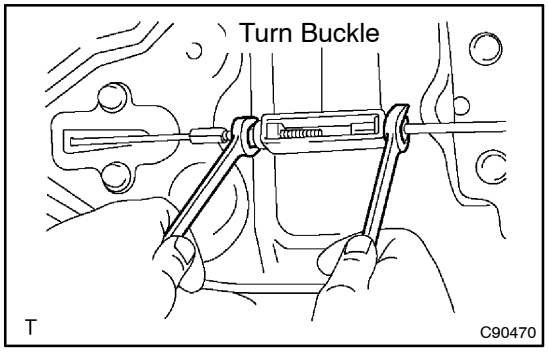


(d) Tighten the turn buckle, connect the parking brake cable assy No.1 to the parking brake cable assy No.4.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

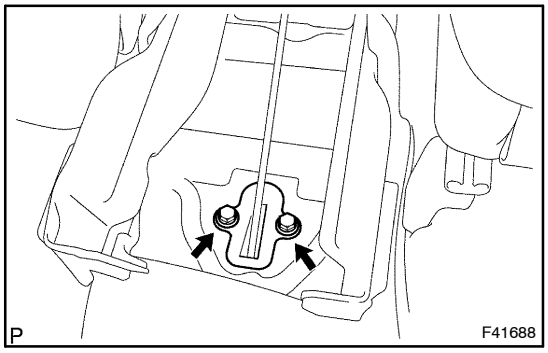

18. INSTALL PARKING BRAKE CABLE ASSY NO.1(LEVER TYPE PARKING BRAKE)

(a) Install the parking brake cable assy No.1 with the 2 bolts to the parking brake equalizer.
Torque: 23 N·m (235 kgf·cm, 17 ft·lbf)

(b) Install the console box mounting bracket No.2 with the 2 bolts.
Torque: 12.5 N·m (128 kgf·cm, 9 ft·lbf)

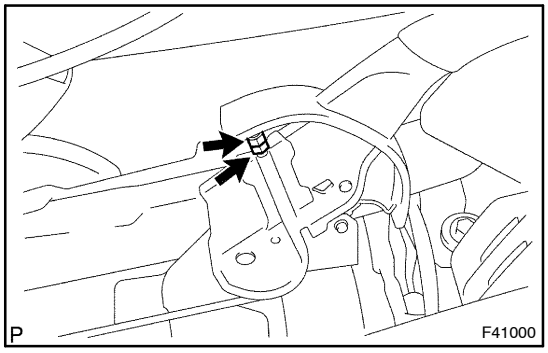

(c) Install the parking brake cable assy No.1 with the adjusting nut and lock nut to the parking brake lever assy.
Torque: 5.0 N·m (51 kgf·cm, 44 in.·lbf)

19. **INSTALL YAWRATE SENSOR(W/ VSC)**
(See page 32–53)
20. **INSTALL SHIFT LEVER SHAFT HOUSING ASSY(See page 71–10)**
21. **INSTALL CONSOLE BOX DUCT NO.1**
(See page 71–10)
22. **INSTALL AIR DUCT REAR NO.2**
(See page 71–10)
23. **INSTALL AIR DUCT REAR NO.1**
(See page 71–10)
24. **INSTALL CONSOLE BOX FRONT**
(See page 71–10)
25. **INSTALL CONSOLE PANEL UPPER**
(See page 71–10)
26. **INSTALL INSTRUMENT PANEL ASH RECEPTACLE ASSY**
(See page 71–10)
27. **INSTALL RR CONSOLE BOX(See page 71–10)**
28. **INSTALL CONSOLE BOX CARPET**
(See page 71–10)
29. **INSTALL CONSOLE PANEL UPPER REAR**
(See page 71–10)
30. **INSTALL INSTRUMENT PANEL SUB–ASSY UPPER(PEDAL TYPE PARKING BRAKE)**
(See page 71–10)
31. **INSTALL COWL SIDE TRIM SUB–ASSY LH(PEDAL TYPE PARKING BRAKE)**
(See page 71–10)
32. **INSTALL FRONT DOOR SCUFF PLATE LH(PEDAL TYPE PARKING BRAKE)**
(See page 71–10)
33. **INSPECT AND ADJUST PARKING BRAKE PEDAL TRAVEL(PEDAL TYPE PARKING BRAKE)(See page 33–2)**
34. **INSPECT AND ADJUST PARKING BRAKE LEVER TRAVEL(LEVER TYPE PARKING BRAKE)**
(See page 33–2)
35. **PERFORM YAWRATE SENSOR ZERO POINT CALIBRATION(W/ VSC)(See page 05–511)**