PARKING BRAKE CABLE ASSY NO.3

REPLACEMENT

3305B–01

HINT:

- COMPONENTS: See page 33–3
- For parking brake cable No.2, employ the same procedure to the RH side.

1. REMOVE REAR WHEEL

2. SEPARATE REAR DISC BRAKE CALIPER ASSY, LH

(a) Remove the 2 bolts and separate the rear disc brake caliper assy LH.

HINT:


Do not the flexible hose from the brake caliper assy LH.

3. REMOVE REAR DISC

4. REMOVE PARKING BRAKE SHOE(See page 33–21)

5. REMOVE PARKING BRAKE CABLE HEAT INSULATOR


(a) Remove the 3 nuts and parking brake heat insulator.

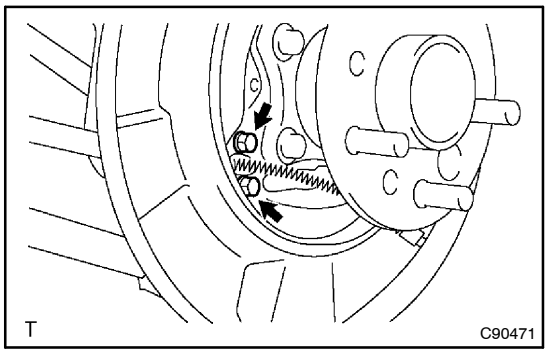

6. REMOVE PARKING BRAKE CABLE ASSY NO.3

(a) Remove the 2 bolts and disconnect the parking brake cable assy No.3 from the backing plate.

(b) Remove the 2 nuts, bolt and parking brake cable assy No.3.

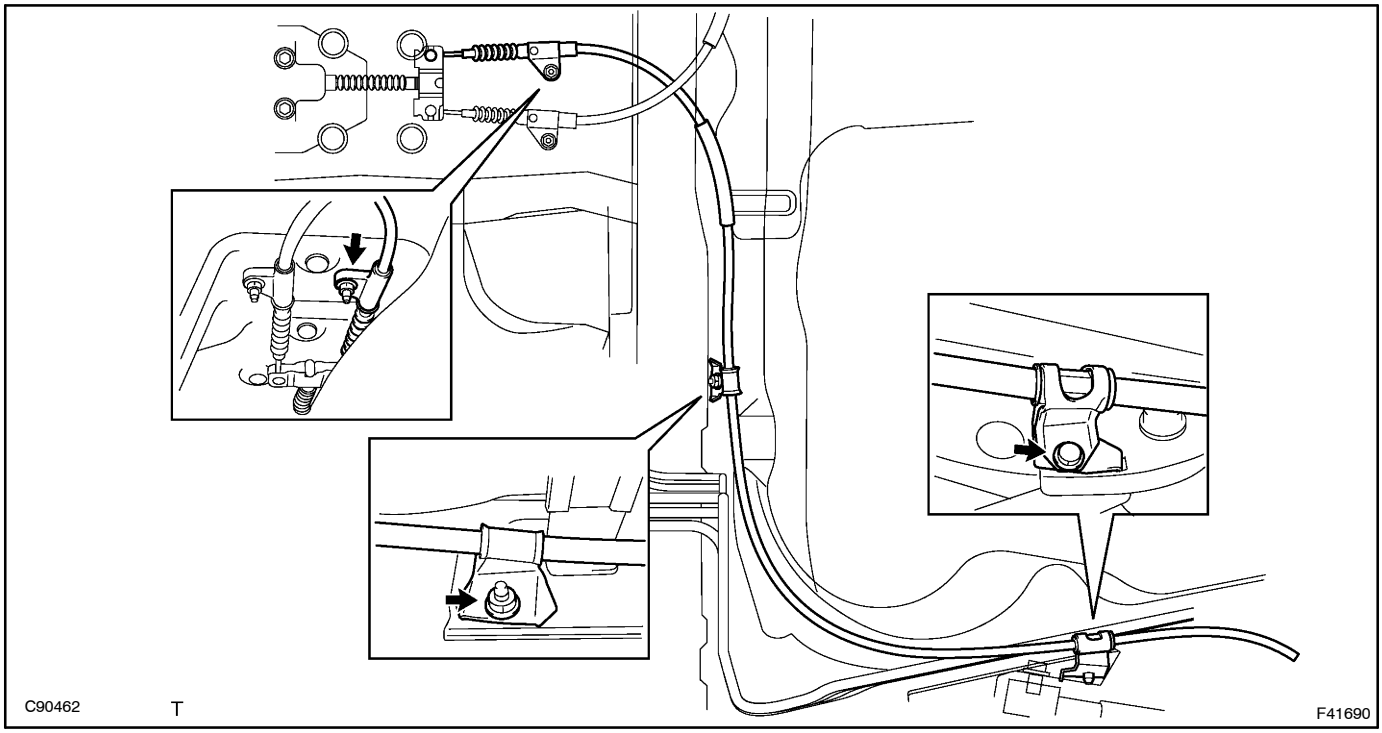



(c) Disconnect the parking brake cable assy No.3 from the parking brake equalizer.

7. INSTALL PARKING BRAKE CABLE ASSY NO.3

(a) Connect the parking brake cable assy No.3 to the parking brake equalizer.

(b) Install the parking brake cable assy No.3 with the 2 nuts and bolt.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

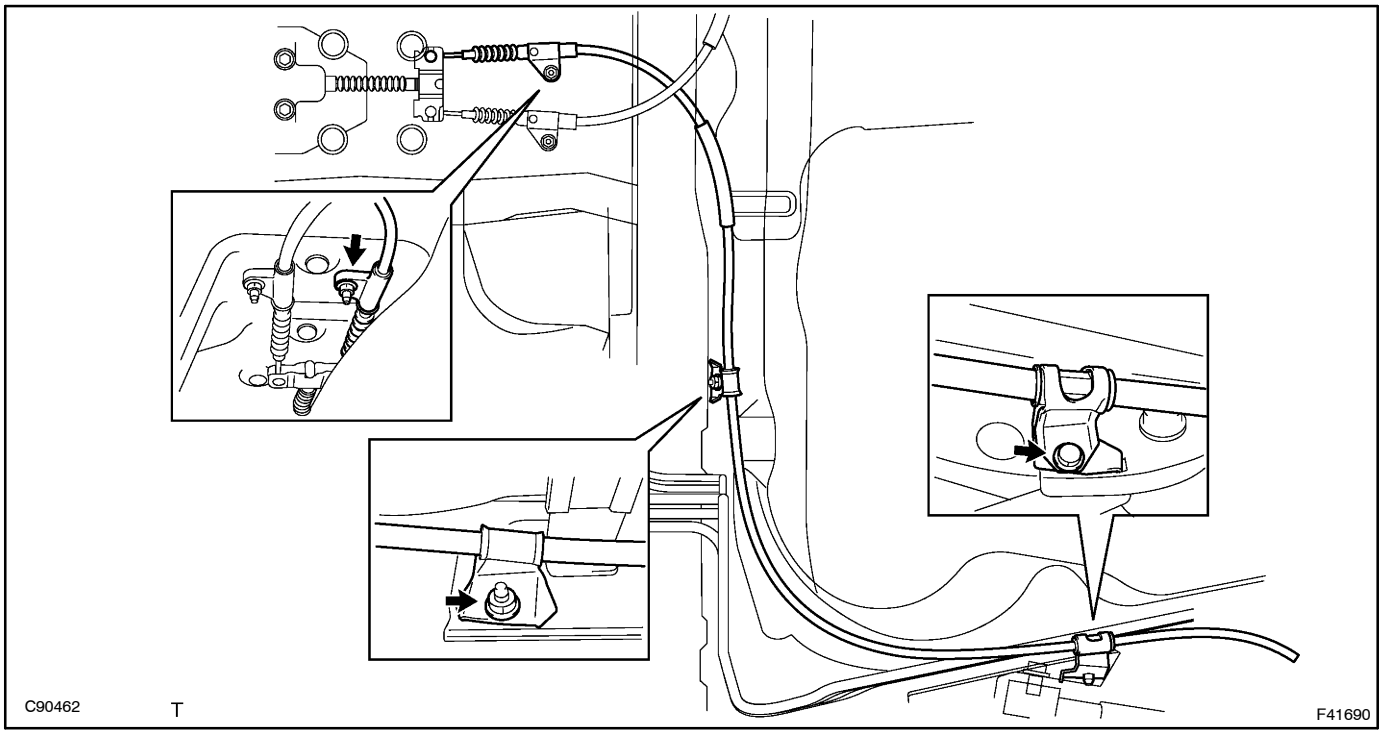

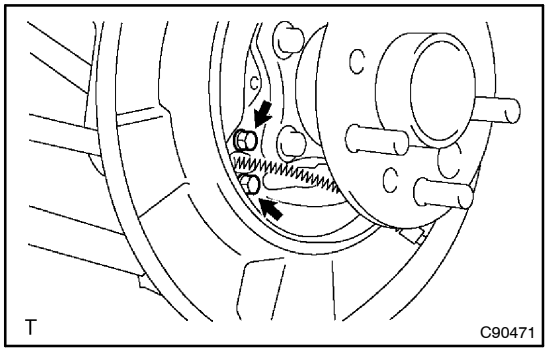

(c) Install the parking brake cable assy No.3 with the 2 bolts to the backing plate.
Torque: 7.8 N·m (80 kgf·cm, 69 in.·lbf)

8. INSTALL PARKING BRAKE CABLE HEAT INSULATOR

(a) Install the parking brake heat insulator with the 3 nuts.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

9. APPLICATION HIGH TEMPERATURE GREASE(See page 33–21)

10. INSTALL PARKING BRAKE SHOE(See page 33–21)

11. CHECK PARKING BRAKE INSTALLATION(See page 33–21)

12. INSTALL REAR DISC

13. ADJUST PARKING BRAKE SHOE CLEARANCE(See page 33–21)

14. INSTALL REAR DISC BRAKE CALIPER ASSY, LH

(a) Install the rear disc brake caliper with the 2 bolts.
Torque: 62 N·m (630 kgf·cm, 46 ft·lbf)

15. INSTALL REAR WHEEL
Torque: 103 N·m (1.050 kgf·cm, 76 ft·lbf)

16. INSPECT AND ADJUST PARKING BRAKE PEDAL TRAVEL(PEDAL TYPE PARKING BRAKE)(See page 33–2)

17. INSPECT AND ADJUST PARKING BRAKE LEVER TRAVEL(LEVER TYPE PARKING BRAKE) (See page 33–2)