# PARKING BRAKE CABLE ASSY NO.4

## REPLACEMENT

3305C–01

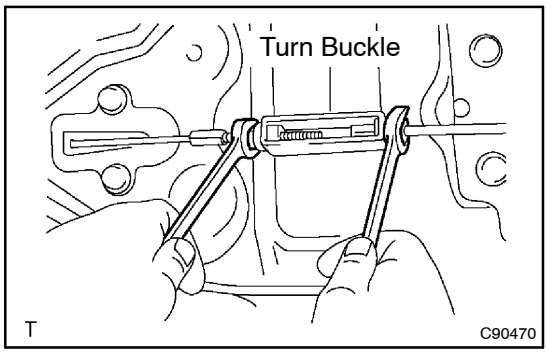
HINT:

COMPONENTS: See page 33–3

1. **REMOVE CONSOLE PANEL UPPER REAR**
   **(See page 71–10)**
2. **REMOVE CONSOLE BOX CARPET**
   **(See page 71–10)**
3. **REMOVE RR CONSOLE BOX(See page 71–10)**
4. **REMOVE CONSOLE BOX MOUNTING BRACKET NO.2**

(a) Remove the 2 bolts and console box mounting bracket No.2.

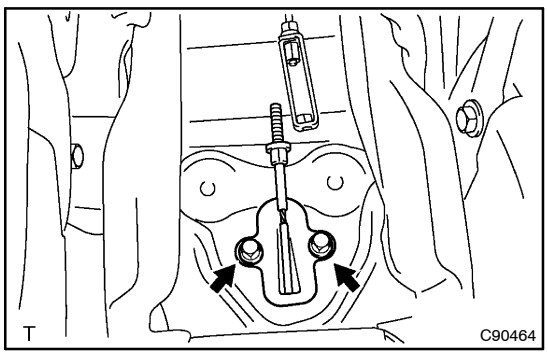
5. **REMOVE YAWRATE SENSOR(W/ VSC)**
   **(See page 32–53)**



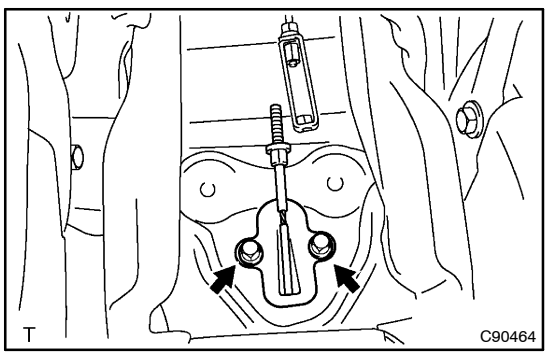

6. **REMOVE PARKING BRAKE CABLE ASSY NO.4**

(a) Loosen the turn buckle, disconnect the parking brake cable assy No.4 from the parking brake cable assy No.1.

(b) Disconnect the parking brake cable assy No.4 from the parking brake equalizer.



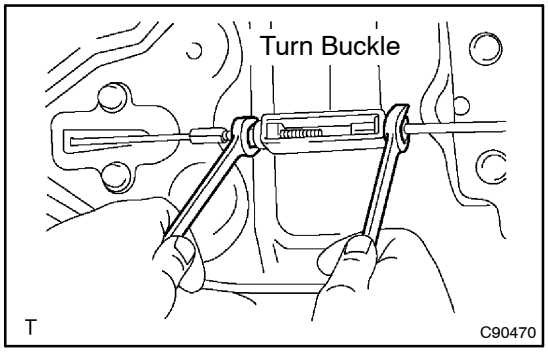

(c) Remove the 2 bolts and parking brake cable assy No.4.




7. **INSTALL PARKING BRAKE CABLE ASSY NO.4**

(a) Install the parking brake cable No.4 with the 2 bolts.
**Torque: 12.5 N·m (128 kgf·cm, 9 ft·lbf)**

(b) Connect the parking brake cable assy No.4 to the parking brake equalizer.




(c) Tighten the turn buckle, connect the parking brake cable assy No. 4 to the parking brake cable assy No.1.
**Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)**

**8. INSTALL YAWRATE SENSOR(W/ VSC)**
**(See page 32–53)**

**9. INSTALL CONSOLE BOX MOUNTING BRACKET NO.2**

(a) Install the console box mounting bracket No.2 with the 2 bolts.
**Torque: 12.5 N·m (128 kgf·cm, 9 ft·lbf)**

**10. INSTALL RR CONSOLE BOX(See page 71–10)**

**11. INSTALL CONSOLE BOX CARPET**
**(See page 71–10)**

**12. INSTALL CONSOLE PANEL UPPER REAR**
**(See page 71–10)**

**13. INSPECT AND ADJUST PARKING BRAKE PEDAL TRAVEL(See page 33–2)**

**14. PERFORM YAWRATE SENSOR ZERO POINT CALIBRATION(W/ VSC)(See page 05–511)**