
PARK/NEUTRAL POSITION SWITCH ASSY

400G0–01


REPLACEMENT

1. **REMOVE BATTERY**
2. **REMOVE ENGINE COVER SUB–ASSY NO.1**
3. **REMOVE AIR CLEANER ASSY**
4. **REMOVE AIR CLEANER HOSE NO.1**
5. **REMOVE INTAKE AIR RESONATOR SUB–ASSY**
6. **REMOVE ENGINE UNDER COVER LH**

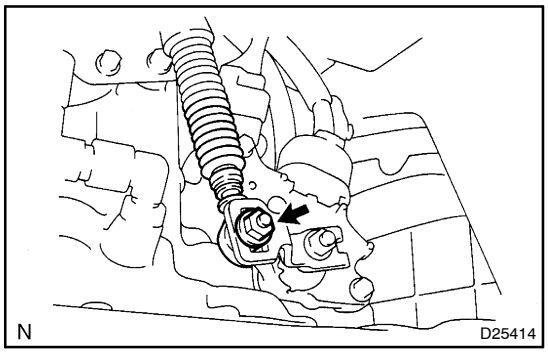


7. **DISCONNECT TRANSMISSION CONTROL CABLE ASSY**

(a) Remove the nut from the control shaft lever.
(b) Disconnect the control cable from the control shaft lever.

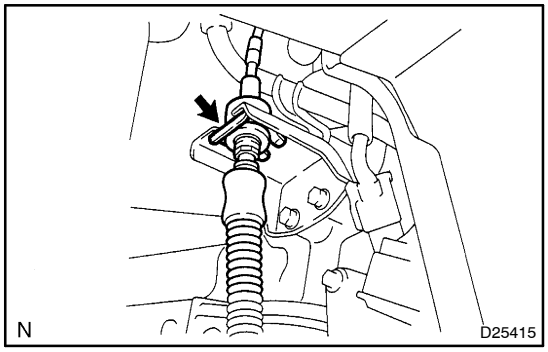


(c) Remove the clip and disconnect the control cable from the control cable bracket.

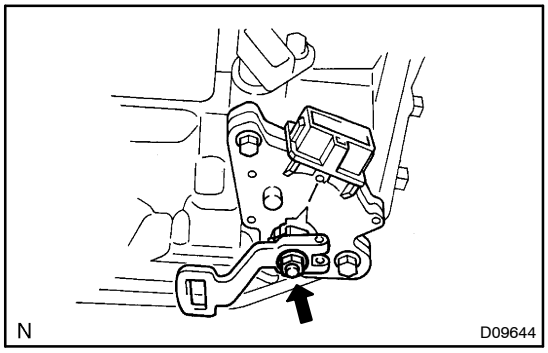


8. **REMOVE PARK/NEUTRAL POSITION SWITCH ASSY**


(a) Disconnect the park/neutral position switch connector.
(b) Remove the nut, washer and control shaft lever.

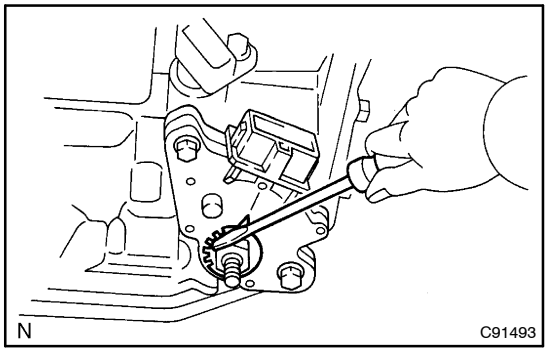


(c) Pry out the lock plate.

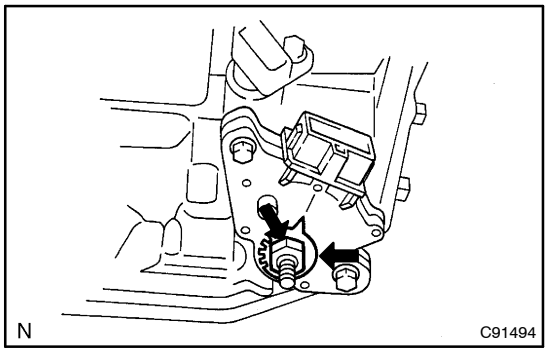

(d) Remove the lock nut and lock plate.

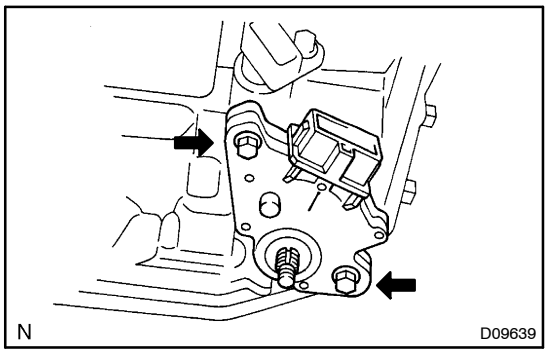


(e) Remove the 2 bolts and pull out the park/neutral position switch.

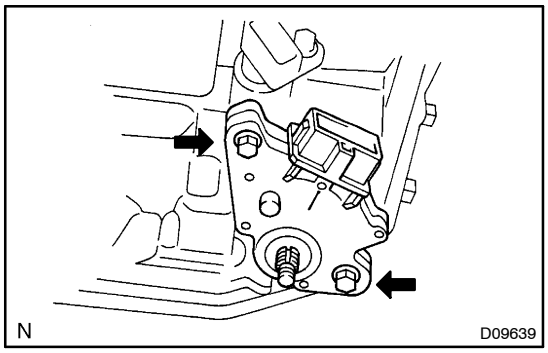


9. INSTALL PARK/NEUTRAL POSITION SWITCH ASSY


(a) Install the park/neutral position switch to the manual valve shaft.
(b) Temporarily install the 2 bolts.
(c) Place a new lock plate and tighten the nut.
Torque: 6.9 N·m (70 kgf·cm, 61 in.·lbf)
(d) Temporarily install the control shaft lever.

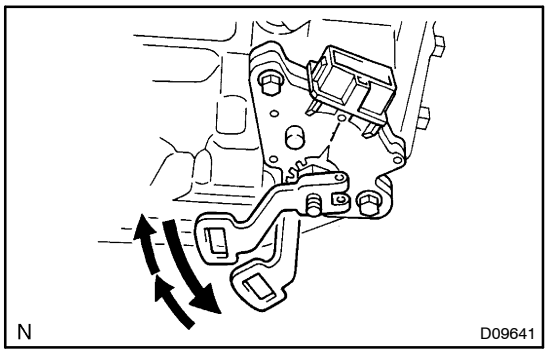


(e) Turn the lever counterclockwise until it stops, then turn it clockwise 2 notches.
(f) Remove the control shaft lever.

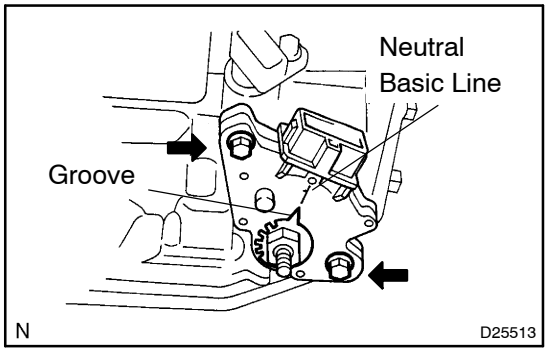


(g) Align the groove with neutral basic line.
(h) Hold the switch in position and tighten the 2 bolts.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

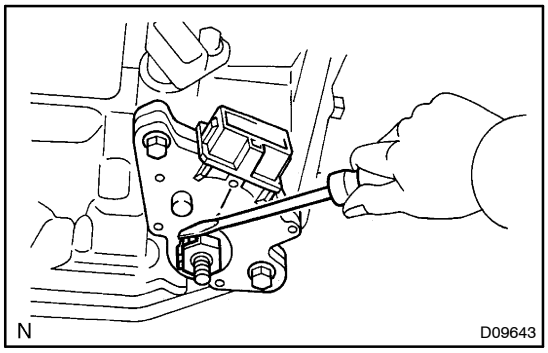


(i) Using a screwdriver, stake the nut with the lock plate.

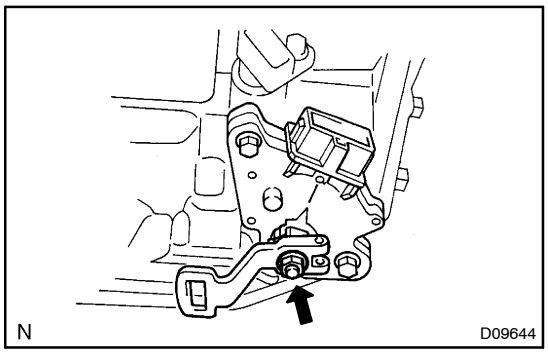

(j) Install the control shaft lever, washer and nut.
Torque: 12.7 N·m (130 kgf·cm, 9 ft·lbf)

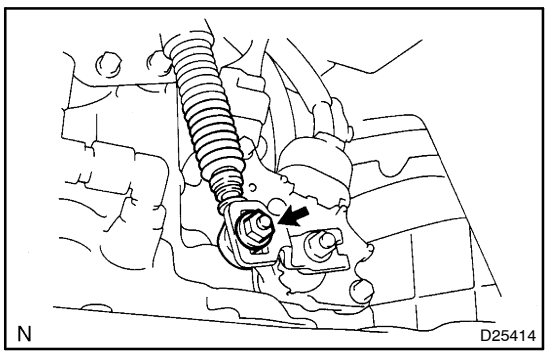

10. INSTALL TRANSMISSION CONTROL CABLE ASSY
(a) Temporarily install the control cable to the control shaft lever with the nut.

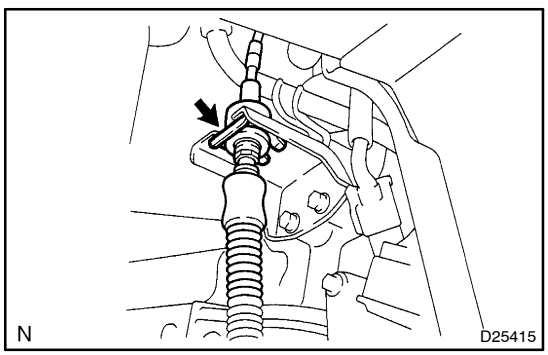

(b) Install the control cable and a new clip to the bracket.
(c) Connect the park/neutral position switch connector.

11. ADJUST SHIFT LEVER POSITION(See page 40–54)
12. INSPECT SHIFT LEVER POSITION(See page 40–54)
13. INSPECT PARK/NEUTRAL POSITION SWITCH ASSY (See page 40–7)
14. INSTALL ENGINE UNDER COVER LH
15. INSTALL INTAKE AIR RESONATOR SUB–ASSY
16. INSTALL AIR CLEANER HOSE NO.1
17. INSTALL AIR CLEANER ASSY
18. INSTALL ENGINE COVER SUB–ASSY NO.1
19. INSTALL BATTERY