
TRANSMISSION REVOLUTION SENSOR

400G6–01


REPLACEMENT

1. **REMOVE BATTERY**
2. **REMOVE ENGINE COVER SUB–ASSY NO.1**
3. **REMOVE AIR CLEANER ASSY**
4. **REMOVE AIR CLEANER HOSE NO.1**

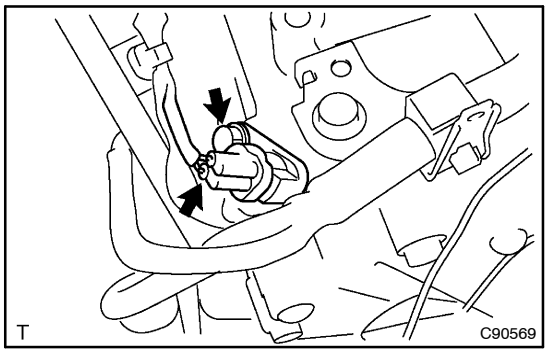


5. REMOVE TRANSMISSION REVOLUTION SENSOR(NT SENSOR)

(a) Disconnect the transmission revolution sensor connector.
(b) Remove the bolt and transmission revolution sensor.

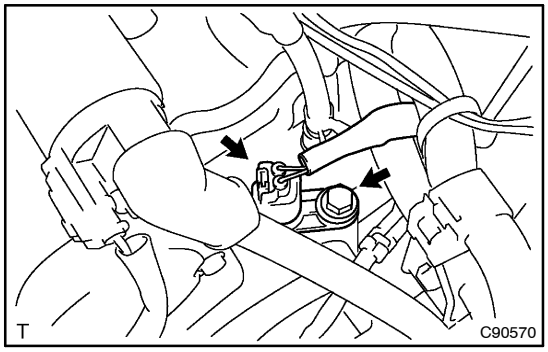

6. REMOVE TRANSMISSION REVOLUTION SENSOR(NC SENSOR)

(a) Disconnect the transmission revolution sensor connector.
(b) Remove the bolt and transmission revolution sensor.

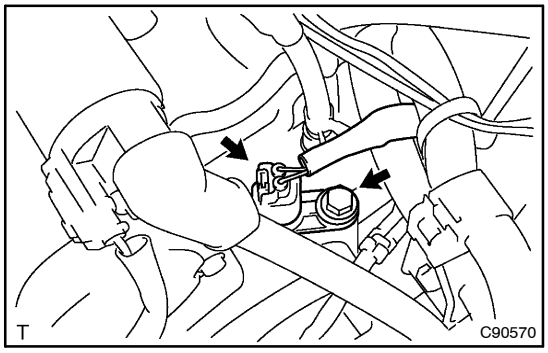


7. INSTALL TRANSMISSION REVOLUTION SENSOR(NC SENSOR)

(a) Coat an O–ring with ATF.
(b) Install the transmission revolution sensor with the bolt.
Torque: 11.3 N·m (115 kgf·cm, 8 ft·lbf)

HINT:
Make sure of the manufacturer's name.

(c) Connect the transmission revolution sensor connector.

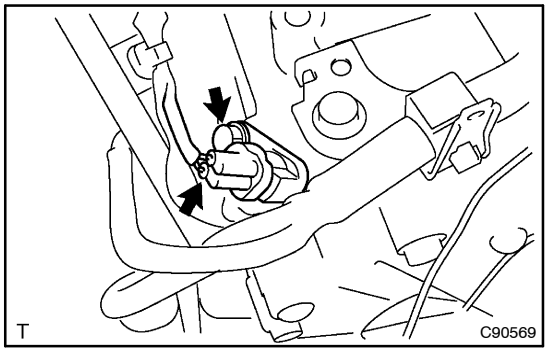

8. INSTALL TRANSMISSION REVOLUTION SENSOR(NT SENSOR)

(a) Coat an O–ring with ATF.
(b) Install the transmission revolution sensor with the bolt.
Torque: 11.3 N·m (115 kgf·cm, 8 ft·lbf)

HINT:
Make sure of the manufacturer's name.

(c) Connect the transmission revolution sensor connector.

9. INSTALL AIR CLEANER HOSE NO.1

10. INSTALL AIR CLEANER ASSY

Torque: 5.0 N·m (51 kgf·cm, 44 in.·lbf)

11. INSTALL ENGINE COVER SUB–ASSY NO.1