
SPEED SENSOR

400G7–01


REPLACEMENT

1. **REMOVE BATTERY**
2. **REMOVE ENGINE COVER SUB–ASSY NO.1**
3. **REMOVE AIR CLEANER ASSY**
4. **REMOVE AIR CLEANER HOSE NO.1**

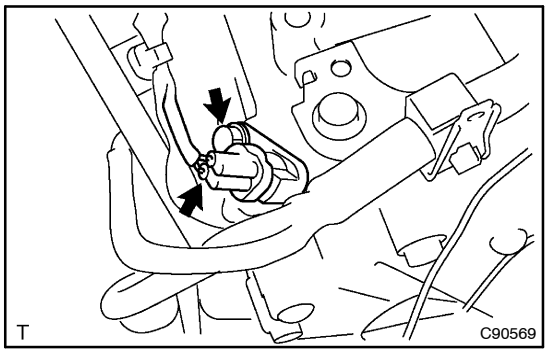


5. REMOVE SPEED SENSOR(NT SENSOR)

(a) Disconnect the speed sensor connector.
(b) Remove the bolt and speed sensor.

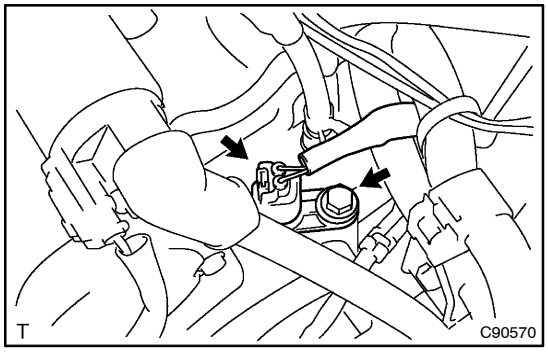

6. REMOVE SPEED SENSOR(NC SENSOR)

(a) Disconnect the speed sensor connector.
(b) Remove the bolt and speed sensor.

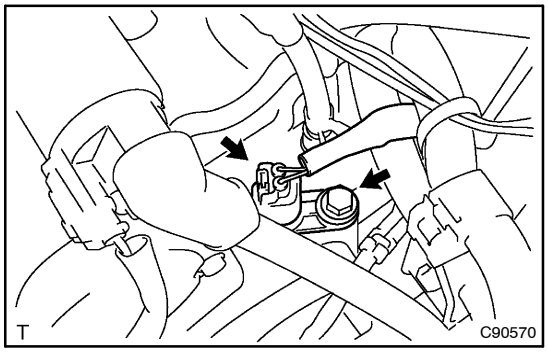


7. INSTALL SPEED SENSOR(NC SENSOR)

(a) Coat an O–ring with ATF.
(b) Install the speed sensor with the bolt.
Torque: 11.3 N·m (115 kgf·cm, 8 ft·lbf)

HINT:
Make sure of the manufacturer's name.

(c) Connect the speed sensor connector.

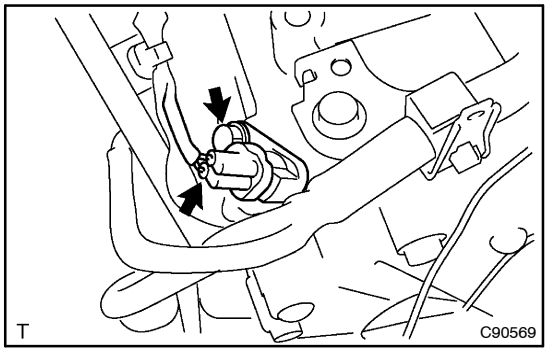

8. INSTALL SPEED SENSOR(NT SENSOR)

(a) Coat an O–ring with ATF.
(b) Install the speed sensor with the bolt.
Torque: 11.3 N·m (115 kgf·cm, 8 ft·lbf)

HINT:
Make sure of the manufacturer's name.

(c) Connect the speed sensor connector.

9. INSTALL AIR CLEANER HOSE NO.1

10. INSTALL AIR CLEANER ASSY

Torque: 5.0 N·m (51 kgf·cm, 44 in.·lbf)

11. INSTALL ENGINE COVER SUB–ASSY NO.1