
OIL COOLER ASSY

400GA–01


REPLACEMENT

1. REMOVE FRONT BUMPER COVER
(See page 76–2)

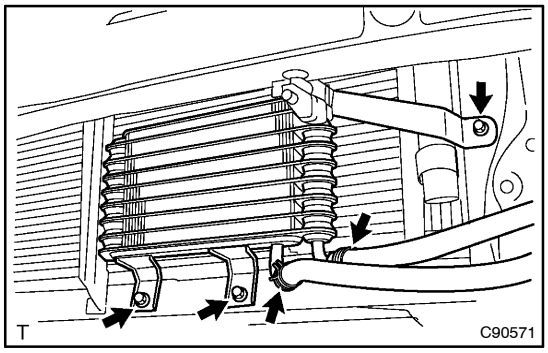

2. REMOVE OIL COOLER ASSY

(a) Loosen the clip and disconnect the oil cooler hose.
(b) Loosen the clip and disconnect the transmission oil cooler hose No. 1.
(c) Remove the bolt, 2 nuts and oil cooler assy.

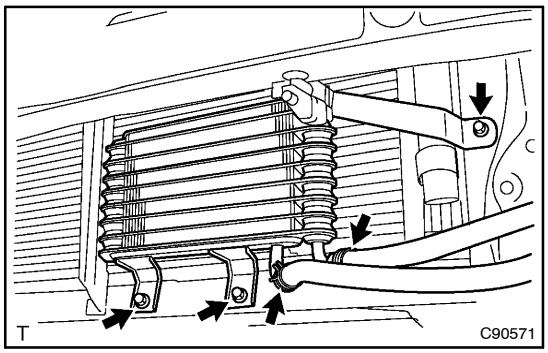

3. INSTALL OIL COOLER ASSY

(a) Install the oil cooler assy, bolt and 2 nuts.
Torque: 7.0 N·m (71 kgf·cm, 62 in.·lbf)
(b) Install the transmission oil cooler hose No. 1 and clip.
(c) Install the oil cooler hose and clip.

4. INSTALL FRONT BUMPER COVER
(See page 76–2)
5. ADD AUTOMATIC TRANSAXLE FLUID
6. INSPECT AUTOMATIC TRANSAXLE FLUID(See page 40–1)