FLOOR SHIFT SHIFT LEVER ASSY

4105A–01

REPLACEMENT

1. REMOVE FLOOR SHIFT SHIFT LEVER KNOB SUB–ASSY

2. REMOVE RR CONSOLE BOX

3. REMOVE CONSOLE BOX FRONT
(See page 71–10)

4. REMOVE AIR DUCT REAR NO.1
(See page 55–21)

5. REMOVE AIR DUCT REAR NO.2
(See page 55–21)

6. DISCONNECT FLOOR SHIFT CABLE TRANSMISSION CONTROL SELECT

(a) Remove the clip and separate the top of the select cable from the shift lever assy.
(b) Turn the lock and separate the select cable from the shift lever retainer.

7. DISCONNECT FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT


(a) Separate the top of the shift cable from the shift lever assy.
(b) Turn the lock and separate the shift cable from the shift lever retainer.


8. REMOVE FLOOR SHIFT SHIFT LEVER ASSY

(a) Remove the 4 bolts and shift lever assy.

9. INSTALL FLOOR SHIFT SHIFT LEVER ASSY

(a) Install the shift lever assy with 4 the bolts.
Torque: 12 N·m (122 kgf·cm, 9 ft·lbf)

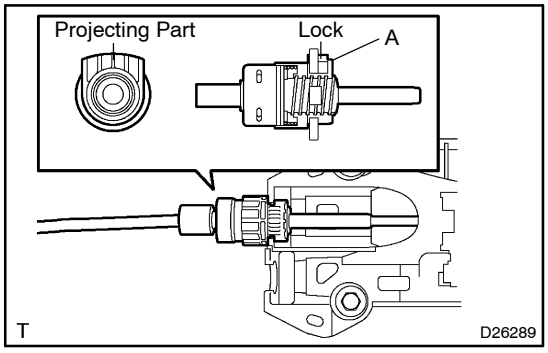

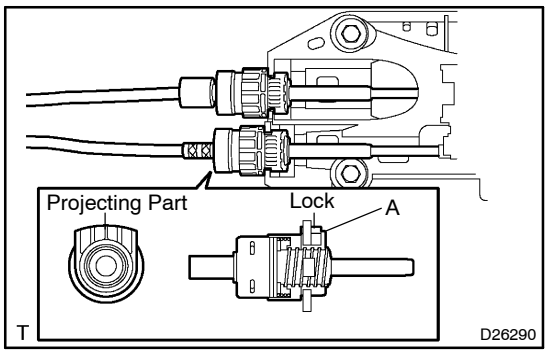

10. CONNECT FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT

(a) Connect the shift cable to the shift lever retainer.

NOTICE:

- **The projecting part of the cable outer should face upward when the shift cable is installed.**
- **Make sure that after installation the cable outer lock is projecting from A shown in the illustration.**


(b) Install the top of the shift cable to the shift lever assy.

11. CONNECT FLOOR SHIFT CABLE TRANSMISSION CONTROL SELECT

(a) Connect the select cable to the shift lever retainer.

NOTICE:

- **The projecting part of the cable outer should face upward when the select cable is installed.**
- **Make sure that after installation the cable outer lock is projecting from A shown in the illustration.**

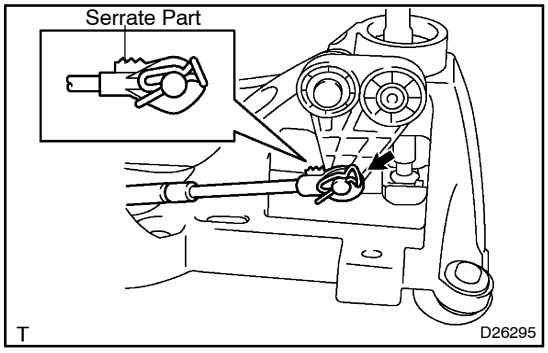

(b) Connect the top of the select cable to the shift lever assy and install the clip.

NOTICE:

- **The serrate part of the select cable point should face upward when the select cable point is connected.**
- **the clip should be inserted to the direction shown in the illustration.**

12. INSTALL AIR DUCT REAR NO.2
(See page 55–21)

13. INSTALL AIR DUCT REAR NO.1
(See page 55–21)

14. REMOVE CONSOLE BOX FRONT
(See page 71–10)

15. REMOVE RR CONSOLE BOX

16. REMOVE FLOOR SHIFT SHIFT LEVER KNOB SUB–ASSY