# FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT


4105B–01

## REPLACEMENT

1. **REMOVE INSTRUMENT PANEL SAFETY PAD SUB–ASSY**
   **(See page 71–10)**
2. **REMOVE AIR CONDITIONING RADIATOR ASSY**
   **(See page 55–21)**
3. **REMOVE AIR BAG SENSOR ASSY CENTER**
   **(See page 60–54)**

4. **REMOVE FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT**

(a) Remove the clip and washer and separate the top of the shift cable from the transaxle.
(b) Remove the clip and shift cable from the control cable bracket.
(c) Turn the lock and separate the shift cable from the shift lever retainer.
(d) Separate the top of the shift cable from the shift lever assy.

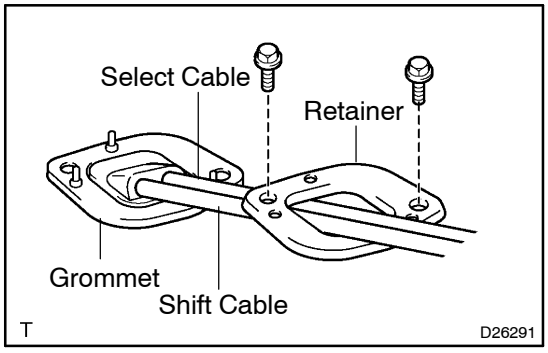



(e) Remove the 2 retainer set bolts from the floor.
(f) Separate the retainer from the grommet.
(g) Remove the select cable from the grommet.
(h) Remove the shift cable through the floor hole and retainer.


5. **INSTALL FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT**

(a) Put the shift cable through the floor hole and retainer.
(b) Install the select cable to the grommet.
(c) Install the retainer to the grommet.

**NOTICE:**
**Fit 3 projections of the grommet into 3 holes of the retainer.**

(d) Install the 2 retainer set bolts.
**Torque: 5.0 N·m (51 kgf·cm, 44 in.·lbf)**

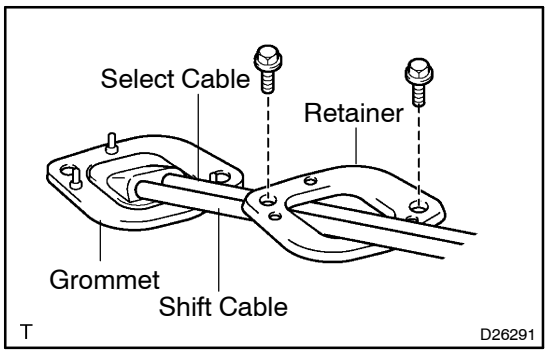

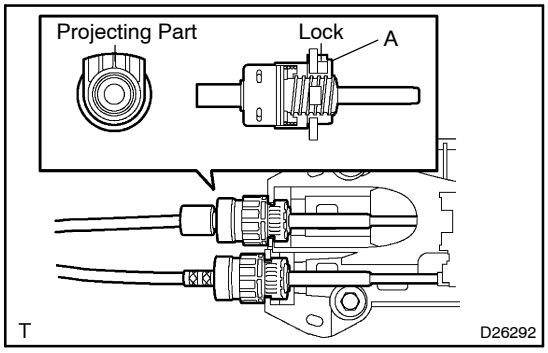


(e) Connect the shift cable to the shift lever retainer.

**NOTICE:**

- **The projecting part of the cable outer should face upward when the shift cable is installed.**
- **Make sure that after installation the cable outer lock is projecting from A shown in the illustration.**

(f) Install the top of the shift cable to the shift lever assy.

(g) Connect the shift cable to the control cable bracket and install a new clip.

(h) Connect the shift cable to the transaxle and install the washer and clip.

6. **INSTALL AIR BAG SENSOR ASSY CENTER (See page 60–54)**
7. **INSTALL AIR CONDITIONING RADIATOR ASSY (See page 55–21)**
8. **INSTALL INSTRUMENT PANEL SAFETY PAD SUB–ASSY (See page 71–10)**
9. **INSPECT SRS WARNING LIGHT(See page 05–758)**