

STEERING COLUMN

COMPONENTS

5002X–01

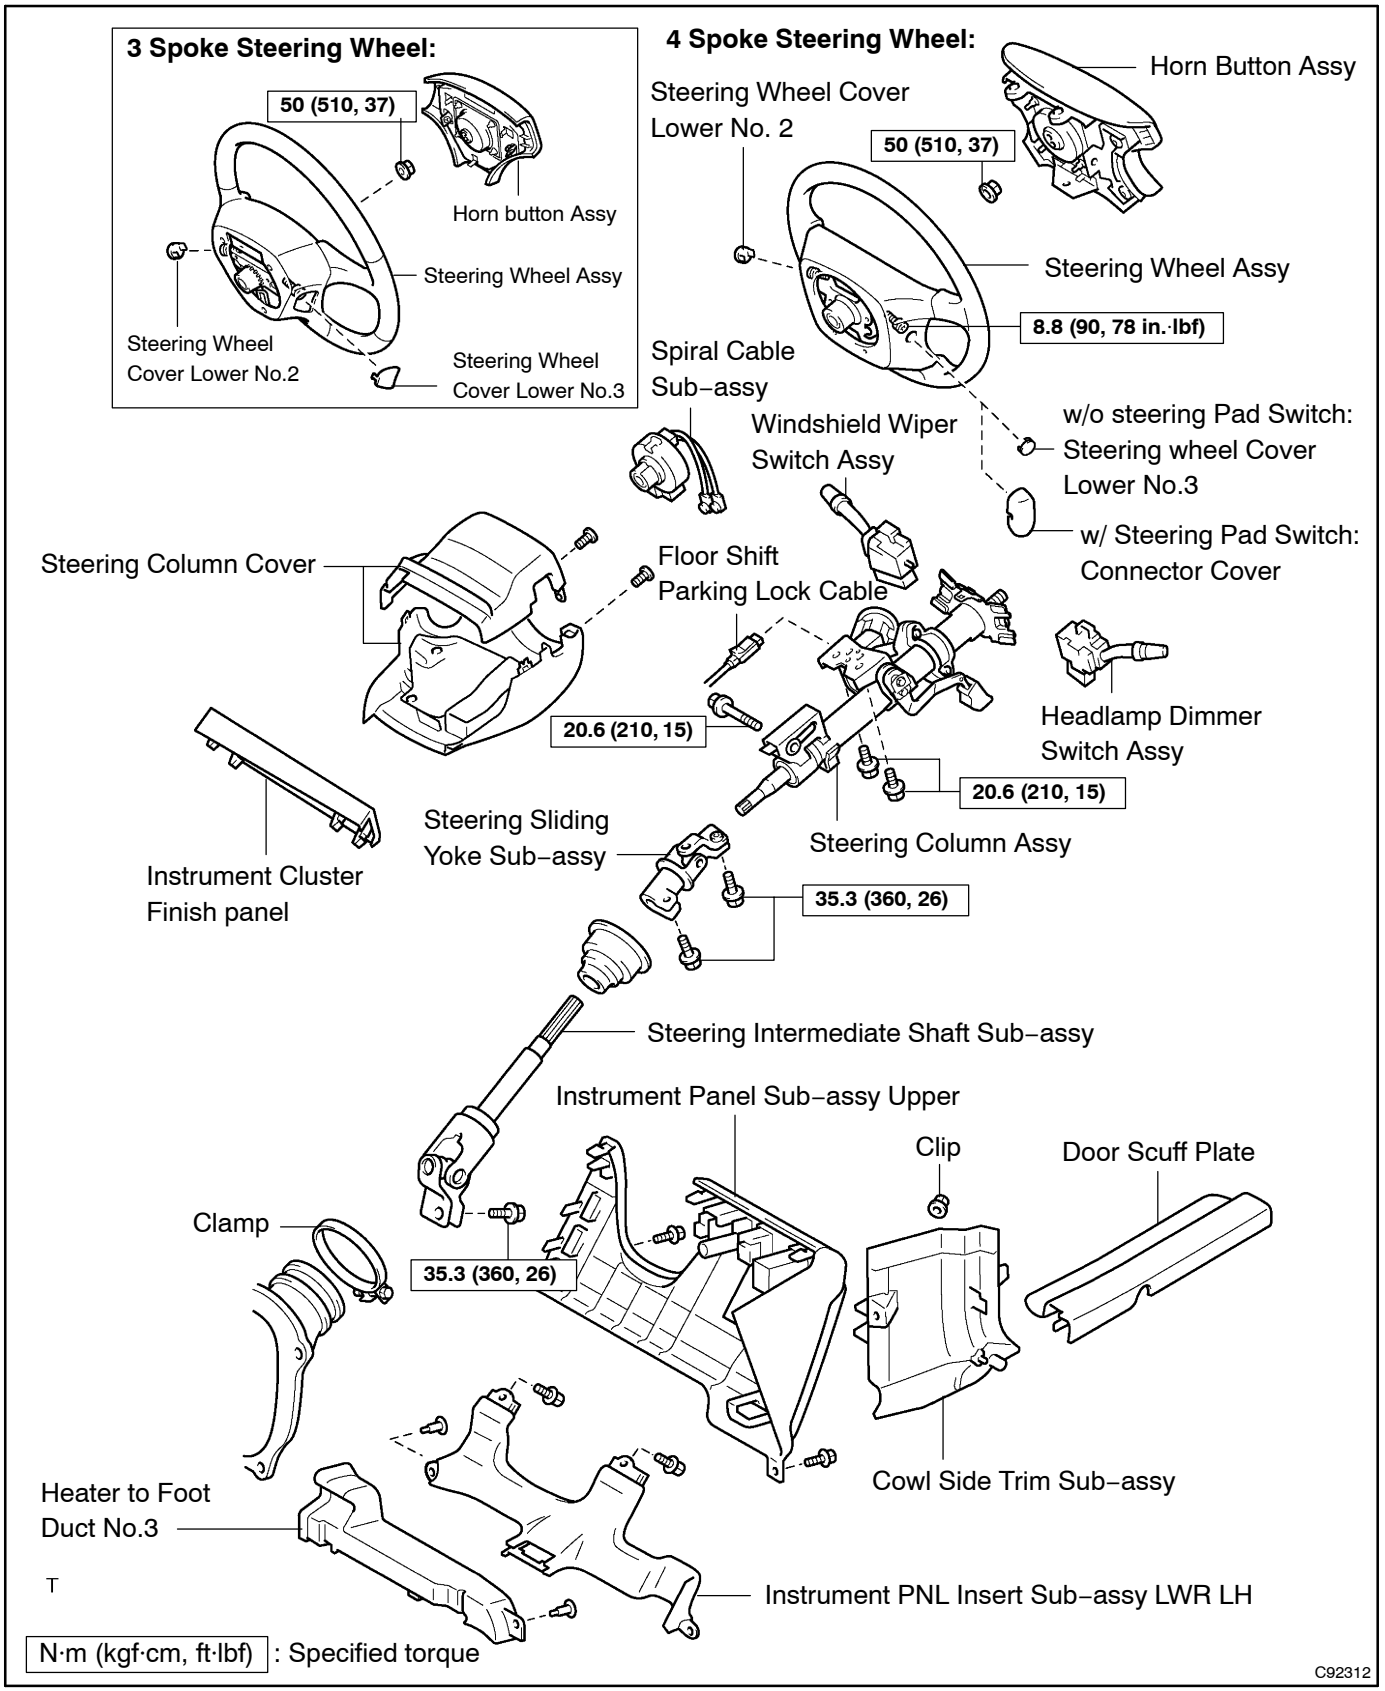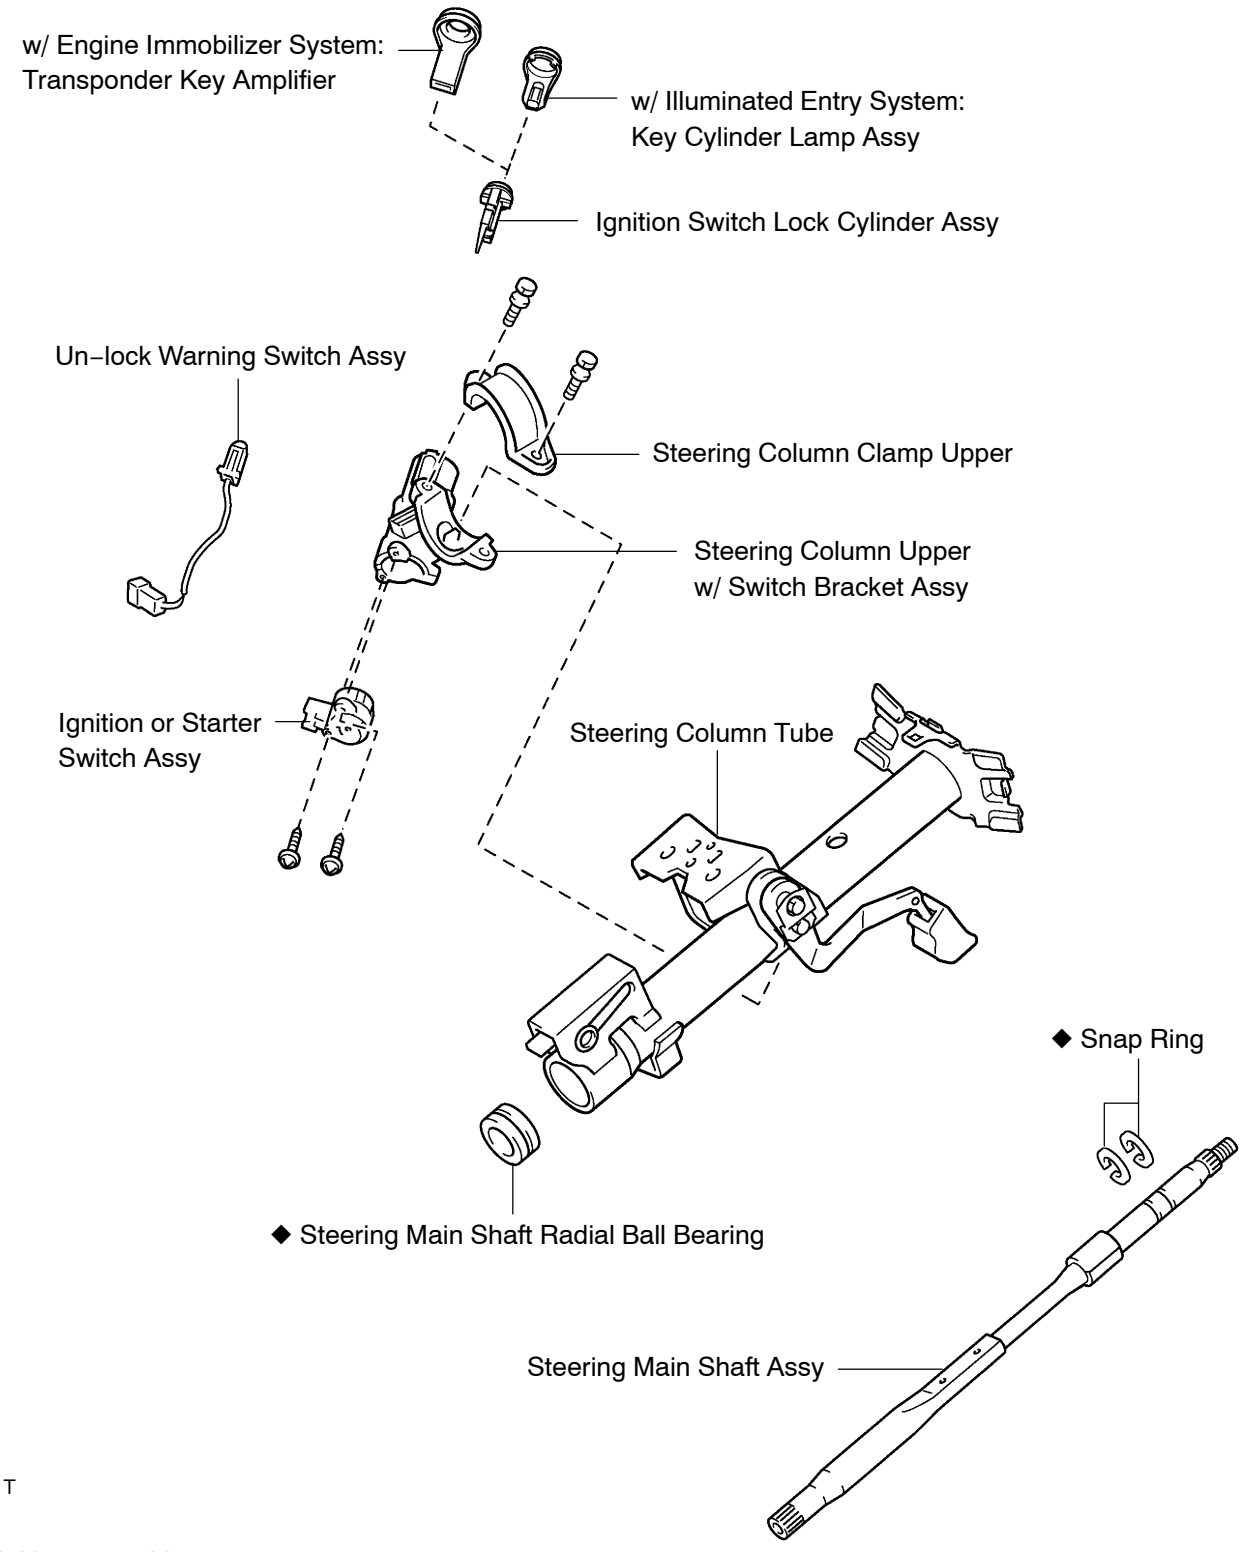


w/ Engine Immobilizer System:
Transponder Key Amplifier
w/ Illuminated Entry System:
Key Cylinder Lamp Assy
Ignition Switch Lock Cylinder Assy
Un–lock Warning Switch Assy
Steering Column Clamp Upper
Steering Column Upper
w/ Switch Bracket Assy
Ignition or Starter
Switch Assy
Steering Column Tube
◆ Snap Ring
◆ Steering Main Shaft Radial Ball Bearing
Steering Main Shaft Assy
T
◆ Non–reusable part
C92313