

# AIR CONDITIONING RADIATOR ASSY


## COMPONENTS

550CP–01

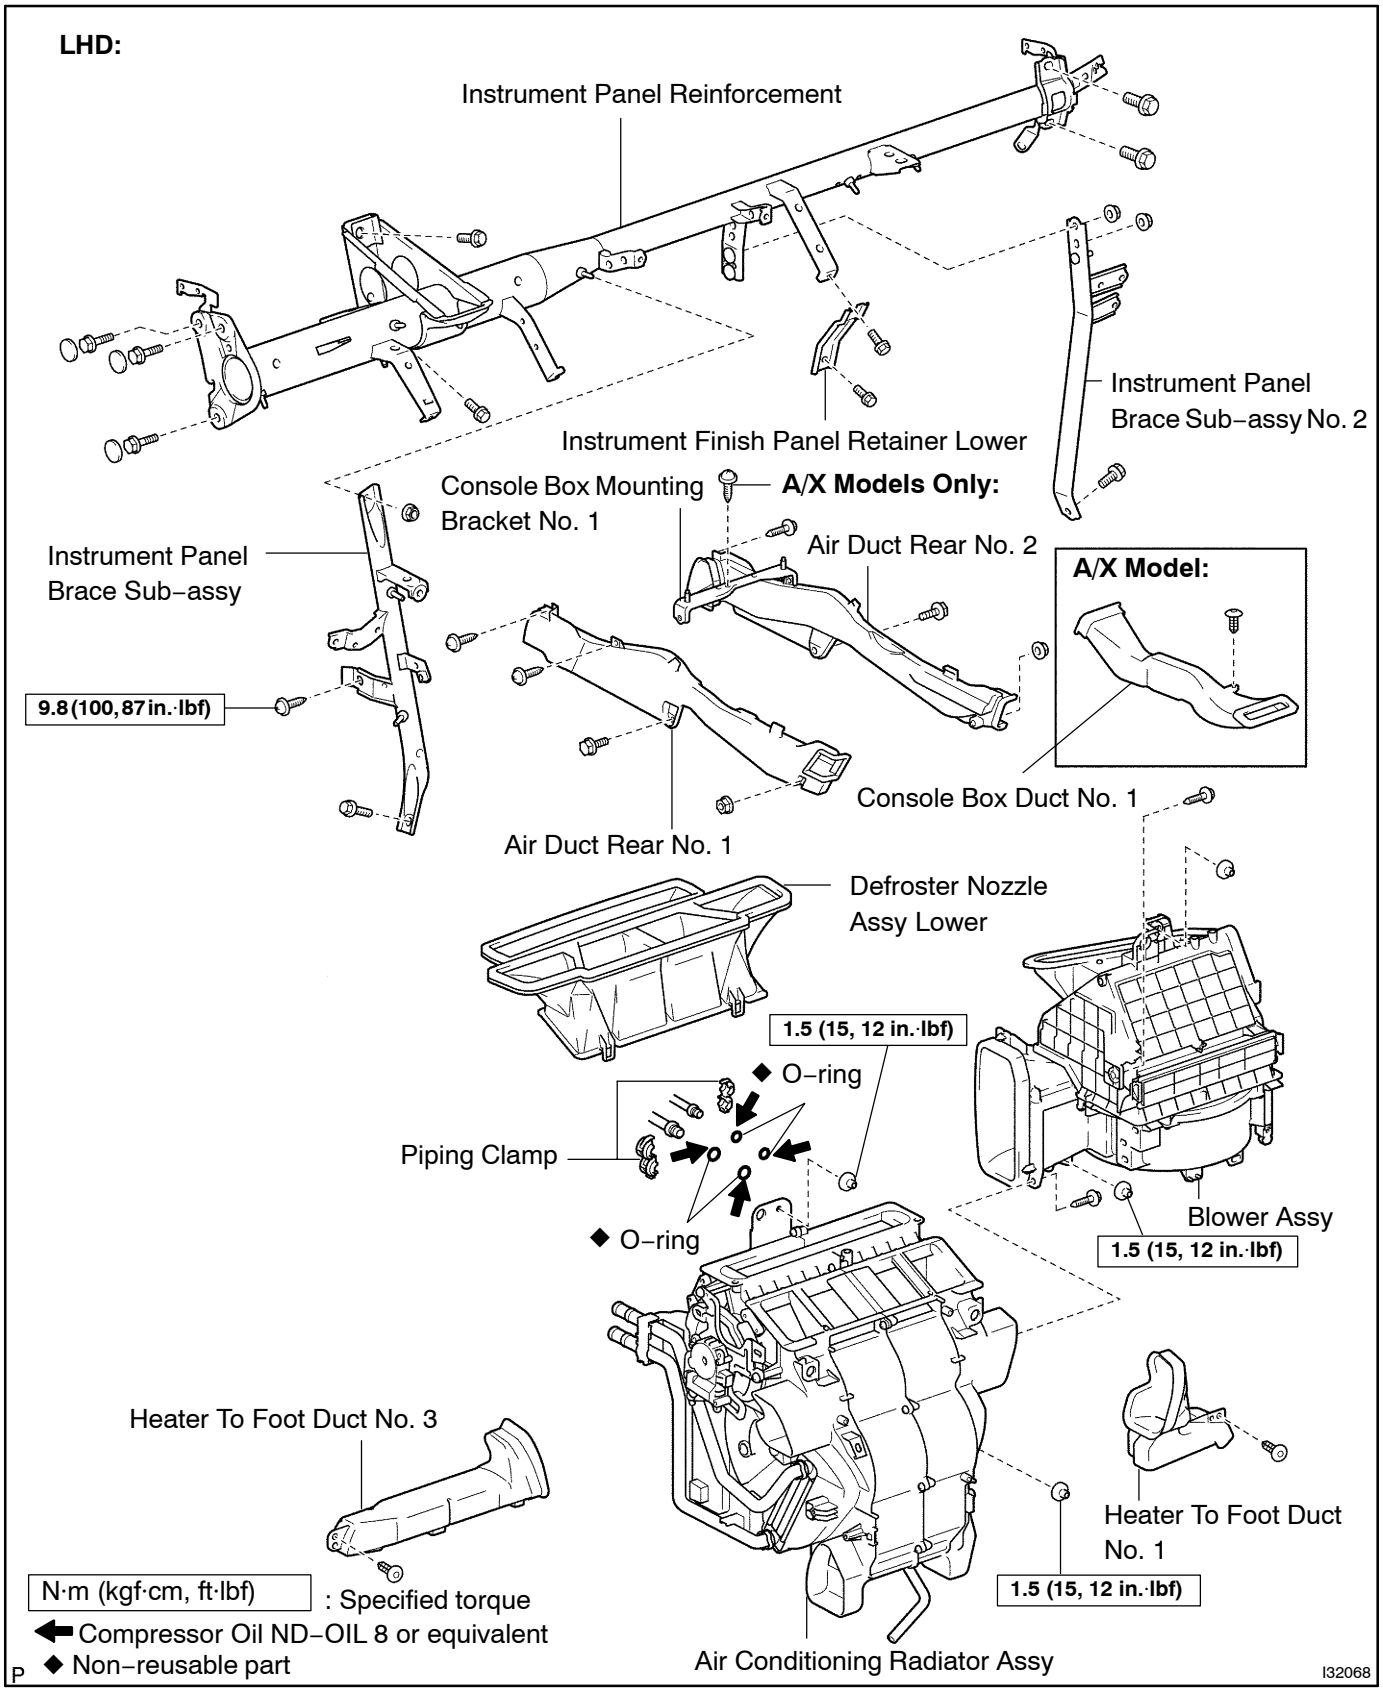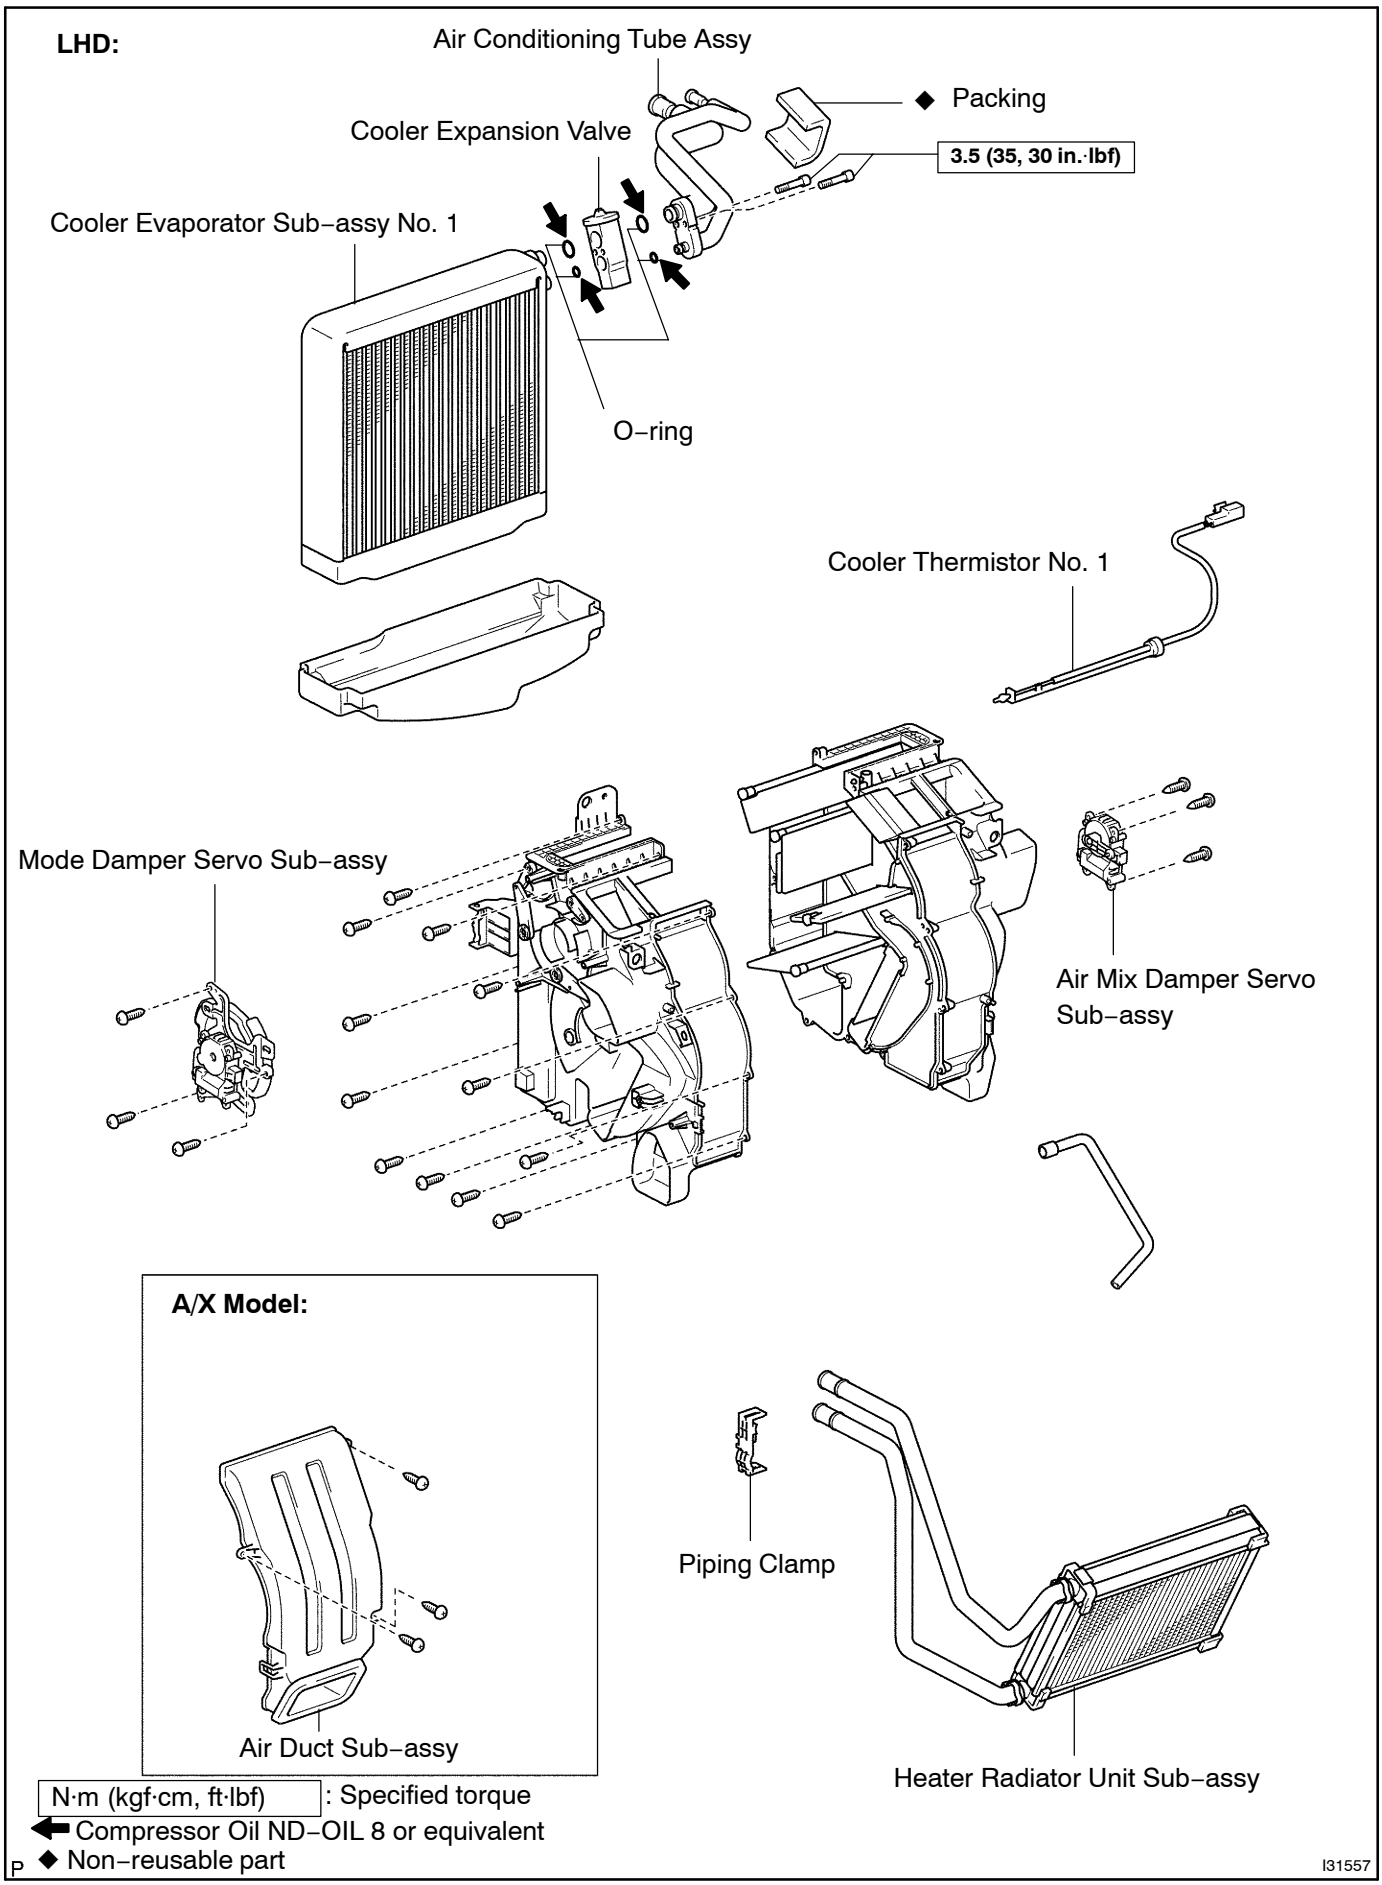



LHD:
Air Conditioning Tube Assy
◆ Packing
Cooler Expansion Valve
3.5 (35, 30 in.·lbf)
Cooler Evaporator Sub–assy No. 1
O–ring
Cooler Thermistor No. 1
Mode Damper Servo Sub–assy
Air Mix Damper Servo Sub–assy
A/X Model:
Air Duct Sub–assy
Piping Clamp
Heater Radiator Unit Sub–assy
N·m (kgf·cm, ft·lbf): Specified torque
Compressor Oil ND–OIL 8 or equivalent
◆ Non–reusable part
P
I31557

**RHD:**

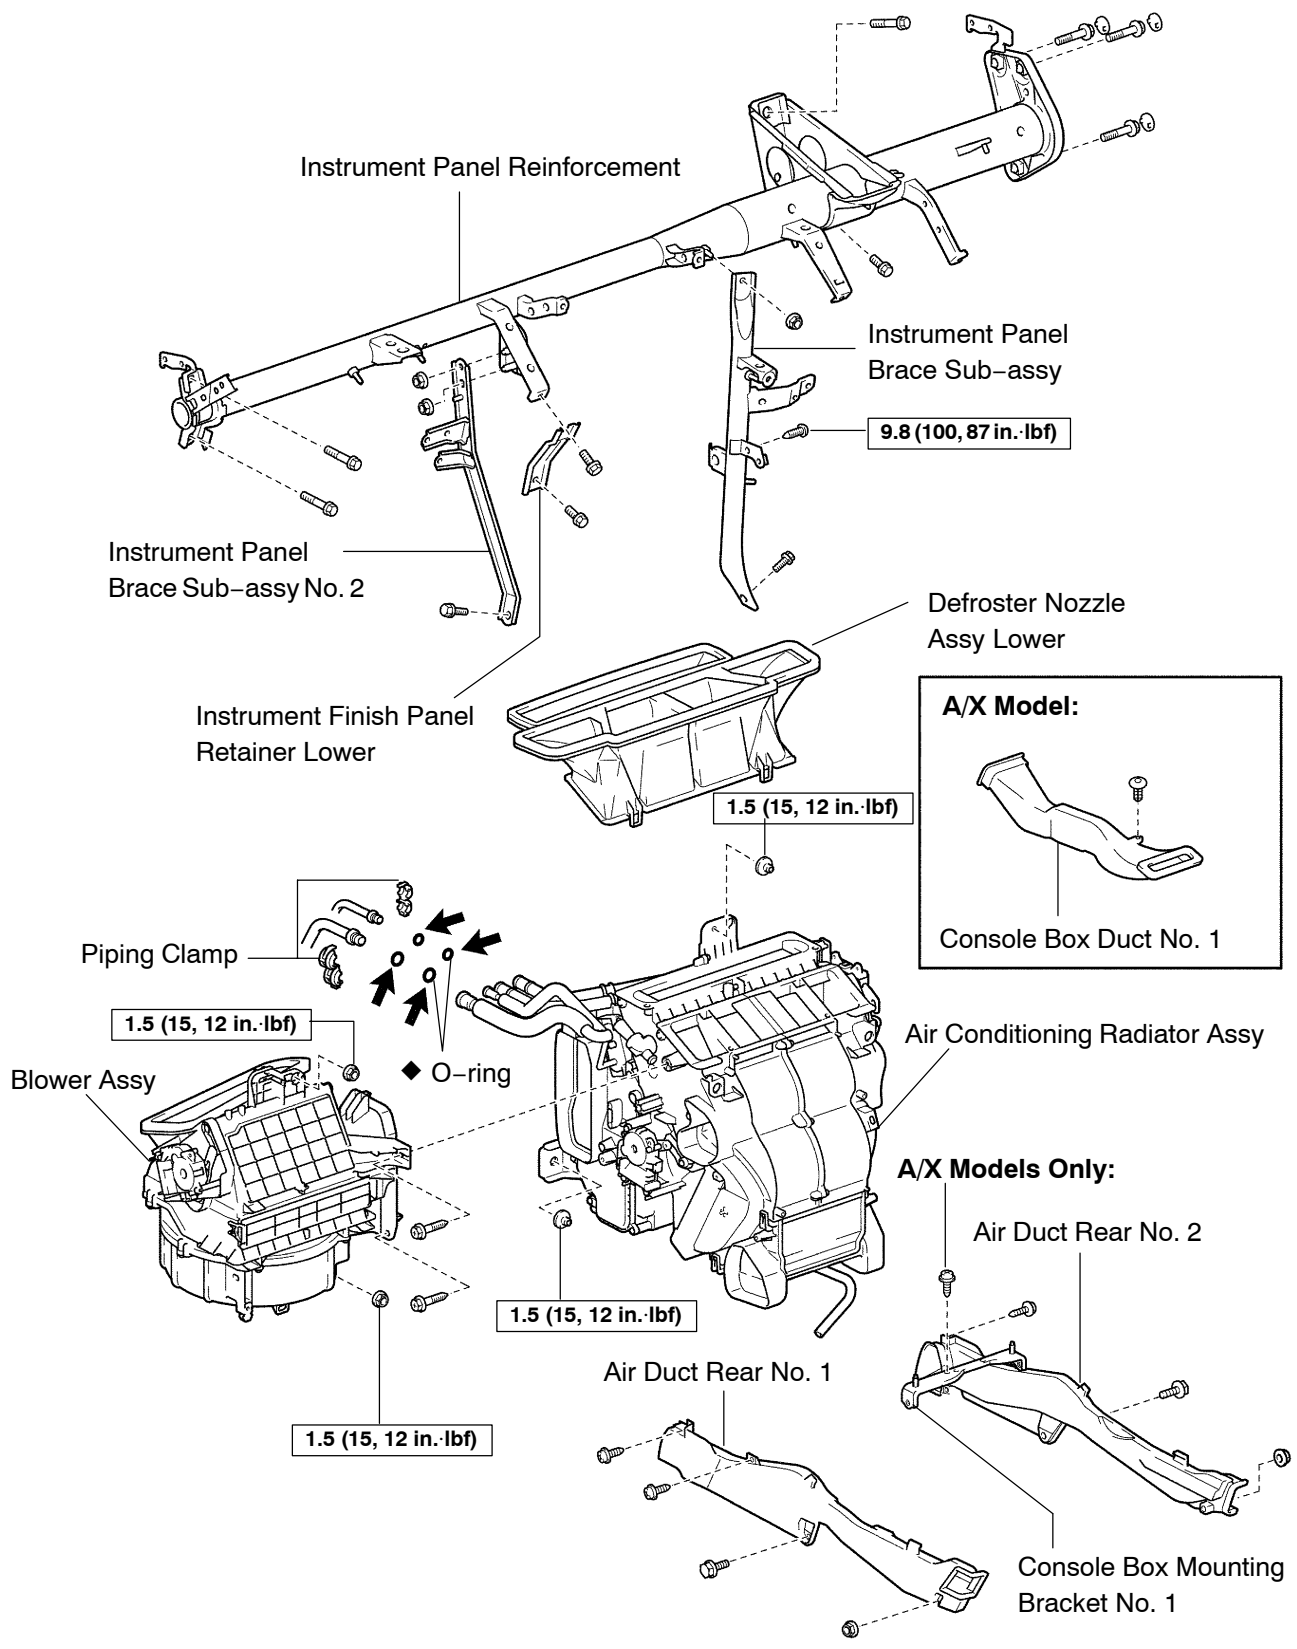


P N·m (kgf·cm, ft·lbf) : Specified torque
⬅ Compressor Oil ND–OIL 8 or equivalent
◆ Non–reusable part

I31646

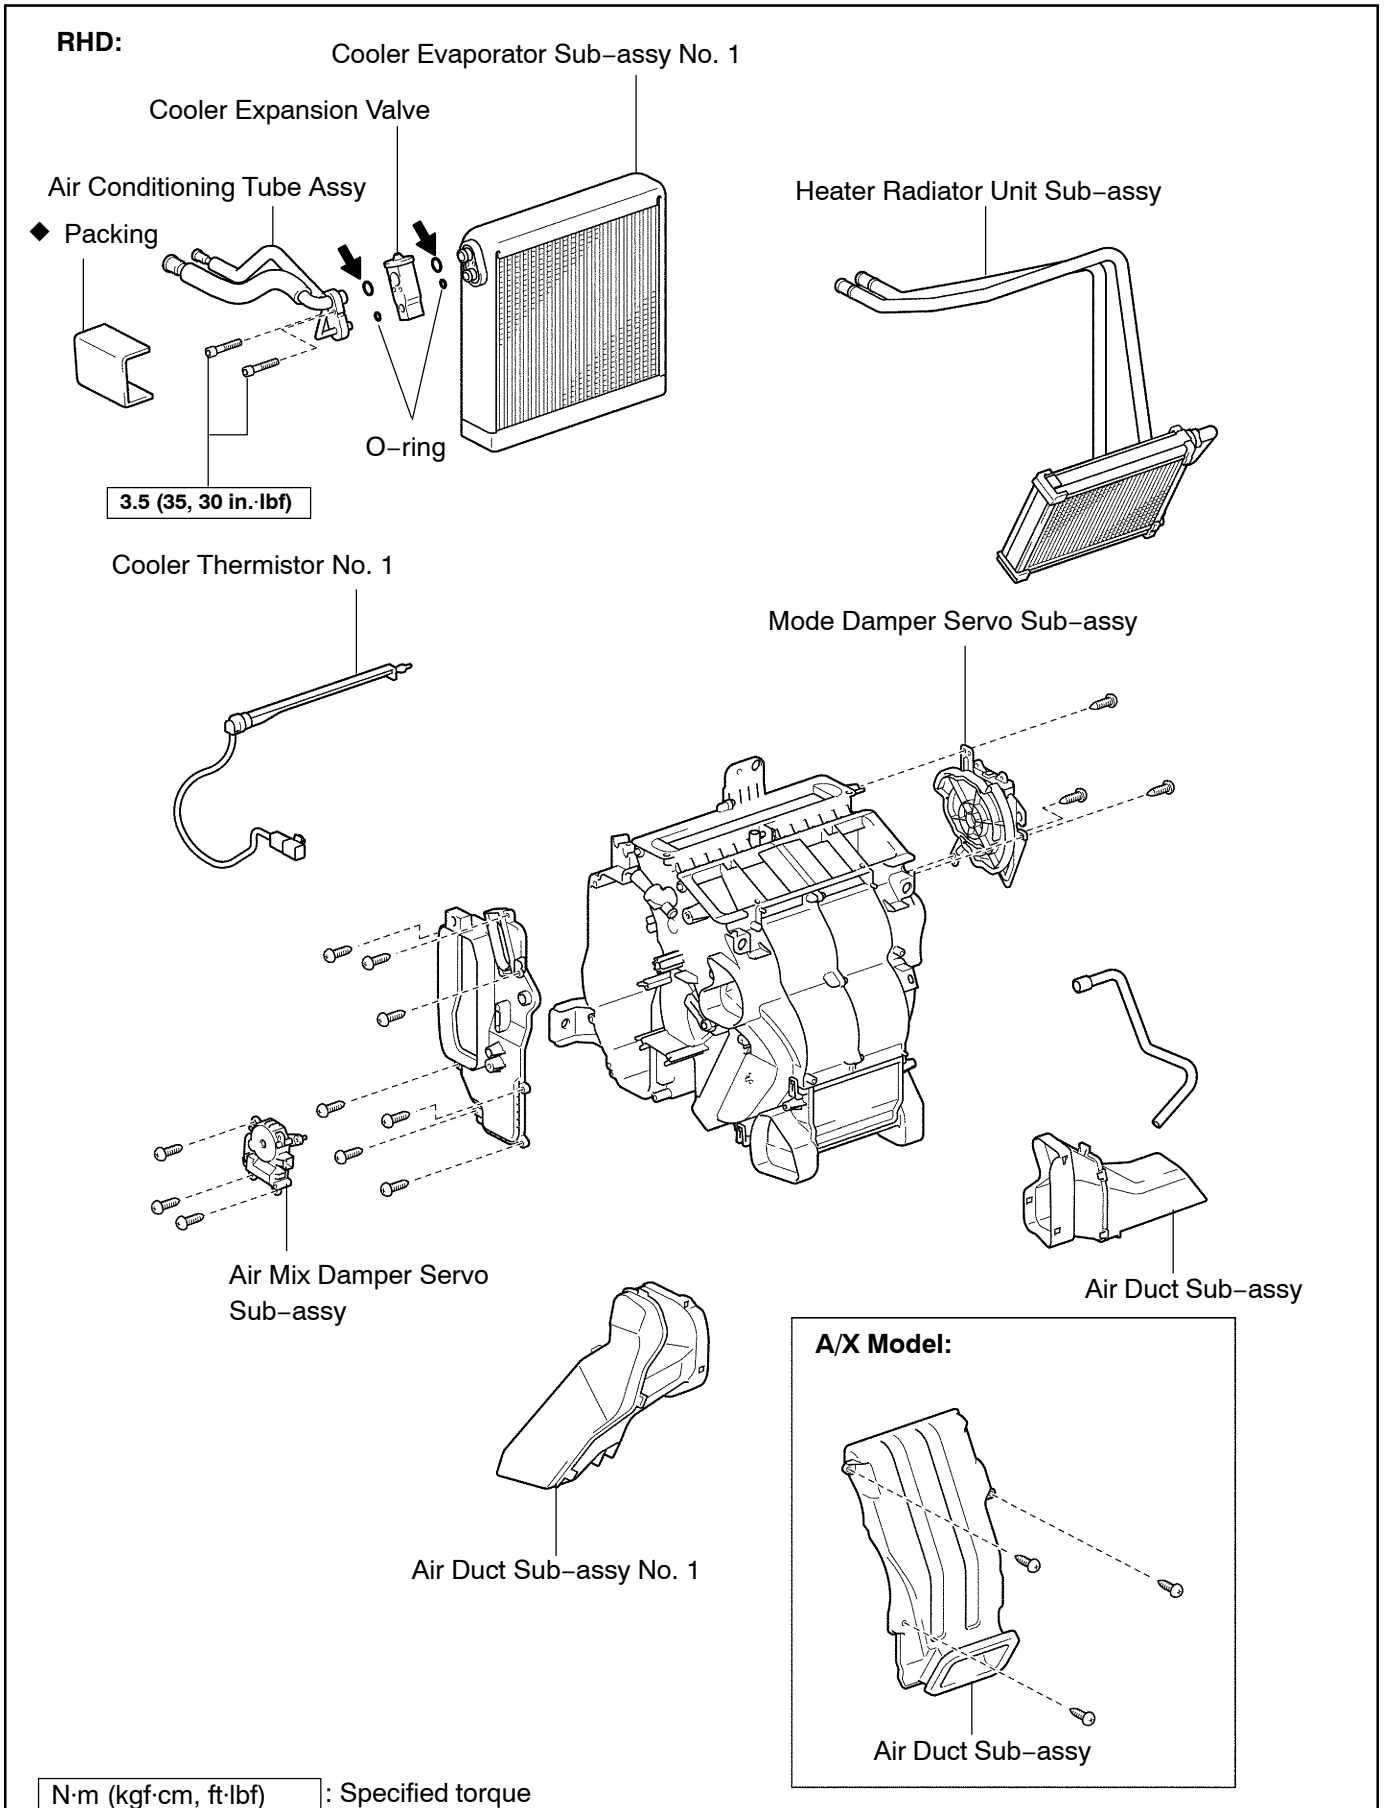
RHD:
Cooler Evaporator Sub–assy No. 1
Cooler Expansion Valve
Air Conditioning Tube Assy
◆ Packing
O–ring
3.5 (35, 30 in.·lbf)
Heater Radiator Unit Sub–assy
Cooler Thermistor No. 1
Mode Damper Servo Sub–assy
Air Mix Damper Servo Sub–assy
Air Duct Sub–assy
Air Duct Sub–assy No. 1
A/X Model:
Air Duct Sub–assy
N·m (kgf·cm, ft·lbf): Specified torque
Compressor Oil ND–OIL 8 or equivalent
◆ Non–reusable part
P
I31647