
550CG–01

OVERHAUL

HINT:


COMPONENTS: See page 55–38

1. **REMOVE INSTRUMENT PANEL SAFETY PAD SUB–ASSY**
   (See page 71–10)
2. **REMOVE HEATER TO FOOT DUCT NO.1(LHD STEERING POSITION TYPE)**
   (See page 55–21)
3. **REMOVE AIR DUCT SUB–ASSY NO.2(RHD STEERING POSITION TYPE)**
   (See page 55–21)
4. **REMOVE BLOWER ASSY**
   (See page 55–21)
5. **REMOVE AIR REFINER ELEMENT**

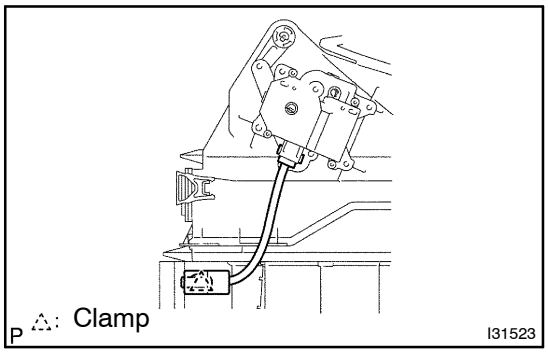


6. **REMOVE COWL WIRE NO.2**

(a) Remove the clamp and cowl wire No. 2.

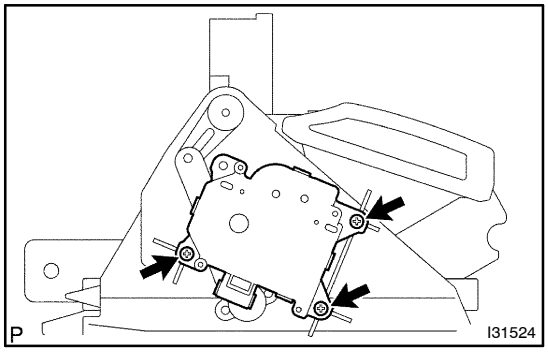


7. **REMOVE RECIRCULATION DAMPER SERVO SUB–ASSY**

(a) Remove the 3 screws and recirculation damper servo sub–assy.

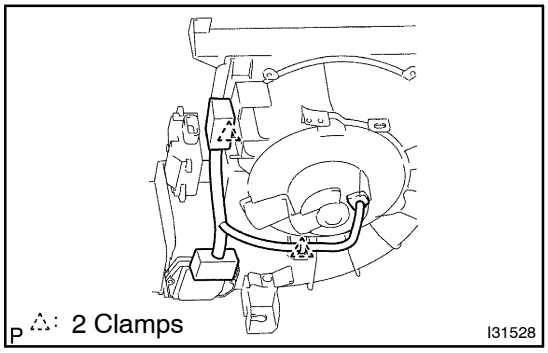


8. **REMOVE INSTRUMENT PANEL WIRE NO.3**

(a) Disconnect the connectors, remove the 2 clamps and instrument panel wire No. 3.

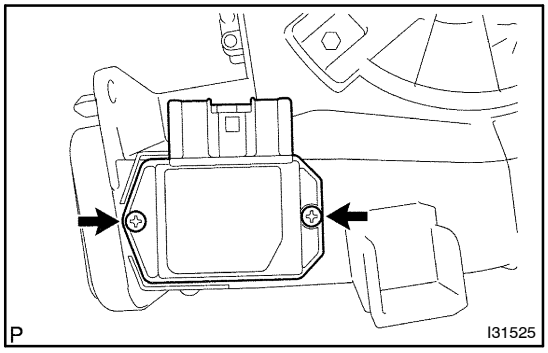

9. REMOVE BLOWER MOTOR CONTROL

(a) Remove the 2 screws and blower motor control.

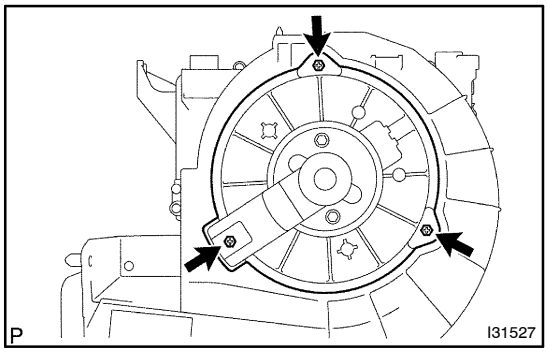

10. REMOVE BLOWER W/FAN MOTOR SUB–ASSY

(a) Remove the 3 screws and blower w/fan motor sub–assy.

11. INSTALL BLOWER ASSY
(See page 55–21)

12. INSTALL INSTRUMENT PANEL SAFETY PAD SUB–ASSY
(See page 71–10)