
600DQ–01

REPLACEMENT

HINT:


COMPONENTS: See page 60–14

1. **PRECAUTION(See page 60–1)**
2. **SEPARATE BATTERY NEGATIVE TERMINAL(See page 60–1)**

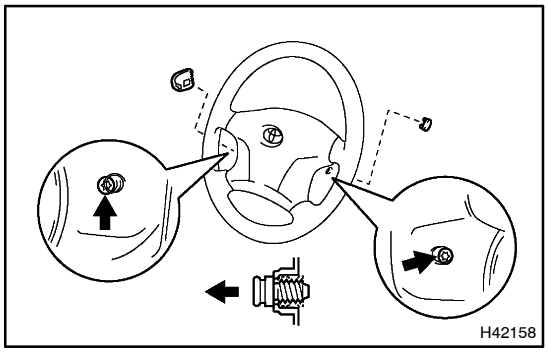

3. **REMOVE STEERING WHEEL COVER LOWER NO.2**
4. **REMOVE CONNECTOR COVER**
5. **REMOVE HORN BUTTON ASSY**

(a) Place the front whels facing straight ahead.
(b) Using a torx socket wrench (T30), loosen the 2 torx screws until the groove along the screw circumference catches on the screw case.

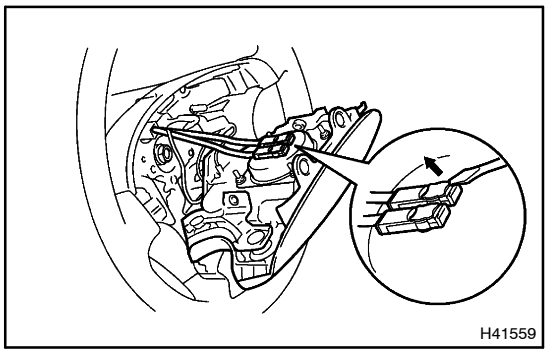

(c) Pull out the wheel pad from the horn button assy.
(d) Disconnect the airbag connectors and horn connector and remove the horn button assy.

6. **INSPECT HORN BUTTON ASSY (See page 60–9)**
7. **INSTALL HORN BUTTON ASSY**

(a) Connect the airbag connector and horn connector.
(b) Install the horn button after confirming that the circumference groove of the torx screws is caught on the screw case.
(c) Using a torx socket wrench (T 30), install the 2 screws.
Torque: 8.8 N·m (90 kgf·cm, 78 in.·lbf)

8. **INSPECT SRS WARNING LIGHT(See page 05–758)**