
600DS–01

REPLACEMENT

HINT:

COMPONENTS: See page 60–14

1. **PRECAUTION(See page 60–1)**
2. **SEPARATE BATTERY NEGATIVE TERMINAL(See page 60–1)**
3. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
4. **REMOVE STEERING WHEEL COVER LOWER NO.2**
5. **REMOVE CONNECTOR COVER**
6. **REMOVE HORN BUTTON ASSY**
   (See page 60–15)
7. **REMOVE STEERING WHEEL ASSY**
   (See page 50–6)
   SST 09950–50013 (09951–05010, 09952–05010, 09953–05020, 09954–05021)
8. **REMOVE INSTRUMENT CLUSTER FINISH PANEL**
   (See page 71–10)
9. **REMOVE STEERING COLUMN COVER**

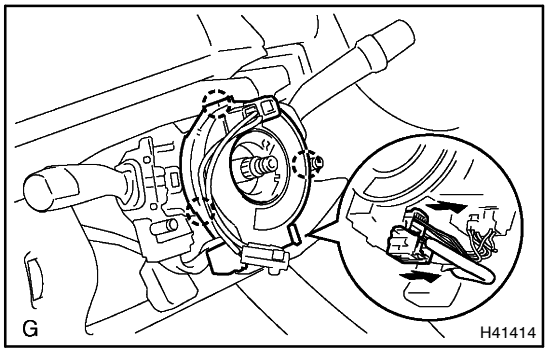

10. **REMOVE SPIRAL CABLE SUB–ASSY**

(a) Disconnect the airbag connector and connector from the spiral cable sub–assy.
(b) Release the 3 claws and remove the spiral cable sub–assy.

11. **INSPECT SPIRAL CABLE SUB–ASSY**

(a) If the following condition is identified, replace the spiral cable sub–assy with new one.
Condition:
Scratches or cracks on the connector
Cracks, dents or chipping of the spiral cable sub–assy

12. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**

(a) Check that the front wheels are facing straight ahead.

13. **INSTALL SPIRAL CABLE SUB–ASSY**

(a) Set the turn signal switch in neutral position.

NOTICE:
Make sure of the neutral position since the pin of the turn signal switch may be snapped.

(b) Engage the 3 claws and install the spiral cable sub–assy.

NOTICE:
When replacing the spiral cable sub–assy with new one, remove the lock pin before installing the handle.

(c) Connect the airbag connector and connector.
(d) Install the steering column cover with the 2 screws.


14. CENTER SPIRAL CABLE

(a) Check that the ignition switch is OFF.


(b) Check that the battery negative terminal is disconnected.

NOTICE:

Do not start the operation for 90 seconds after removing the terminal.

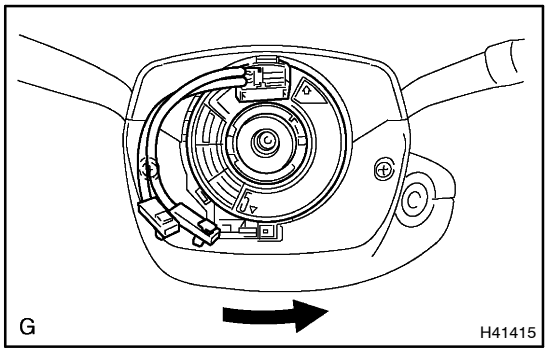

(c) Turn the cable counterclockwise by hand until it becomes harder to turn.

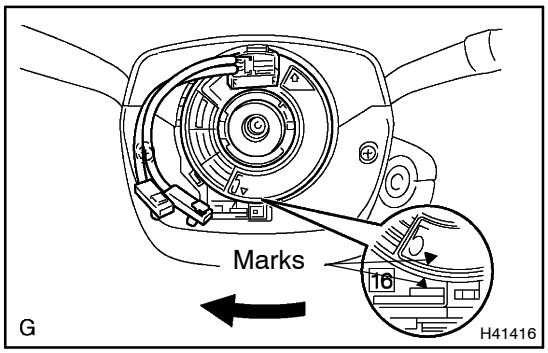

(d) Then rotate the cable clockwise about 2.5 turns to align the marks.

HINT:

The cable will rotate about 2.5 turns to both left and right of the center.

15. INSTALL STEERING WHEEL ASSY
(See page 50–6)
Torque: 50 N·m (510 kgf·cm, 37 ft·lbf)

16. INSTALL HORN BUTTON ASSY
(See page 60–15)

17. INSPECT HORN BUTTON ASSY
(See page 60–9)

18. INSPECT SRS WARNING LIGHT(See page 05–758)