
6009U–02

REPLACEMENT

HINT:

COMPONENTS: See page 60–26

1. **PRECAUTION(See page 60–1)**
2. **SEPARATE BATTERY NEGATIVE TERMINAL(See page 60–1)**
3. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
4. **REMOVE STEERING WHEEL COVER LOWER NO.2**
5. **REMOVE CONNECTOR COVER**
6. **REMOVE HORN BUTTON ASSY (See page 60–15)**
7. **REMOVE STEERING WHEEL ASSY (See page 50–6)**
8. **REMOVE STEERING COLUMN COVER**
9. **REMOVE HEADLAMP DIMMER SWITCH ASSY (See page 50–6)**
10. **REMOVE WINDSHIELD WIPER SWITCH ASSY (See page 50–6)**
11. **REMOVE COMBINATION METER ASSY (See page 71–10)**
12. **REMOVE FRONT DOOR SCUFF PLATE LH (See page 71–10)**
13. **REMOVE FRONT DOOR SCUFF PLATE RH (See page 71–10)**
14. **REMOVE COWL SIDE TRIM SUB–ASSY LH (See page 71–10)**
15. **REMOVE COWL SIDE TRIM SUB–ASSY RH (See page 71–10)**
16. **REMOVE INSTRUMENT PANEL SUB–ASSY UPPER (See page 71–10)**
17. **REMOVE AIR CONDITIONER CONTROL ASSEMBLY(See page 71–10)**
18. **REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB–ASSY CENTER (See page 71–10)**
19. **REMOVE INSTRUMENT PANEL UNDER COVER SUB–ASSY NO.1 (See page 71–10)**
20. **REMOVE GLOVE COMPARTMENT DOOR PAD (See page 71–10)**
21. **REMOVE INSTRUMENT PANEL SUB–ASSY LOWER (See page 71–10)**

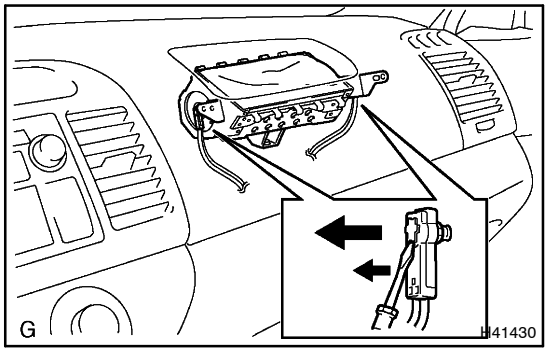

22. SEPARATE PASSENGER AIRBAG CONNECTOR

(a) Disconnect the instrpnl pass l/door airbag assy connectors.

23. REMOVE FLOOR SHIFT SHIFT LEVER KNOB SUB–ASSY (M/T TRANSAXLE)

24. REMOVE CONSOLE PANEL UPPER REAR
(See page 71–10)

25. REMOVE CONSOLE BOX CARPET
(See page 71–10)

26. REMOVE RR CONSOLE BOX(See page 71–10)

27. REMOVE INSTRUMENT PANEL ASH RECEPTACLE ASSY
(See page 71–10)

28. REMOVE CONSOLE PANEL UPPER
(See page 71–10)

29. REMOVE CONSOLE BOX FRONT
(See page 71–10)

30. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER
(See page 71–10)

31. REMOVE FRONT PILLAR GARNISH LH (W/O CURTAIN SHIELD AIR BAG)
(See page 71–10)

32. REMOVE FRONT PILLAR GARNISH LH (W/ CURTAIN SHIELD AIR BAG)
(See page 71–10)

33. REMOVE FRONT PILLAR GARNISH RH (W/O CURTAIN SHIELD AIR BAG)
(See page 71–10)

34. REMOVE FRONT PILLAR GARNISH RH (W/ CURTAIN SHIELD AIR BAG)
(See page 71–10)

35. REMOVE INSTRUMENT PANEL SPEAKER PANEL SUB–ASSY NO.2
(See page 71–10)

36. REMOVE INSTRUMENT PANEL SPEAKER PANEL SUB–ASSY
(See page 71–10)

37. REMOVE FRONT NO.2 SPEAKER ASSY
(See page 71–10)

38. REMOVE INSTRUMENT PANEL SAFETY PAD CAP
(See page 71–10)


39. REMOVE INSTRUMENT PANEL SAFETY PAD SUB–ASSY
(See page 71–10)

40. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.2
(See page 71–10)

41. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.1
(See page 71–10)


42. REMOVE SWITCH HOLE BASE NO.1 (RHD STEERING POSITION TYPE)
(See page 71–10)

43. **REMOVE GLOVE BOX LAMP ASSY**
(See page 71–10)
44. **REMOVE AUTOMATIC LIGHT CONTROL SENSOR (W/ CONLIGHT)**
(See page 71–10)
45. **REMOVE COOLER (SOLAR SENSOR) THERMISTOR (AUTO AIR CONDITIONER)**
(See page 71–10)
46. **REMOVE SIDE DEFROSTER NOZZLE DUCT NO.2**
(See page 71–10)
47. **REMOVE SIDE DEFROSTER NOZZLE DUCT NO.1**
(See page 71–10)
48. **REMOVE DEFROSTER NOZZLE ASSY**
(See page 71–10)
49. **REMOVE HEATER TO REGISTER DUCT NO.1**
(See page 71–10)
50. **REMOVE HEATER TO REGISTER DUCT NO.3**
(See page 71–10)
51. **REMOVE HEATER TO REGISTER DUCT NO.2**
(See page 71–10)
52. **REMOVE DEFROSTER NOZZLE GARNISH NO.1**
(See page 71–10)

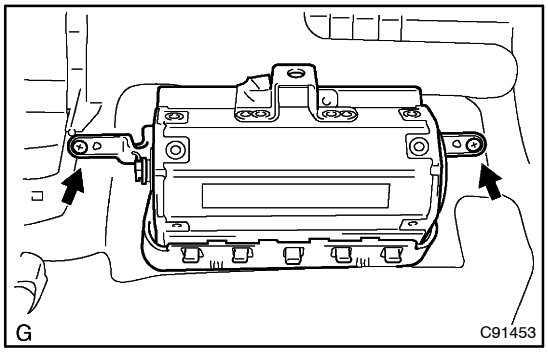

53. **REMOVE INSTR PNL PASS L/DOOR AIR BAG ASSY**

(a) Remove the 2 screws.

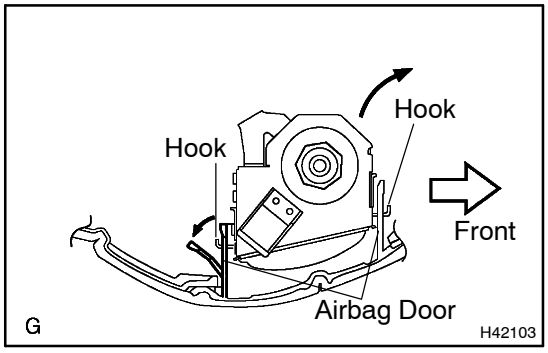

(b) Release the rear side wall of the airbag door from the hook by slightly deflecting it and roll the instr pnl pass l/door airbag assy forward.
(c) Release the front side wall of the airbag door from the other hook and remove the instr pnl pass l/door airbag assy.

54. **INSPECT INSTR PNL PASS L/DOOR AIR BAG ASSY**
(See page 60–9)
55. **INSTALL INSTR PNL PASS L/DOOR AIR BAG ASSY**

56. **INSTALL FRONT PILLAR GARNISH LH (W/ CURTAIN SHIELD AIR BAG)**
(See page 71–10)
57. **INSTALL FRONT PILLAR GARNISH RH (W/ CURTAIN SHIELD AIR BAG)**
(See page 71–10)
58. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**

59. **INSTALL SPIRAL CABLE SUB–ASSY**
(See page 60–24)
60. **CENTER SPIRAL CABLE(See page 60–24)**
61. **INSTALL STEERING WHEEL ASSY**
(See page 50–6)
62. **INSTALL HORN BUTTON ASSY**
(See page 60–15)
63. **INSPECT HORN BUTTON ASSY**
(See page 60–9)
64. **INSPECT SRS WARNING LIGHT(See page 05–758)**