6009X–02

REPLACEMENT

HINT:

COMPNENTS: See page 60–38

1. **PRECAUTION(See page 60–1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL(See page 60–1)**
3. **REMOVE FRONT DOOR SCUFF PLATE RH (See page 71–10)**
4. **REMOVE FRONT DOOR SCUFF PLATE LH (See page 71–10)**
5. **REMOVE REAR DOOR SCUFF PLATE RH (See page 71–10)**
6. **REMOVE REAR DOOR SCUFF PLATE LH (See page 72–21)**
7. **REMOVE FRONT SEAT ASSEMBLY RH**
8. **REMOVE FRONT SEAT ASSEMBLY LH(See page 72–7)**
9. **REMOVE REAR SEAT CUSHION ASSY(See page 72–21)**
10. **REMOVE REAR SEAT BACK ASSY(See page 72–21)**
11. **REMOVE CONSOLE PANEL UPPER REAR (See page 71–10)**
12. **REMOVE RR CONSOLE BOX(See page 71–10)**
13. **REMOVE CONSOLE PANEL UPPER (See page 71–10)**
14. **REMOVE CONSOLE BOX FRONT(See page 72–7)**
15. **REMOVE AIR DUCT REAR NO.1 (See page 71–10)**
16. **REMOVE AIR DUCT REAR NO.2 (See page 71–10)**
17. **REMOVE CONSOLE BOX DUCT NO.1 (See page 71–10)**
18. **REMOVE FLOOR SHIFT ASSY**
19. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH (See page 61–6)**
20. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH (See page 61–6)**
21. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH (See page 61–6)**
22. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH (See page 61–6)**
23. **REMOVE CENTER PILLAR GARNISH LOWER RH (See page 61–6)**
24. **REMOVE CENTER PILLAR GARNISH LOWER LH (See page 61–6)**
25. **REMOVE CENTER PILLAR GARNISH UPPER RH (See page 76–21)**
26. **REMOVE CENTER PILLAR GARNISH UPPER LH (See page 76–21)**
27. **REMOVE ROOF SIDE GARNISH INNER RH (See page 76–21)**

28. REMOVE ROOF SIDE GARNISH INNER LH
(See page 76–21)
29. REMOVE FRONT PILLAR GARNISH RH
(See page 76–21)
30. REMOVE FRONT PILLAR GARNISH LH
(See page 76–21)
31. REMOVE ASSIST GRIP SUB–ASSY
(See page 76–21)
32. REMOVE RH VISOR ASSY
(See page 76–21)
33. REMOVE LH VISOR ASSY
(See page 76–21)
34. REMOVE INNER REAR VIEW MIRROR ASSY
(See page 76–21)
35. REMOVE ROOF CONSOLE BOX ASSY
(See page 76–21)
36. REMOVE ROOM LAMP ASSY NO.1
(See page 76–21)
37. REMOVE VISOR HOLDER
(See page 76–21)
38. REMOVE ROOF HEADLINING ASSY
(See page 76–21)


39. REMOVE CURTAIN SHIELD AIR BAG ASSY LH

(a) Disconnect the connector of the curtain shield airbag assy LH.

(b) Remove the 9 bolts and curtain shield airbag assy LH.

HINT:

Remove the bolts from front side of the vehicle in order.

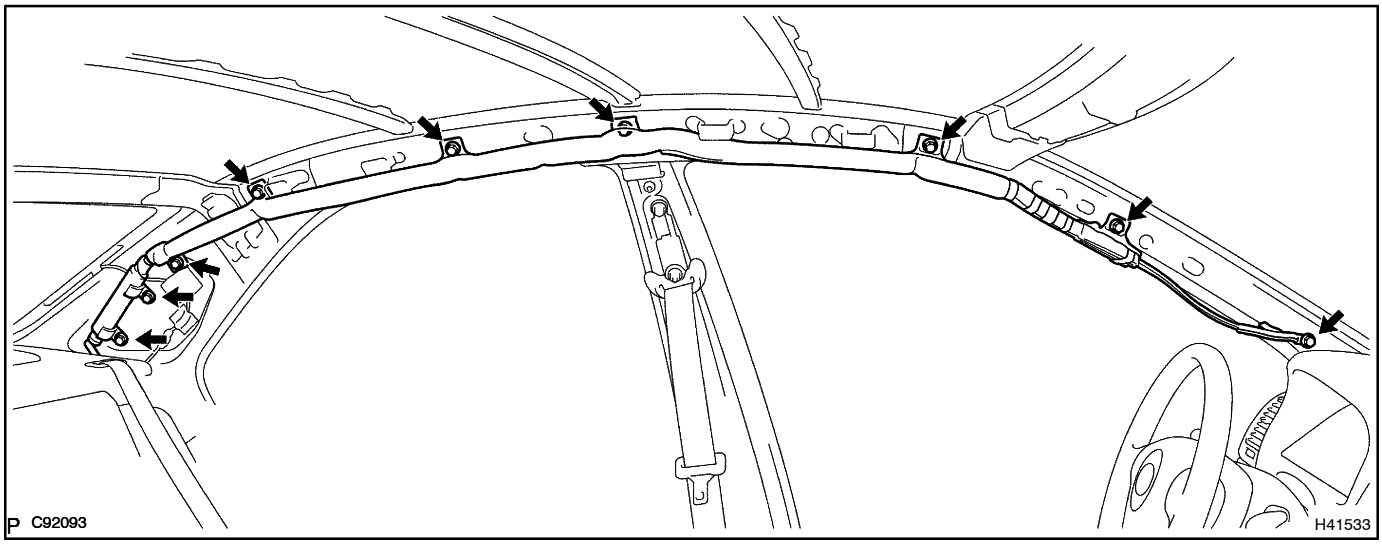

40. INSTALL CURTAIN SHIELD AIR BAG ASSY LH
(See page 60–9)

41. INSPECT CURTAIN SHIELD AIR BAG ASSY LH

(a) Install the curtain shield airbag assy LH with the 9 bolts.
Torque: 9.8 N·m (100 kgf·cm, 87 in.·lbf)

HINT:

Install the bolts from rear side of the vehicle in order.

(b) Connect the curtain shield airbag assy LH connector.

42. INSTALL ROOF HEADLINING ASSY

43. INSTALL REAR SEAT BACK ASSY(See page 72–21)

44. INSTALL REAR SEAT CUSHION ASSY(See page 72–21)

45. INSTALL FRONT SEAT ASSEMBLY LH(See page 72–7)

46. INSTALL FRONT SEAT ASSEMBLY RH

47. INSPECT SRS WARNING LIGHT(See page 05–758)