
600A1–02

REPLACEMENT

HINT:

COMPONENTS: See page 60–53

1. **PRECAUTION(See page 60–1)**
2. **SEPARATE BATTERY NEGATIVE TERMINAL(See page 60–1)**
3. **REMOVE CONSOLE PANEL UPPER REAR (See page 71–10)**
4. **REMOVE CONSOLE BOX CARPET (See page 71–10)**
5. **REMOVE RR CONSOLE BOX(See page 71–10)**
6. **REMOVE CONSOLE PANEL UPPER (See page 71–10)**
7. **REMOVE CONSOLE BOX FRONT (See page 71–10)**
8. **REMOVE AIR DUCT REAR NO.1 (See page 55–21)**
9. **REMOVE AIR DUCT REAR NO.2 (See page 55–21)**
10. **REMOVE CONSOLE BOX DUCT NO.1 (A/T TRANSAXLE) (See page 55–21)**

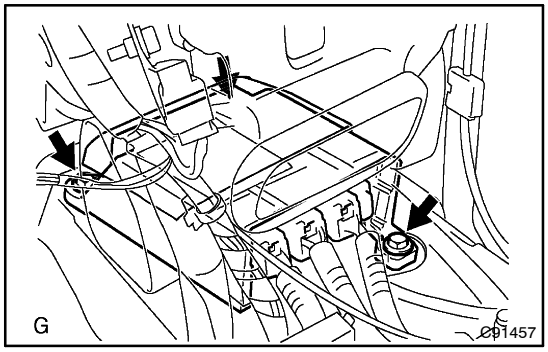

11. **REMOVE AIR BAG SENSOR ASSY CENTER**

(a) Disconnect the 3 connectors from the air bag sensor assy center.
(b) Remove the 3 bolts and air bag sensor assy center.

12. **INSPECT AIR BAG SENSOR ASSY CENTER (See page 60–9)**
13. **INSTALL AIR BAG SENSOR ASSY CENTER**

(a) Check that the ignition switch turn OFF.
(b) Check that the battery negative terminal is disconnected.

NOTICE:

Do not start the operation for 90 seconds after removing the terminal.

(c) Temporarily install the air bag sensor assy center with the 3 bolts.
(d) Tighten the 3 bolts to the specified torque.
Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)
(e) Connect the connector to the air bag sensor assy center.
(f) Check that no play is identified.
(g) Check that the water–proof sheet is properly set.

14. **INSPECT SRS WARNING LIGHT(See page 05–758)**