
600A5–02

REPLACEMENT

HINT:


COMPONENTS: See page 60–55

1. **PRECAUTION(See page 60–1)**
2. **SEPARATE BATTERY NEGATIVE TERMINAL(See page 60–1)**
3. **REMOVE ENGINE UNDER COVER LH**

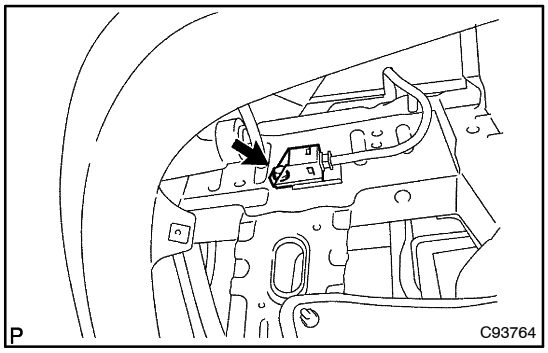

4. **REMOVE AIR BAG SENSOR FRONT LH**

(a) Remove the bolt and airbag sensor front LH.

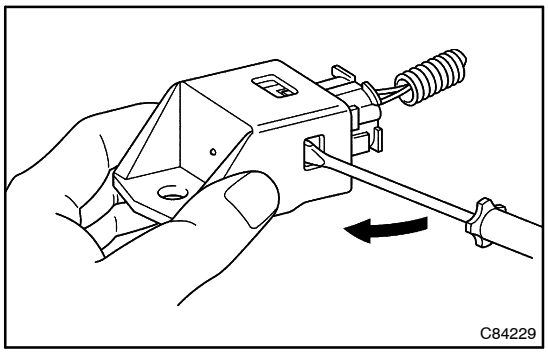

(b) Diconnect the connector from the airbag sensor front LH.

HINT:

Insert a screw driver in any of the three opening sections of the sensor and slide the sensor to disconnect it from the connector.

5. **INSPECT AIR BAG SENSOR FRONT LH (See page 60–9)**
6. **INSTALL AIR BAG SENSOR FRONT LH**

(a) Check that the ignition switch is OFF.

(b) Check that the battery negative (–) terminal is disconnected.

NOTICE:

Do not start the operation for 90 seconds after removing the terminal.

(c) Install the airbag sensor front LH with the bolt.

Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

(d) Connect the connector to the airbag sensor front LH.

(e) Check that no play is identified.

7. **INSPECT SRS WARNING LIGHT(See page 05–758)**