
600A7–02

REPLACEMENT

HINT:

COMPONENTS: See page 60–59

1. **PRECAUTION(See page 60–1)**
2. **SEPARATE BATTERY NEGATIVE TERMINAL(See page 60–1)**
3. **REMOVE FRONT DOOR SCUFF PLATE RH (See page 71–10)**
4. **REMOVE REAR DOOR SCUFF PLATE RH (See page 61–6)**
5. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH (See page 61–6)**
6. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH (See page 61–6)**
7. **REMOVE CENTER PILLAR GARNISH LOWER RH (See page 61–6)**
8. **REMOVE FRONT SEAT OUTER BELT ASSY RH (See page 61–6)**

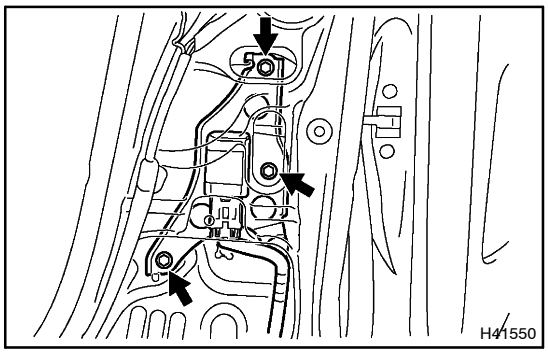

9. **REMOVE SIDE AIR BAG SENSOR ASSY RH**

(a) Disconnect the connector from the side airbag sensor assy RH.

(b) Remove the 3 bolts and side airbag sensor assy RH.

10. **INSPECT SIDE AIR BAG SENSOR ASSY RH (See page 60–9)**
11. **INSTALL SIDE AIR BAG SENSOR ASSY RH**

(a) Install the 3 bolts and side airbag sensor assy RH.
Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)

(b) Connect the side airbag sensor connector.

NOTICE:

- **Installation of the connector is done with the sensor assembly installed. Make sure the sensor assembly is installed with the specified torque.**
- **If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.**
- **When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.**
- **After installation, shake the sensor assembly to check that there is no looseness.**

12. INSTALL FRONT SEAT OUTER BELT ASSY RH

Torque:
Upper bolt: 8.5 N·m (87 kgf·cm, 75 in.·lbf)
Lower bolt: 42 N·m (420 kgf·cm, 31 ft·lbf)

13. INSPECT SRS WARNING LIGHT(See page 05–758)