
600A9–02

REPLACEMENT

HINT:

COMPNENTS: See page 60–62

1. **PRECAUTION(See page 60–1)**
2. **SEPARATE BATTERY NEGATIVE TERMINAL(See page 60–1)**
3. **REMOVE REAR SEAT CUSHION ASSY(See page 72–21)**
4. **REMOVE REAR SIDE SEAT BACK ASSY LH (See page 72–21)**

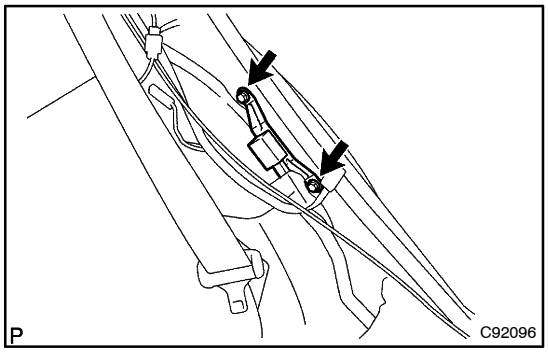

5. **REMOVE AIR BAG SENSOR REAR LH**

(a) Disconnect the connector of the airbag sensor rear LH.
(b) Remove the 2 bolts and the airbag sensor rear LH.

6. **INSTALL AIR BAG SENSOR REAR LH**

(a) Select a suitable bolt (See page 60–1).
(b) Install the airbag sensor rear LH with the 2 bolts.
Torque:
Property class 6T: 17.5 N·m (178 kgf·cm, 13 ft·lbf)
Property class 8T: 20 N·m (200 kgf·cm, 14 ft·lbf)
(c) Connect the connector of the airbag sensor rear LH.

NOTICE:

- **Installation of the connector is done with the sensor assembly installed. Make sure the sensor assembly is installed with the specified torque.**
- **If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.**
- **When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.**
- **After installation, shake the sensor assembly to check that there is no looseness.**

7. **INSPECT AIR BAG SENSOR REAR LH (See page 60–9)**
8. **INSTALL REAR SIDE SEAT BACK ASSY LH (See page 72–21)**
9. **INSPECT SRS WARNING LIGHT(See page 05–758)**