
600AB–02

REPLACEMENT

HINT:

COMPNENTS: See page 60–64

1. **PRECAUTION(See page 60–1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL(See page 60–1)**
3. **REMOVE FRONT SEAT TRACK COVER RH REAR INNER (POWER SEAT)**
4. **REMOVE FRONT SEAT TRACK COVER LH REAR INNER (POWER SEAT)**
5. **REMOVE SEAT TRACK COVER UPPER REAR (MANUAL SEAT)**
6. **REMOVE SEAT TRACK UPPER RAIL COVER RH (MANUAL SEAT)**
7. **REMOVE FRONT SEAT ASSY RH (RHD STEERING POSITION TYPE)**
8. **REMOVE FRONT SEAT ASSY LH (LHD STEERING POSITION TYPE)(See page 72–7)**

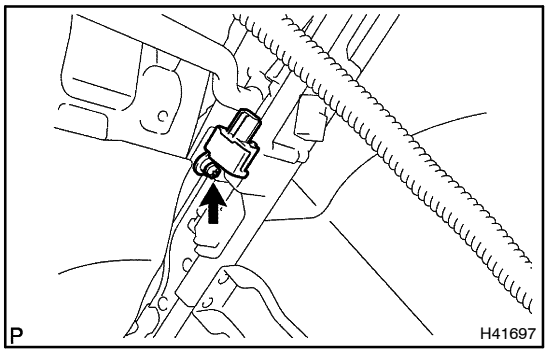

9. **REMOVE SEAT POSITION AIR BAG SENSOR**

(a) Disconnect the connector of the seat position airbag sensor.

(b) Using a torx socket wrench (T30), remove the torx screw and seat position airbag sensor.

10. **INSTALL SEAT POSITION AIR BAG SENSOR**

(a) Using a torx socket wrench (T30), install the seat position airbag sensor with the torx screw.
Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)

(b) Connect the connector of the seat position airbag sensor.

NOTICE:

- **Installation of the connector is done with the sensor assembly installed. Make sure the sensor assembly is installed with the specified torque.**
- **If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.**
- **When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.**
- **After installation, shake the sensor assembly to check that there is no looseness.**

11. **INSTALL FRONT SEAT ASSY RH (RHD STEERING POSITION TYPE)**
Torque: 36.8 N·m (375 kgf·cm, 27 ft·lbf)
12. **INSTALL FRONT SEAT ASSY LH (LHD STEERING POSITION TYPE)(See page 72–7)**
Torque: 36.8 N·m (375 kgf·cm, 27 ft·lbf)
13. **INSPECT SRS WARNING LIGHT(See page 05–758)**