
FOG LAMP ASSY LH

650C7-01

REPLACEMENT

1. **REMOVE ENGINE UNDER COVER LH**
(See page 76–2)

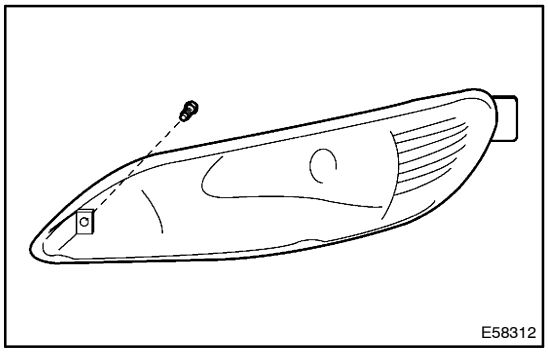

2. **REMOVE FOG LAMP ASSY LH**

(a) Detach clip and pull out the fog light assy LH forward.