
LICENSE PLATE LAMP ASSY

650CA–01

REPLACEMENT

1. **REMOVE LUGGAGE COMPARTMENT DOOR COVER**
   (See page 76–17)
2. **REMOVE LUGGAGE COMPARTMENT DOOR GARNISH SUB–ASSY OUTSIDE**
   (See page 76–17)

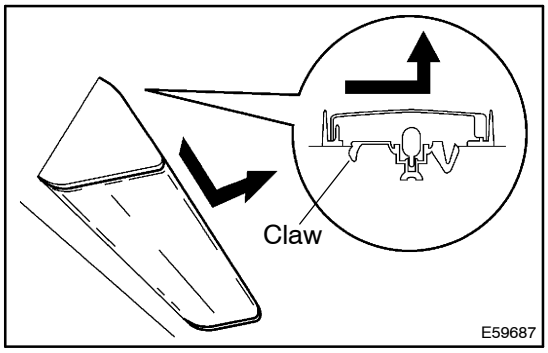

3. **REMOVE LICENSE PLATE LAMP ASSY**

(a) Pull the license plate light assy to the side of vehicle as shown in the illustration and release the claw,then disconnect the connector.