# WIPER RUBBER LH

6603M–02

## REPLACEMENT

### 1. REMOVE FR WIPER BLADE LH

(a) Remove the FR wiper blade LH from the front wiper arm LH.


**NOTICE:**

**Do not fold down the front wiper arm with the front wiper blade being removed from it.**

### 2. REMOVE WIPER RUBBER LH

(a) Remove the FR wiper rubber LH from the FR wiper blade LH.

(b) Remove the 2 wiper rubber backing plates from the wiper rubber LH.

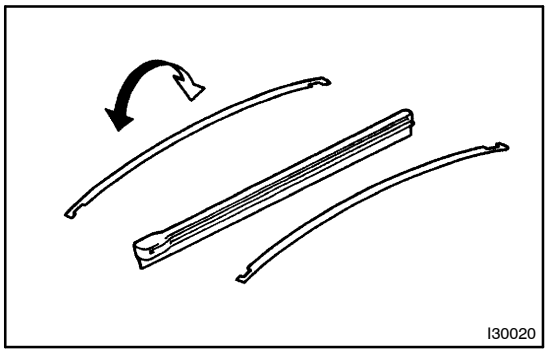



### 3. INSTALL WIPER RUBBER LH

(a) Install the 2 wiper rubber backing plates to the wiper rubber LH.

**NOTICE:**

**Be careful to observe and keep direction of curvature for correct replacement.**

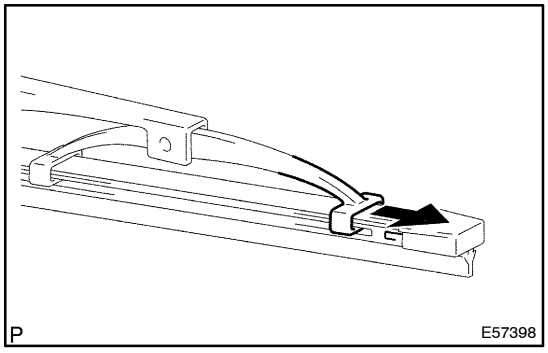


(b) Install the wiper rubber LH in the way that the head part (Longer side) of the wiper rubber faces the arm axle side.

**NOTICE:**

- **Push in the front wiper blade into the grooves of the wiper rubber to engage them completely.**
- **Put back the wiper arm of passenger side before driver side wiper arm is put back.**