FRONT NO.1 SPEAKER ASSY


6709J–01

REPLACEMENT

HINT:


COMPONENTS: See page 67–1

1. **REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSY**
   (See page 75–8)
2. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH**
   (See page 75–8)
3. **REMOVE FRONT DOOR INSIDE HANDLE BEZEL PLUG LH**
   (See page 75–8)
4. **REMOVE FRONT DOOR TRIM BOARD SUB–ASSY LH**
   (See page 75–8)

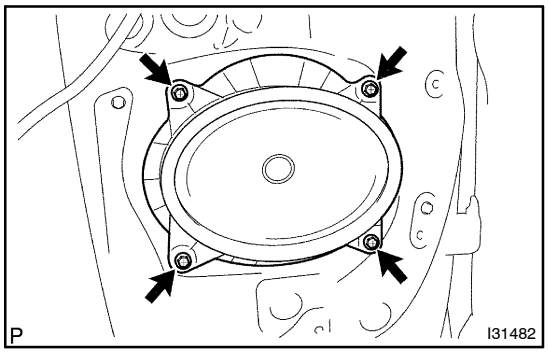

5. **REMOVE FRONT NO.1 SPEAKER ASSY**

(a) Disconnect the connector.
(b) Remove the 4 screws and front No.1 speaker assy.

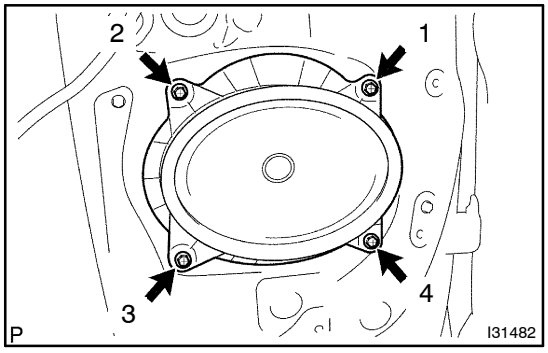

6. **INSTALL FRONT NO.1 SPEAKER ASSY**

(a) Install the front No.1 speaker assy with the 4 screws.

NOTICE:

Install them in the order shown in the illustration.

(b) Connect the connector.