# REAR SPEAKER ASSY

## REPLACEMENT


6709G–01

HINT:


COMPONENTS: See page 67–1

1. **REMOVE REAR SEAT CUSHION ASSY(See page 72–21)**
2. **REMOVE REAR SEAT BACK ASSY RH(See page 72–21)**
3. **REMOVE REAR SEAT BACK ASSY LH**
4. **REMOVE REAR SIDE SEAT BACK ASSY RH (See page 72–21)**
5. **REMOVE REAR SIDE SEAT BACK ASSY LH**
6. **REMOVE ROOF SIDE GARNISH INNER RH(W/O CURTAIN SHIELD AIR BAG) (See page 76–21)**
7. **REMOVE ROOF SIDE GARNISH INNER LH(W/O CURTAIN SHIELD AIR BAG)**
8. **REMOVE ROOF SIDE GARNISH INNER RH(W/ CURTAIN SHIELD AIR BAG) (See page 76–21)**
9. **REMOVE ROOF SIDE GARNISH INNER LH(W/ CURTAIN SHIELD AIR BAG)**
10. **REMOVE REAR SEAT SHOULDER BELT COVER RH (See page 61–13)**
11. **REMOVE PACKAGE TRAY TRIM PANEL ASSY**

(a) Pull the package tray trim panel assy upward to disengage 2 clips.
(b) Put the bezel and anchor part of the seat belt through the slit part.
(c) Pull it as shown in the illustration to disengage 5 claws.
(d) Disconnect the connector and remove the package tray trim panel assy.

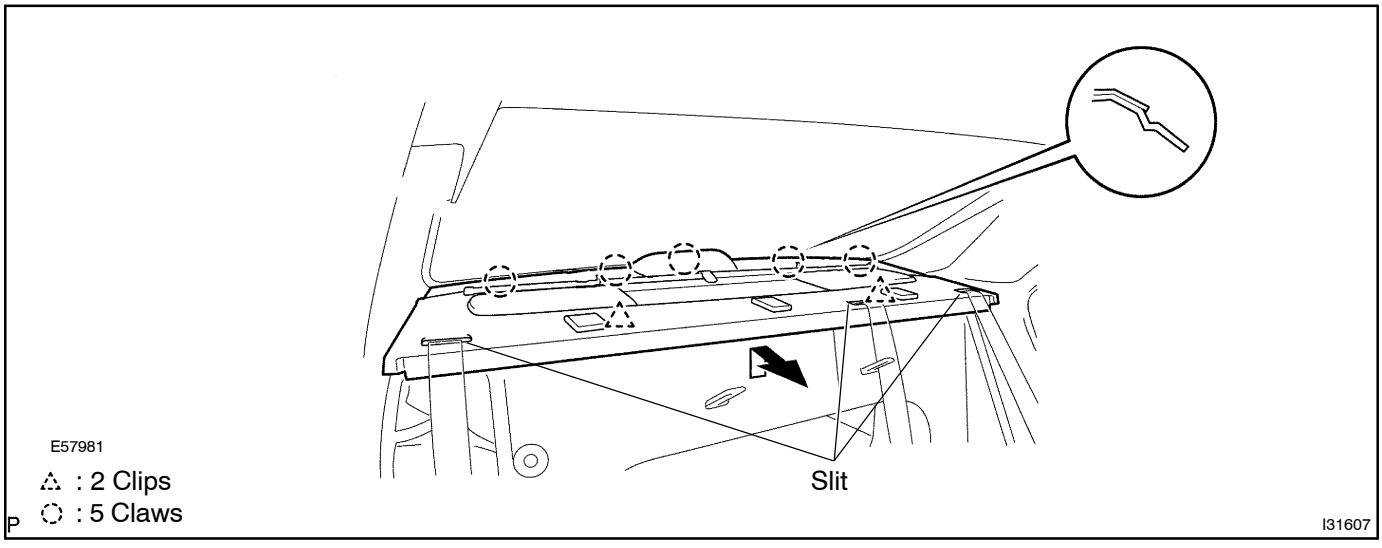


12. **REMOVE REAR SEAT 3 POINT TYPE BELT ASSY OUTER**
**(See page 61–13)**
13. **REMOVE REAR SEAT INNER W/CENTER BELT ASSY RH**
**(See page 61–13)**
14. **REMOVE REAR SEAT INNER W/CENTER BELT ASSY LH**
**(See page 61–13)**

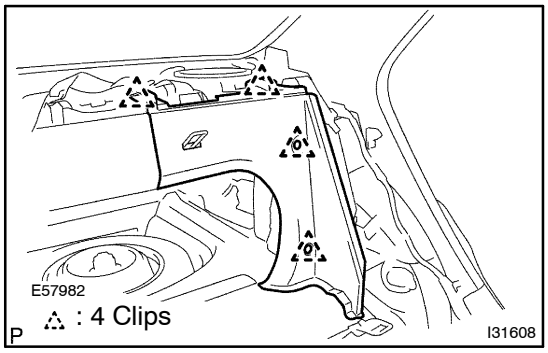



15. **REMOVE ROOM PARTITION BOARD LH**

(a) Disengage 4 clips and remove the room partition board LH.

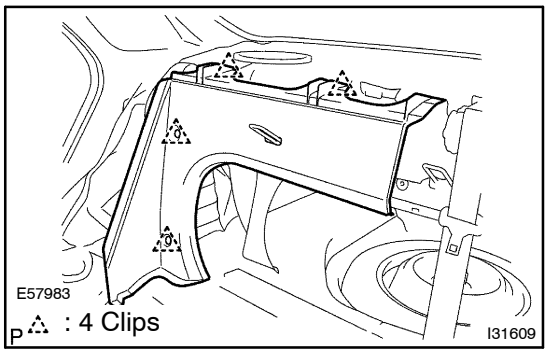



16. **REMOVE ROOM PARTITION BOARD RH**

(a) Disengage 4 clips and remove the room partition board RH.

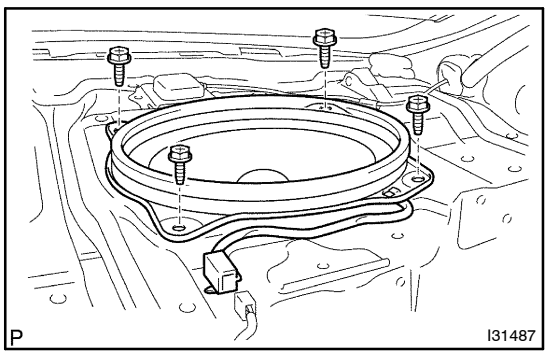


17. **REMOVE REAR SPEAKER ASSY**

(a) Disconnect the connector.
(b) Remove the 4 screws and rear speaker assy.

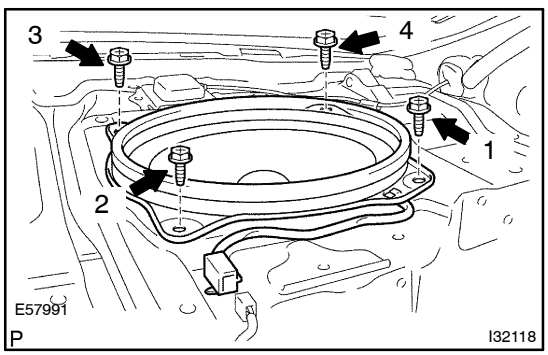


18. **INSTALL REAR SPEAKER ASSY**

(a) Install the rear speaker assy with the 4 screws.
**NOTICE:**
**Install them in the order shown in the illustration.**
(b) Connect the connector.

19. **INSTALL REAR SEAT INNER W/CENTER BELT ASSY LH**
    **(See page 61–13)**
20. **INSTALL REAR SEAT 3 POINT TYPE BELT ASSY OUTER**
    **(See page 61–13)**
21. **INSTALL REAR SEAT INNER W/CENTER BELT ASSY RH**
    **(See page 61–13)**
22. **INSTALL REAR SIDE SEAT BACK ASSY LH**
    **(See page 72–21)**
23. **INSTALL REAR SIDE SEAT BACK ASSY RH**
    **(See page 72–21)**
24. **INSTALL REAR SEAT BACK ASSY RH(See page 72–21)**
25. **INSTALL REAR SEAT BACK ASSY LH**