W/HOLDER ANTENNA ASSY

REPLACEMENT

6709H–01

HINT:

COMPONENTS: See page 67–1

1. REMOVE LUGGAGE COMPARTMENT FLOOR MAT


2. REMOVE SPARE WHEEL COVER ASSY

3. REMOVE LUGGAGE COMPARTMENT SIDE COVER SUB–ASSY RH

4. REMOVE LUGGAGE COMPARTMENT TRIM HOOK NO.1
(See page 76–5)


5. REMOVE REAR FLOOR FINISH PLATE
(See page 76–5)

6. REMOVE LUGGAGE COMPARTMENT TRIM COVER INNER RH
(See page 76–5)

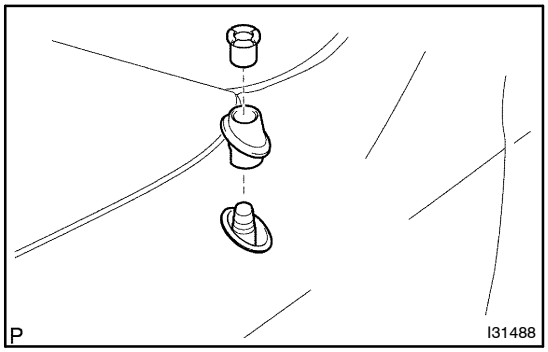


7. REMOVE W/HOLDER ANTENNA ASSY

(a) Remove the antenna nut and antenna ornament.

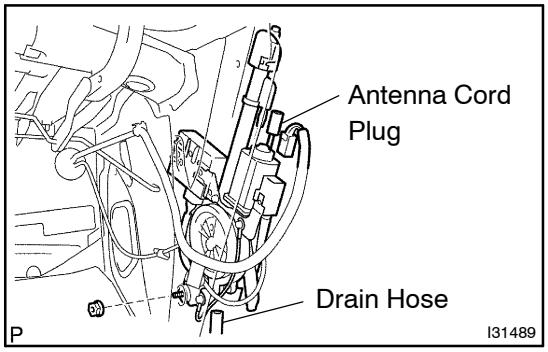

(b) Disconnect the connector and antenna cord plug from the w/ holder antenna assy.
(c) Disconnect the drain hose.
(d) Remove the nut and w/ holder antenna assy.

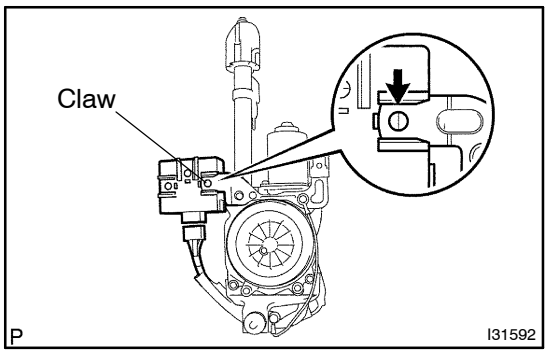

8. REMOVE MOTOR ANTENNA CONTROL RELAY

(a) Disconnect the connector.
(b) Release the claw, remove the motor antenna control relay from the w/ holder antenna assy.